


## Spare Parts

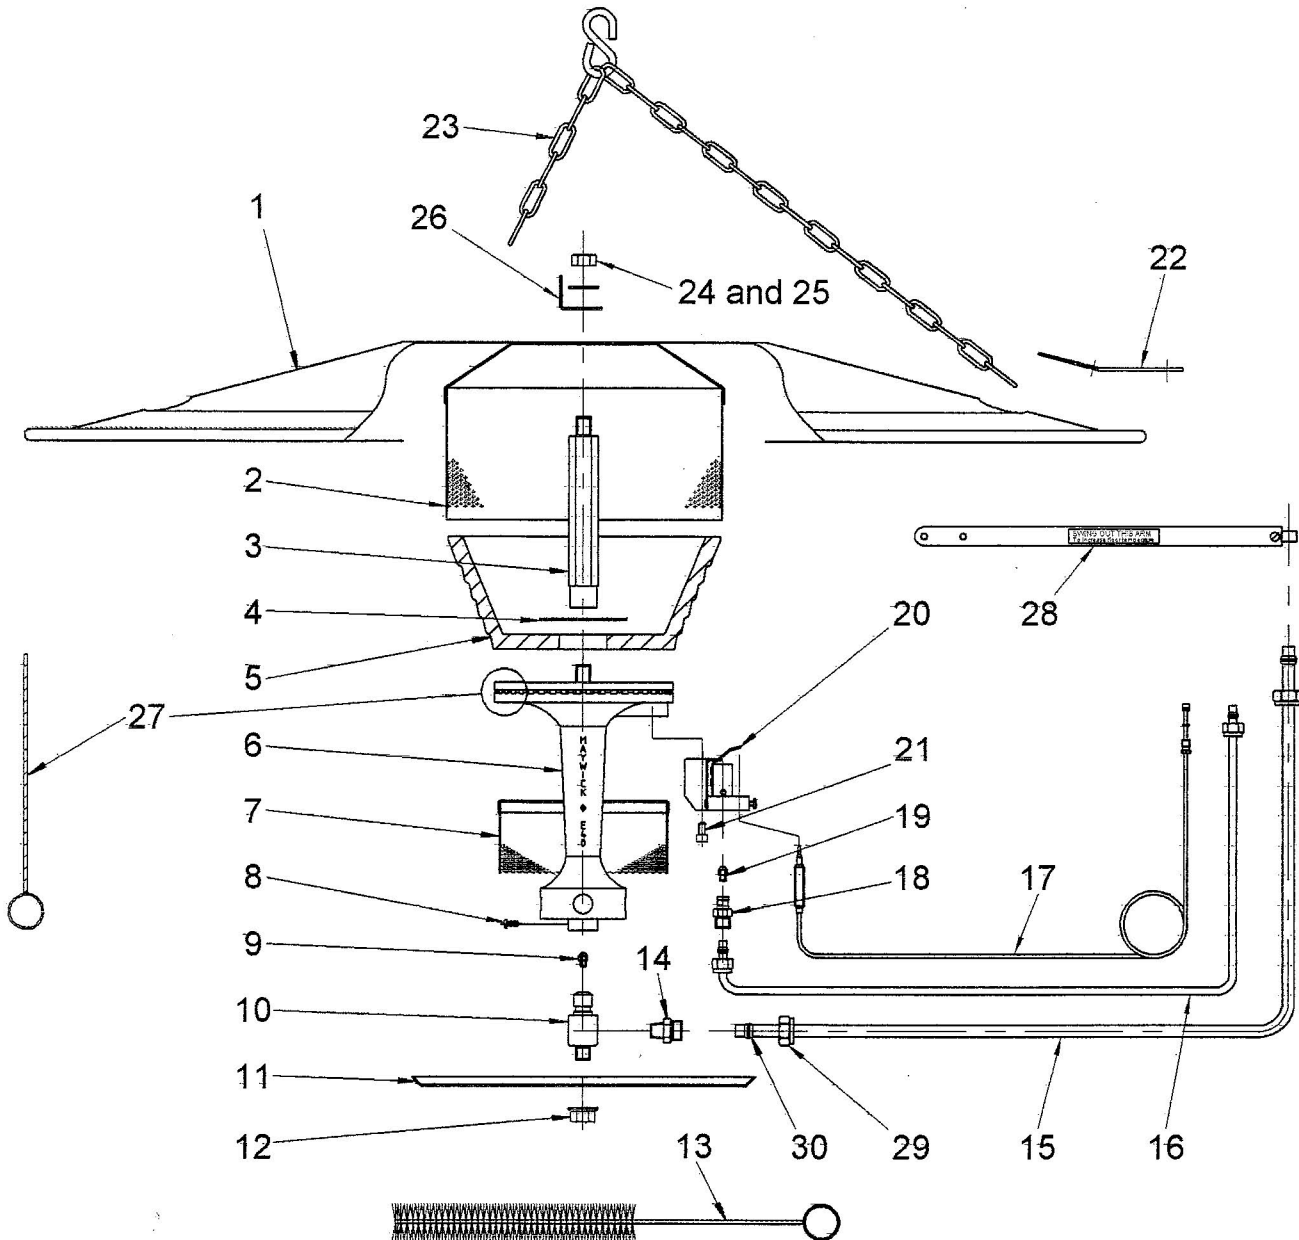

## Controls

### "F" Control

Flame Failure Only - See Page 10  
Brooder Part No. LPG - 1174 NatGas - 1175

### "MX" Control

Modulating High / Low Thermostat - See Page 10  
Brooder Part No. LPG - 1176 NatGas - 1177

### "SX" Control

Individual Control, Self Contained Thermostat - See Page 11  
Brooder Part No. LPG - 1179 NatGas - 1180

### "V" Control

Zone Control By 24V Solenoid Valve - See Page 12  
Brooder Part No. LPG - 1172 NatGas - 1173