


OWNERS MANUAL


£4.00

YOU MUST READ THIS MANUAL BEFORE INSTALLING AND/OR USING THIS HEATER

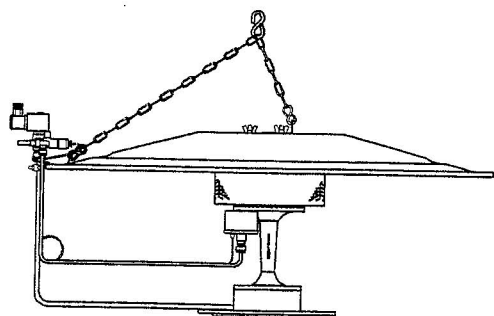

E40

BROODER
OPERATION &
MAINTENANCE

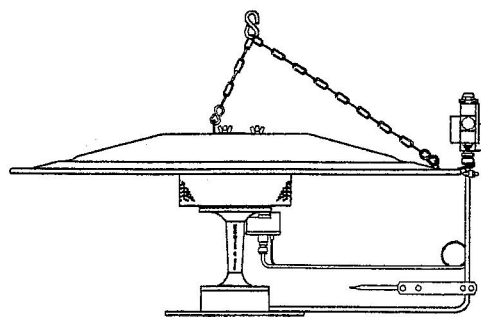

DESIGNED & MANUFACTURED BY
MAYWICK LTD - ENGLAND

WARNING

Maywick heaters are fully tested before they leave our factory, however like any gas heaters, they are always vulnerable to sudden failure resulting in possible livestock loss. To guard against this Maywick strongly recommend you install temperature monitoring equipment that will trigger an alarm should there be a heater failure which would give you time to check the system before any great livestock loss. Read these installation, operating and maintenance instructions thoroughly before installing or servicing this equipment as improper installation, adjustment, alteration, service or maintenance can easily lead to livestock loss, property damage, injury or death.

Clearances to combustibles; Dimensions taken from the canopy rim;

To Floor 54cm (21") To Sides 46cm (18") Above 90cm (36")

Manifold/Operating Gas Pressures; LPG (Propane) = 37mbar (15" WC) Natural = 20mbar (8" WC)

Not to be used at altitudes above 2,500 feet

An approved isolating gas valve must be provided by the installer

FOR YOUR SAFETY

If you smell gas:

1. Open windows.
2. Don't touch electrical switches.
3. Extinguish any open flames.
4. Immediately call your gas supplier.

FOR YOUR SAFETY

Do not store or use flammable vapours and liquids in the vicinity of this appliance. Exhaust fans must be operating on appropriate cycle when heating a building to avoid high concentrations of carbon monoxide.

IN THE U.K. INSTALLATION OF A MAYWICK GAS BROODER MUST CONFORM WITH

- A) HEALTH AND SAFETY "THE GAS SAFETY (INSTALLATION AND USE) REGULATIONS 1998.
B) THE CONTROL OF SUBSTANCES HAZARDOUS TO HEALTH REGULATIONS 1997.

Note; Retain these instructions for future reference.

www.maywick.co.uk

Jan 2012