

Wireless Keypad Instructions.

Default Set up Password – 11

To change the password:

- Press 1 then 'open' – 5 beeps
- Hold down stop (stop first) and 'open' – one constant beep
- Input old password and press 'open' – one short beep
- Input new password (up to 8 digits), press 'open' repeat step twice – one beep indicates successful password change.