




WELCOME GUIDE

SmartClipper 2C | OPC-CL30C |

*Please read the instructions carefully before using the product and keep the user manual in a safe and accessible location for future reference.

Package Contents

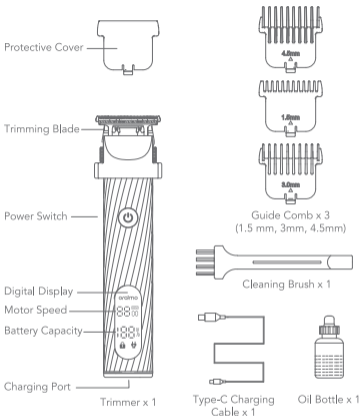

Specifications

Input: DC 5V=1A
Rated Power: 5W
Charging Time: 2 hours

Run Time: Up to 2.5 hours
Battery Capacity: 1200mAh
*oraimo Lab test results

Charge Your Trimmer


Fully charge the trimmer before you use it for the first time or after not using it for a long period (When charging, please use a power adapter with an output voltage not higher than 5V.


 : on charge indicator.

How to Use

Adjust the Angle of Blade Head

One hand hold the trimmer, and use the other hand to press the blade head to toggle between the two available angles, choosing the one that best suits your grooming needs.

 Please ensure the protective cover is installed before adjusting the blade angle, and be mindful not to touch the blade or switch to prevent injury or unintentional activation.

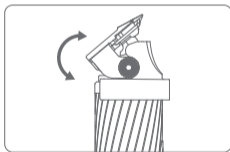


Remove the Protective Cover

Before usage, please remove the blade protective cover. Simply apply gentle pressure to the latch, and it will release the protective cover.

Install and the Guided Comb

Make sure the trimmer is turned off before you install or remove the guide comb.

You can install different sizes of guide combs to adjust the trimming length according to your needs.

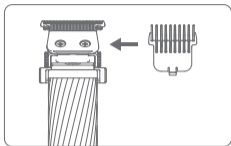

Turning on/off

Press the power switch to turn on/off the trimmer.

Trimming Your Body

After adjusting the trimming angle and attaching the guide comb, switching on the trimmer to start trim. Gently glide the blade end through your skin using slow, stroking motions.

💡 Care should be taken to avoid scratching your skin.

Use the Travel Lock Function

To Activate the Travel Lock: Press and hold the power button for 3 seconds. The device will enter travel lock mode, and the lock symbol will flash 3 times on the display screen to confirm activation.

🔒 : To Deactivate the Travel Lock: While in travel lock mode, press and hold the power button for another 3 seconds to release the travel lock. The device will then turn on automatically.

Trouble Shooting

Fault	Possible Causes	Solutions
Trimmer does not cut well	Blade head is worn or damaged	Contact customer service
	Trimmer is clogged with hair	Thoroughly clean the trimmer
	Low battery level	Plug the trimmer into the charger to charge it
Trimmer does not turn on when pressing the power switch	Button does not function	Contact customer service
	The battery is drained	Please charge the trimmer fully before use
	The travel lock function has been activated	Please unlock the travel lock function
Digital Display do not light up	Circuit failure	Contact customer service
Unable to charge the battery	Trimmer is damaged	Contact customer service
	Charging cable is damaged	Replace the charging cable, if you are unable to resolve the issue, please contact customer service
Runs for less than 90 minutes on a full charge	Battery error	Contact customer service

For more information, please visit:



www.oraimo.com



@oraimo accessories