orgimo

WELCOME GUIDE

* Please read the instructions carefully before using the product and keep the user manual in a safe place for future reference.

SmartBlender

——— OH-B1

CONTENTS

Instruction Manual ·····
Safety Precautions
Identifications of Parts
Before Using Your Blender
Using Your Blender
Handy Blending Hints
Using your Dry Grinder5
Care and Cleaning
Package Contents 7
Warranty Certificate 7
Warranty Terms & Conditions

Instruction Manual

This product for household use only.

For your safety using and maintaining, please read this instruction manual carefully before using and keep it for future reference.

Safety Precautions

- · Ensure fingers are kept well away from the blades when in use.
- · Do not blend hot ingredients.
- · Do not operate when the jar is empty.
- · Always operate on a flat surface.
- · Do not operate for more than 2 minutes at a time, STOP AND COOL FOR 2 MINUTES THEN RESUME
- Read all instructions carefully, even if you are familiar with appliance.
- \cdot To protect against the risk of electric shock DO NOT IMMERSE the appliance, cord set or the plug in water or any other liquid.
- · To clean, wipe exterior with a damp cloth.
- · Close supervision is necessary when any appliance is operated near children. The appliance must not be used by children.
- \cdot The appliance must always be unplugged when is not used and before cleaning or maintenance.
- · Avoid contacting moving parts. Keep hands, hair, clothing as well as spatulas and other utensils away during operation to prevent injury and/or damage to the appliance.
- \cdot Do not operate any appliance with a damaged cord or plug, or if appliance malfunctions or damaged in any manner.
- · Handle sharp blender blades carefully to avoid cuts and injuries.
- · This appliance is designed for indoor use only.
- \cdot Do not allow cord to hang over edge of table or counter, or touch hot surfaces.
- \cdot Do not place unit on or near a gas or electric burner or a heated oven.
- \cdot Do not use appliance for mixing paints or other flammable liquids or in a location contaminated with flammable gases or vapour.

0

- \cdot Do not leave the appliance unattended. Do not use the appliance for other than its intended use.
- \cdot Do not use abrasive cleaners or scouring pad on appliance.
- Ensure switch off the unit after each use. Make sure the motor stops completely before disassembled or open the lid.
- The glass jar can not heating by microwave oven, and do not wash with warm water more than 50 degrees
- \cdot If the supply cord is damaged, it must be replaced by the manufacturer or service agent or a similarly qualified person in order to avoid a hazard.
- \cdot This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- · Children should be supervised to ensure that they do not play with the appliance.



If the supply cord is damaged, it must be replaced by the manufacture or Service agent or a similarly person in order to avoid a hazard. Ensure the above safety precautions are understood.

Identifications of Parts

A. Inner lid

B. Lid

C. Jar(1.5 Litre)

D. Removable blade assembly


E. Motor base F. Speed control knob

G. Non slip feet

H. Dry container

I. Grinder base (with grinder blade)

The picture is for reference only

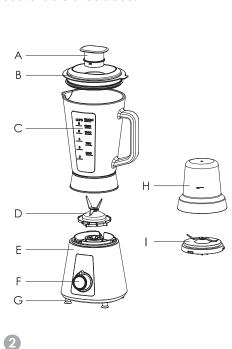

Before Using Your Blender

Important: Always ensure your blender is unplugged from the power outlet before fitting or removing the blade assembly. Always handle the blade assembly with caution, as the blades are extremely sharp.


To assemble the blade system, operate as follows:



1. Place the silicone rubber seal over the blade assembly as shown in figure.1.



2. Place the blade assembly into the base of blender jar, let the grooves of inner lid set into the rid of blade assembly, and then rotate counterclockwise as shown in figure.2.

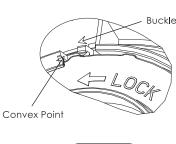

3. Ensure that the blade assembly is firmly in the place, as shown in figure.3.

Fig.2

Fig.3

4. Plug the power cord into the power outlet.



Using Your Blender

- 1. Place the blender jar on the motor base and rotate clockwise (figure 4).
- 2. Remove the lid or the inner lid from the blender jar, select the ingredients into the jar. Place the lid with the inner lid back onto the blender jar. Do not exceed the maximum indicated level-1.5 Litre.
- 3. Place desired blending speed 1, 2 or PULSE.
- 4. After you have completed blending, turn the speed control knob to the "0" position.

Crushing Ice Operation:

1. If you want to crushing ice, no more than 10 pieces of ice (the size about 25 x 25 x 25mm) put into the blender jar, and then turn the speed control knob to the "P" position hold on 1-3 seconds, continual $8\sim12$ times. In order to avoid the lid released, please use the other hand to hold the lid during this operation.

(Fig.4

2. If you want to mix the ice and water, no more than 10 pieces of ice (the size about 25 x 25 x 25mm), and then turn the Speed control knob to the "2" position, let the machine work for 1~2 minutes.

Handy Blending Hints

A brief whirl in the blender will rescue a lumpy gravy, or an eggs-based sauce that has separated.

- · Food items for blending should be cut into cubes (approximately 2-3cm), this will assist in achieving an even result.
- \cdot Never fill the blender jar above the maximum level indication.
- · When pureeing fruit or vegetable, cooked or raw, cut into small pieces to
- · When blending a variety of ingredients together, blend the liquids first, then add dry ingredients.
- · Always ensure stones are removed from fruit and bones from meat as these can harm the blades.
- Do not process hot liquids in your blender. Allows to cool before processing.



Using your Dry Grinder

You can use the grinder to grind and chop ingredients such as peppercorns, sesame seeds, rice, wheat, coconut flesh nuts (shelled), coffee beans, dried soy beans, dried peas, cheese, breadcrumbs.etc.

But not suitable for chopping very hard ingredients like nutmeg and ice cubes.

 
Preparing the Grinder for Use:

1. Reverse the dry grinder container, fill in right amount food(Fig.5).

2. Screw the grinder blade unit clockwise onto the grinder container (Fig. 6).

3. Turn the assembled grinder upside down and screw it clockwise onto the motor









- 4. Ensure the main power is cut off before match the container on the right base. 5. Plug the power cord select speed by pressing the control-button. If refined grinding is required, please touch the pulse button.
- 6. After completing blending, turn off the machine, take off the container form

Caution for Dry Grinder:

- 1. Put the raw material under the max volume.
- 2. When start operate the dry grinder, it need to press the lid avoid to happen
- 3. When operate dry grinder more then 30 seconds, it should be stop 10-15 minutes to cool down to indoor temperature, then go on to processing cycles.

Warning for Grinder Blade:

- 1. Make sure the blade unit is securely fastened to the grinder container before you assemble onto the motor unit.
- 2. Do not touch the cutting edges of the grinder blade unit when you handle or clean it. They are very sharp and you could easily cut your fingers on them.
- 3. Never use the dry grinding to grind very hard ingredients such as nutmeg and ice cubes.



Care and Cleaning

Quick Cleaning Method:

- 1. Half fill the blender with water and a small amount of detergent.
- 2. Press the "Pulse" function and hold for 1-2 seconds and release. Repeat 3-4 times. 3. Then remove the jar and rinse it under running water.

For Thorough Cleaning:

- 1. Unscrew the blade assembly from the jar by turning the bottom of the blade assembly in clockwise direction.
- 2. Remove the rubber seal from the blade assembly.
- 3. Wash the blender lid, inner lid, rubber seal, blade assembly and blender jar in soapy water.

Caution: Take care when cleaning the blades as they are extremely sharp.

Note: Do not clean any part of the blender in the dishwasher.

Use a damp, soft sponge with detergent and wipe over the motor base. Note: Never immerse the motor base in water.

Storage

To Clean the Motor Base:

Need to be dried before storage, and store in a cool and dry place.

Correct Disposal of This Product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for envitonmental safe recycling.

