

IMPORTANT SAFETY INSTRUCTIONS

When using this product, basic precautions should always be followed, including the following:

Danger:

- 1. This product and accessories are not toys, please put them out of the reach of children to avoid danger. This appliance may be used by children of more than 8 years of age, persons with physical, sensory or mental capabilities or inexperienced persons only if they have been previously trained in using it in a safe manner, and only if they have been informed of the dangers the product can cause. Children may not play with the appliance. Children may not clean or carry out and maintenance on the appliance without adult supervision.
- 2. Do not plug or unplug the power cord with wet hands to prevent the power cord from touching the liquid.
- 3. Please make sure the body, adapter and power cord are dry and do not use it in the bathroom.
- 4. This product has a built-in rechargeable battery, do not throw it into the fire, or charge, use or place it at a high temperature.
- 5. Do not use when the power cord or adapter is damaged, or when it fits loosely with the power socket.

 
The symbol on the right indicates that the body cannot be cleaned under the faucet.



Warning: please keep the body of the trimmer dry.

- 7. Please make sure that the power cord and products are kept dry and do not rinse the trimmer with water.
- 8. Before connecting the product to charge, make sure that the voltage marked on the product matches the local power supply voltage.
- 9. If the power cord is damaged or lost, please purchase the original model from the manufacturer or after-sales maintenance department to replace it.
- 10. Please use and store the product at a temperature between 5 °C and 35 °C.
- 11. Do not use broken or damaged trimming combs.
- 12. Do not disassemble the body to replace the battery.
- 13. Do not knock or drop this product. If the product is damaged by collision or fall, please stop using it.
- 14. People with unsound limbs, mental disorders and lack of relevant experience and knowledge (including children) should use it under the supervision and guidance of their guardians.
- 15. Do not use it on small animals.

PACKAGE CONTENTS

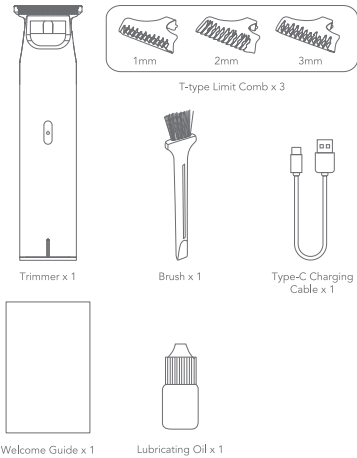

SPECIFICATIONS

Input Voltage: 5V=1A
Rated Power: 5W
Charging Time: 2 hours
Full Working Time: 2.5 hours

STEPS FOR USING

In order to get the best shaving and hair cut effect, please keep your hair clean and smooth before trimming.
Press the on/off button to turn on the trimmer with low speed, press button again to adjust it into high speed mode. Hold the comb with the angled edge against your beard or hair and guide the trimmer against the direction of the hair growth.

To avoid clogging the comb with hair, clean it from time to time with a brush.

SWITCH ON/OFF & TRAVEL LOCK

- 1. Normal start-up steps:
Press the switch button and machine starts to work, it comes with low-speed mode with white indication. Press button again to enter high-speed mode with red indication. Switch off the trimmer by pressing the switch button again.
- 2. The trimmer is equipped with a travel lock function to prevent it from accidentally starting in the luggage.
Lock travel lock: press the switch button for 5 seconds, the white LED indicator will be flashing, then goes out, and enters the travel lock state.
Release the travel lock: when the travel lock is locked, the white LED indicator will be flashing, then goes out, and then exits travel lock state.


USING GUIDED COMB

Push one end of the guided comb toward the tool body. If you finish using the guided comb, you can gently pull the comb outwards with one hand to remove it. Please keep hair clean and smooth before haircut.

CHARGE YOUR TRIMMER

Trimmer Status Indicator		Status
	Flashing red	Low battery
	Steady blue	Being charged
	Steady white	Fully charged

 ⚡ When the power supply is insufficient and it cannot be turned on, it can be directly connected to the power cord. If it is not in use for a long time, please be fully charged at least once every half a year, and it can be used for about 150 minutes in the full power state.

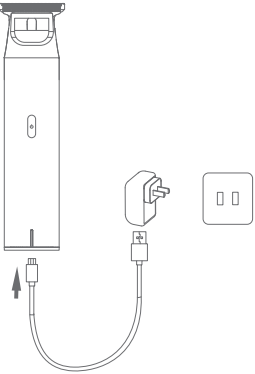

For more information, please visit:



 
www.oraimo.com



@oraimo_accessories

CLEANING AND CARE


- 1. Disconnect the power supply and turn off the product before cleaning. Remove the attached (if using the T-type comb).
- 2. Gently brush away any remaining hairs on the blades with the included cleaning brush.

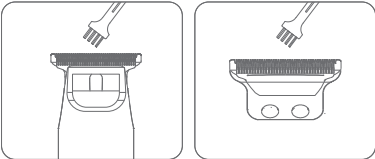

- 3. Clean the blades with warm water and a neutral detergent, avoiding caustic cleaners. Thoroughly dry the blades with a clean cloth to prevent rusting.



 - 4. To improve blade performance, apply a drop of lubricant to the top left, center, and right of the head if necessary and switch the clipper on and off several times.

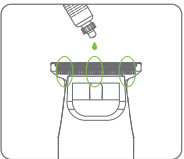

- 5. Reinstall the blades and parts according to the instructions. Store the trimmer in a dry, cool place away from direct sunlight and moisture.

Warning: this machine is non-waterproof, please do not rinse the body of the shaving machine with water.

oraimo
smart accessories

Smart Trimmer 2
OPC-TR12

WELCOME GUIDE