



 
WELCOME GUIDE

* Please read the instructions carefully before using the product and keep the user manual in a safe and accessible location for future reference.

SmartClipper Plus

| OCL-210 |
Cordless Hair Clipper

Package Contents

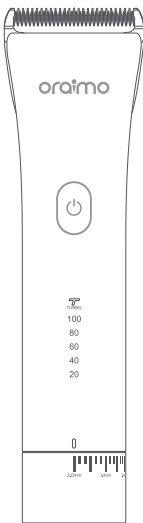

Hair Clipper x 1



3mm



6mm



9mm



12mm

 
Hair Clipper Guard x 4



Cleaning Brush X 1



Oil Bottle X 1




Type-C Charging Cable x 1



Welcome Guide x 1

 Product Overview

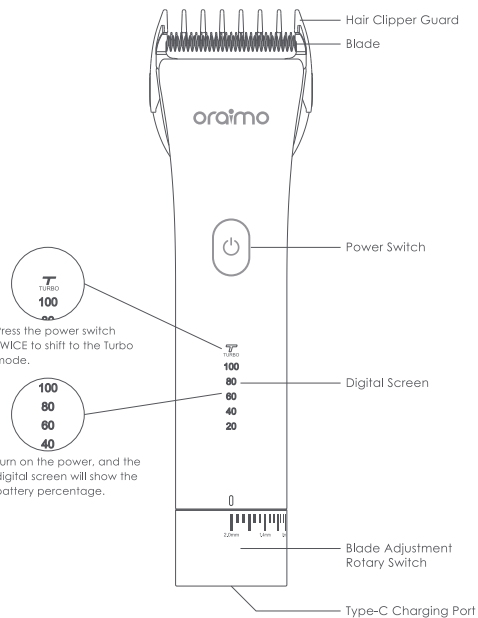


Using Instructions

Hair Clipping


1. Press the power switch to turn on the clipper.
2. Hold the clipper with the blades pointing downwards and the tip of the hair clipper guard lightly touching your scalp.
3. Run the clippers in the opposite direction to your hair growth, and in a straight or circuitous way.

Adjust the Blades Length

Turn the blade adjustment rotary switch at the bottom to adjust the length of the blades, for achieving various degrees of clipping. If you need to remove and replace the installed blades, please turn the rotary switch to 2.0 mm.

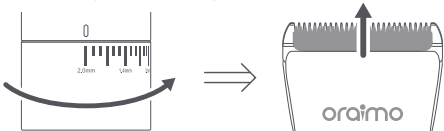

Turn On Mode Turbo

Press the power switch twice to shift to the Turbo mode  (the second gear).

* Rotation speed:

- first gear: 5500RPM.
- second gear: 6000RPM.

Specifications

Size: 166.7mm*45.2mm*33.5mm; Product Material: PC+ABS; Lithium-ion polymer;
Rated Voltage: 5V; Rated Power: 5W; Blade Material: Stainless steel;
Charging Time: 2 hours; Full Run Time: Longer than 2 hours;


* oraimo Lab test result

Made in China



Charge the Clipper

Digital Screen	Status
Flashing Blue Figure	Charging
Steady Blue Figure	Current Battery Percentage

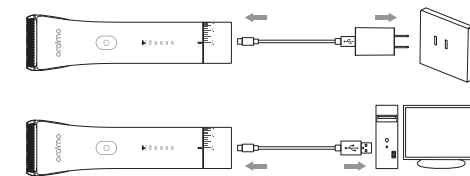 

* Charge your clipper with the attached Type-C cable.

Maintenance

1. Shut down the clipper and disconnect the power supply before cleaning, take out the attached clipper guard (if the guard was used), and gently remove the remaining hair on the blade with the provided cleaning brush.
2. After cleaning, place a drop of lubricating oil on the top left, middle, and right of the blade head, and switch the clipper on and off several times, then wipe the surface of the outer blade head to keep it sharp.

Safety Instructions

When using this product, basic precautions should always be followed, including the following:

Warnings:

1. This product and its accessories are not toys. Please put them out of the reach of children to avoid danger.
2. Do not use a wet hand to plug and pull the power cord, keep the power cord away from sticky liquid or other liquid.
3. Make sure the hair clipper's body and charging cable are dry. Do not use them in the bathroom or rinse the hair clipper with water.
4. The charging and storage temperature of the clipper should be between 5°C and 35°C.
5. If any abnormality or malfunction of the product is found, stop using it immediately. Please deal with the problem according to the type of malfunction and if necessary, take it to oraimo maintenance department for repair.
6. Do not use a broken or damaged trimming comb.
7. Persons with physical disabilities, mental disorders should use this product under the supervision and guidance of their guardians.
8. Please do not use it on animals.



www.oraimo.com



oraimo accessories

Keep Exploring