# WELCOME GUIDE

\* Please read the instructions carefully before using the product and keep the user manual in a safe place for future reference.




### Important Safety Instructions

When using this product, basic precautions should always be followed. including the following:

- 1. This product and its accessories are not toys. Please put them out of the reach of children to avoid danger.
- 2. Do not use wet hand to plug and pull the power cord, keep the power cord away from sticky liquid or other liquid.
- 3. Make sure to keep the hair clipper's body adapter and power cord dry. Do not use it in bathroom.
- 4. This product contains a built-in rechargeable battery. Do not drop the battery into fire and never charge, use or place it at the place where temperature is high.
- 5. Do not use the hair clipper when its power cord or adapter is damaged or when the connection between it and the electric outlet is loose. Warning: Please keep the hair clipper's body dry.

- 1. Ensure to keep the power cord and this product dry. Do not rinse the hair dipper with water.
- 2. Before connecting the power cord and charging, make sure that the voltage marked on the body of this product matches the local power supply voltage
- 3. If the power cord is damaged or lost, please purchase the original model from the manufacturer or after-sales maintenance department for replacement.
- 4. Please use and store this product at a place where the temperature is between5°C and35°C
- 5. When any abnormality or malfunction of this product is found stop using it immediately. Please deal with the problem according to the type of malfunction and if necessary, take it to the maintenance department of our company for repair.
- 6. Do not use broken or damaged trimming comb.
- 7. Do not dissemble the hair clippers body for battery replacement.
- 8. Do not immerse this product in water or any liquid.
- 9. Do not knock down or drop this product. If it is damaged due to collision or fall please stop using it
- 10. Persons with physical disabilities, mental disorders or lack of relevant experience and knowledge(including children) should use this product under the supervision and guidance of their guardians.
- 11. Please do not use it on animals.
- 12. Before taking out the battery, the motor must be power off.

# Package Contents

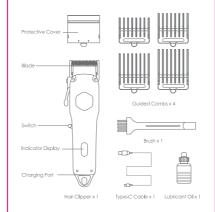

# Specifications

Made in China

Size: 195\*54\*42.5mm; Product Material: ABS+PC: Input Voltage: 5V=2A; Rated Power: 10W; Blade Material: Stainless Steel; Charging Time: 2 hours: Full Working Time: Up to 3 hours



### Using Instructions

When cutting hair, take off blade protective cover, push on the switch and then move the blade head slowly against the direction of hair growth, and move in a straight and circuitous way.

# Charging the Clipper

- 1. To charge the product, please insert the small plug of the adapter into the plug at the bottom of the product, then insert the power adapter into the power socket.
- 2. Connect the power supply, and the display shows the number, which indicates charaina status.
- 3. Full charging takes 2 hours and charging is completed when the display shows "100".
- 4. The clipper can be used for 3 hours when it's fully charged. When the digital display is ≤ 20 with flashing, which indicates that the power is insufficient and the machine needs to be charged in time.







#### Maintenance

- 1. Be sure to disconnect the power supply and shut down the product before cleaning, take out the attached comb (if the comb is used), and gently brush the remaining hair on the blade with the provided cleaning brush.
- 2. After cleaning, in order to obtain better effect of the blade, if necessary, drop a drop of Jubricating oil on the top left, middle and right of the blade head, and switch on the clipper for several times. Wipe the surface of the outer blade head, so as to keep it sharp, rotate it lightly and prevent
- 3. When the clipper is not in use, put the protective cover on the blade to prevent damage to the blade.





Keep Exploring