

# **WELCOME GUIDE**

\* Please read the instructions carefully before using the product and keep the user manual in a safe place for future reference.



# **Package Contents**









Travel Pouch x 1


Cleaning Brush x 1

Oil Bottle x 1

Type-C Charging Cable x 1

----

# **Product Overview**

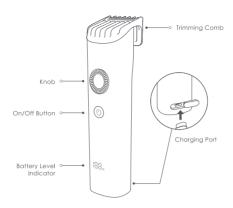

**Note:** illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

# **Specifications**


\*oraimo Lab test result

Input Voltage: DC 5V=1A; Rated Power: 5W;
IP Rating: IPX7; Comb Settings: 10 Lengths;
Battery Capacity: 800mAh;
Charging Time: 2hrs; Runtime Time: 1.5hrs

# Assembly & Disassembly


### Installing & removing trimming comb

- To install the trimming comb, gently press it into the slot, clips first, until it clicks into place.
- Hold the comb close to the blade and pull it upwards from the front with your fingers to remove it.

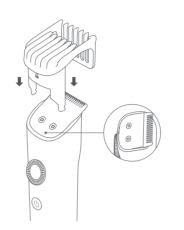

## Installing & removing the blade head

- To install the blade head, align clip (A) of the blade head to slot (B) of the trimmer, then firmly press the blade head until it soons into place.
- Use your thumb to push and remove the blade head.

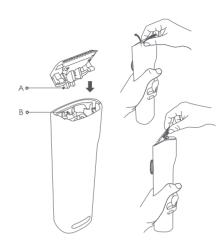


# How to Use

### Turning On/Off

Press the on/off button to turn on/off the trimmer.

### Trimmer length setting

Turn off the trimmer and turn the knob to adjust the trimming comb to the desired length.

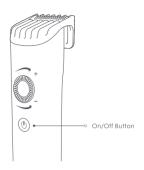

#### Trimmer

After adjusting the trimming comb to the desired length, turn on the trimmer, and gently move the blade end through your beard in slow, stroking motions.

Note: You can shave off your beard entirely by not attaching a comb. However, care should be taken to avoid scratching your skin.

# The Beard Styles











# Indicator Description

Trimmer x 1

Battery Level Indicator	Status
Blinking	Low battery
Blinks 3 times	Battery depleted
Blinking	Being charged
Lit	Normal operation

This trimmer supports plug-and-play. If it does not turn on due to a low battery, it can be quick charged for 5 minutes to provide sufficient power for one trimming session. It takes about 120 minutes to fully charge the battery. The trimmer can be used for about 90 minutes when fully charged. If it is not being used for a long time, make sure to fully charge it at least once every six months.

# Care & Maintenance

- Before cleaning the trimmer, make sure it is turned off and not being charged.
- Remove the trimming comb and blade head and use the provided cleaning brush to clean out the blade head slot and blade teeth.
- The trimming comb, blade head, trimmer, and trimming comb slot can be rinsed with water.
- 4. Water on or near the charging port should be dried before starting.
- After drying, it is recommended to add lubricating oil to maintain smooth operation before attaching the blade head to the trimmer.
- For optimal trimming performance, lubricate the blade teeth regularly
   with 1 or 2 drops of lubrication oil as illustrated below. Do not over
   lubricate. Wipe away any excess oil from the product surface.



### Note:

- The trimmer's service life depends on the frequency of use and whether it is properly maintained.
- Do not use compressed gas, steel wool, abrasive cleaning agents, corrosive liquids (such as gasoline or acetone) and sharp objects to clean this trimmer

# Precautions

- 1. The blade head needs to be correctly installed before using.
- Please ensure that the Type-C charging port is completely dry before connecting it to the adapter.
   Do not wrap the charging cable around the trimmer to avoid
- damage to the cable.

  4. Install, remove or adjust the trimming comb and blade head while
- the trimmer is turned off.

  5. The trimmer needs to be turned off and unplugged while cleaning.
- 6. Do not press the blade teeth into the skin to prevent injuries.
- 7. Stop using the trimmer immediately if it is faulty. Refer to the troubleshooting section of this manual for assistance or, if necessary, contact customer service to request a repair.
- Stop using the trimmer's charging cable immediately if it is damaged or stopped functioning normally.
- Fully charge the trimmer at least once every six months, if it has not been used for a long time.
- 10. People (including children) who lack the relevant experience and knowledge, or capacity for civil conduct may not use, clean, or maintain the device without adult supervision and guidance.

# Note:

- 1. It is recommended to use oraimo charger with this trimmer.
- 2. Turn the trimming comb to the lowest position and enable the travel lock when transporting the trimmer.
   3.1t is recommended to charge, use, and store this trimmer at
- temperatures between 5°C to 35°C.
- 4. It is normal for water to drip from the gaps of the outer casing when cleaning the trimmer. Standing it upright can help moisture evaporate from the gaps more quickly.
- For hygiene reasons, it is recommended that this trimmer is only used by one person.
- 6. It is recommended to store the trimmer in a cool dry place.
- Make sure the trimmer is dry before packing it in order to prevent damage to other articles in your luggage.

# Trouble Shooting

rault	Possible Causes	Solutions
Trimmer does not cut well	Blade head is worn or damaged	Immediately replace it with a genuine blade head
	Trimmer is clogged with hair	Thoroughly clean the trimmer
	Low battery level	Plug the trimmer into the charger to charge it
Trimmer does not turn on when pressing the on/off button	Button does not function	Contact customer service
Indicators do not light up	Circuit failure	Contact customer service
Unable to charge the battery	Trimmer is damaged	Contact customer service
	Charging cable is damaged	Replace the charging cable, if you are unable to resolve the issue, please contact customer service
Runs for less than 90 minutes on a full charge	Battery error	Contact customer service
Battery level indicator displays E1	Motor stalling protection	Check whether there is a foreign object stuck on the shaft of the motor, if you are unable to resolve the issue, please contact customer service
Battery level indicator displays E2	Battery overheat protection	Check whether the charging environment is obnormal (charge in an environment of between 5°C and 35°C), if you are unable to resolve the issue, please contact customer service
Battery level indicator displays E3	Battery cold protection	
Battery level indicator displays E4	Charging overvoltage protection	Use a suitable charger (5V/2A), if you are unable to resolve the issue, please contact customer service.

Bassible Causes Salutions

# WEEE Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste.

ment by handing over your was te equipment to a designated collection point for the recycling of was te electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Pleas e contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.