



WELCOME GUIDE

SwiftDry | OHD-550N

*Please read the instructions carefully before using the product and keep the user manual in a safe place for future reference.

PRODUCT SAFETY AND USING INSTRUCTION

Please observe the following safety precautions, to reduce failure, electric shock, injury, fire, death, as well as the risk of damage to equipment or property.

1. Never use this equipment near water. Otherwise may cause electric shock or injury.
2. Please unplug the power cord when you after using in bathroom, because near to water still very danger even the switch turn off and power off. Otherwise may cause electric shock or fire caused by short circuit.
3. Never use this equipment near bathtub, shower, wash basin or other vessels which fill water. Otherwise may cause electric shock.
4. Never use the wet hand to plug or unplug the power cord. Otherwise may cause electric shock or injury.
5. Never use the equipment with wet hand. Otherwise may cause electric shock or fire.
6. Never use the equipment when you find the plug damaged or body case with high temperature. Otherwise may cause scald electric shock or fire.
7. Please do not far away from under the state of the switch power supply. Otherwise may cause fire.
8. Please do not block or inset other thing in inlet or outlet of hair dryer. Otherwise may cause scald, electric shock or fire.
9. Please do not twine power cord on body case and handle when you not use the equipments. Otherwise may cause scald, electric shock or fire.
10. Please store the equipment in the place that infants and children can not touch. Never let infants and children to play with the equipment. Never use the equipment with infants. Otherwise may cause scald, electric shock or injury.
11. Never repair, disassemble and refit the hair dryer. Otherwise may cause fire or bad operation to cause injury. Please contact with the after-sales service centre when you need repair the hair dryer.
12. When you find any abnormal or fault, please stop using the equipment and unplug the power cord immediately. Otherwise may cause electric shock, injury or fire.

Examples for abnormal or fault:

* There is no air out when the equipment operating

* Operating often stop

* Inside of equipment is red and have smoke

Please contact with the after-sales service centre immediately.

13. Please along and hold the plug plastic to pull out the power cord, and please do not tear the power cord. Otherwise may cause to break the power cord then may cause scald, electric shock or fire.

14. Inset the plug in full and only use 220V~ vltage. Otherwise may cause electric shock or fire.

 
15. Never use the hair dryer when you see spark around the outlet when the switch on hot wind position. And clean the dust from air inlet and air outlet. Otherwise may cause scald or fire.

16. Please set the switch on [O] position and unplug the power cord after you used the equipment. Otherwise may cause scald or fire.

17. The product must be installed in a place that is not accessible in the bath or shower and shall be installed so that the handheld is completely straightened and still not touchable in the bathing and shower. Otherwise may cause any accident or injury.

18. We suggest you to fix a rated leakage current action does not exceed 30 mA residual current devices (RCD) in your bathroom power supply system to protect your safety. Please consult the location of the RCD supplier. Otherwise, it may cause any accident or injury.
19. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

PRODUCT OVERVIEW

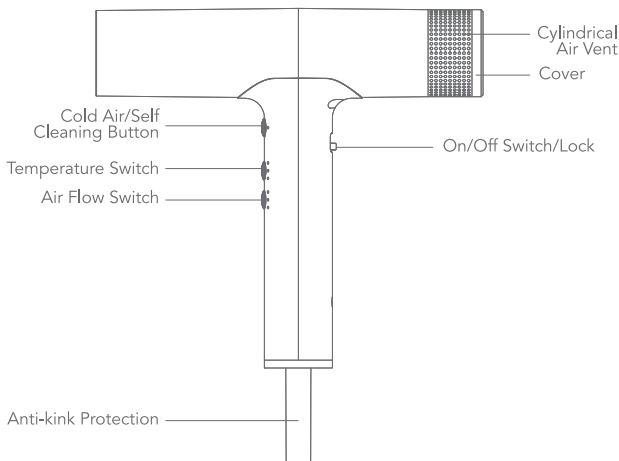

USAGE

- When using the appliance for the first time, a slight odor may occur—this is normal and not a defect. Ensure proper ventilation during use.
- Before drying, towel-dry your hair thoroughly and ensure your hands are completely dry. Insert the power plug into an easily accessible socket.
- The hairdryer can be used with or without the styling nozzle. To attach the nozzle, position it as desired, push it onto the appliance, and turn it clockwise to secure.

Risk of Burns



ON
OFF

The appliance and styling nozzle become very hot during use. Allow them to cool before removing the nozzle—turn it counterclockwise and pull it off. Do not cover the hairdryer, fan, or air intake opening, and ensure hair, fingers, or lint do not block airflow.




ON
OFF

To turn on, slide the On/Off switch to ON. To turn off, slide it to OFF—the device will run cool air for 2 seconds to cool down.

When first turned on, both temperature and airflow are set to the lowest levels, indicated by the lowest LED. If changed, the last used settings will be remembered for the next use.

Adjusting Airflow & Temperature



Push the top of the air flow  or temperature  switch to increase the air flow or temperature.




Push the bottom of the air flow  or temperature  switch to reduce the air flow or temperature.

The air flow and temperature have three settings each. One indicator light is lit up for the lowest setting, two for the medium setting, and three for the highest setting.

Locking Function



ON
OFF


To prevent the temperature and air flow settings from being changed accidentally while drying your hair, slide the ON/OFF switch to .



ON
OFF

If you wish to change the settings again, slide the On/Off switch back to ON.

Styling Nozzle

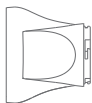


The styling nozzle allows you to dry specific sections of your hair. Also can use it to direct the air jet as you wish.

Diffuser



A diffuser gives you more control over your hair. It is kinder and gentler to your hair than conventional blow drying. Diffused heat is perfect for enhancing natural curls and waves or creating some extra volume. Always be careful as the diffuser may become hot during use.

 Anti-Scalding Comb



Stainless steel brush inside, straighten smooth scalp massage. Always be careful as the Comb may become hot during use.

Cool Air Button


To cool your hair down quickly you can use the cold air/self-cleaning button. Draw a strand of hair over a round brush, for example, and direct the styling nozzle at it. Then press the cold air/self-cleaning button. The indicator light lights up. To switch off the cold air, press the button again.

After Use

To switch the appliance off, slide the On/Off switch to OFF. After use, leave the appliance on a heat-resistant surface to cool down. If the appliance overheats, for example if the air intake opening is covered, the thermal control switch will automatically switch the device off. The indicator lights on the temperature switch and the air flow switch will flash slowly. Switch the appliance off and leave it to cool down before switching it on again.


CLEANING

The appliance and the styling nozzle become very hot during use. Leave them to cool down before cleaning them.

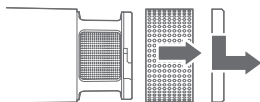

1. Unplug the mains plug from the power socket.
2. Wipe down the casing and the styling nozzle with a slightly damp cloth.
3. Rotate the cover anti-clockwise and take it off.
4. Remove the cylindrical air vent.
5. Wipe the inside and outside of both parts using a slightly damp cloth.


Allow the appliance to dry fully after cleaning it before putting it back together and using it again. There is a risk of fatal electric shock!

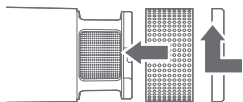

6. Place the cylindrical air vent back onto the appliance and rotate the cover clock-wise to secure it in place.


Self-Cleaning Function

The appliance comes with a self-cleaning function to clean the internal components.

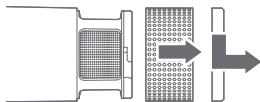

1. Rotate the cover anti-clockwise and take it off.
2. Remove the cylindrical air vent.
3. Briefly switch the appliance on and off (reset).
4. Then press the cold air/self-cleaning button for five seconds.

The motor runs backwards for approx. 15 seconds. The other buttons will be disabled while you do this.

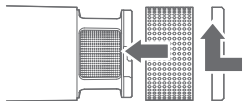

5. Once the motor has stopped, place the cylindrical air vent back onto the appliance and rotate the cover clockwise to secure it in place.

STORAGE

- Allow the appliance to cool down completely before putting it away.
- To avoid damaging the mains cable, do not wind it around the hairdryer.
- Keep the appliance out of the reach of children.
- Store the appliance in a dry place.

DISPOSAL

This product and its packaging have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the packaging at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Appliances marked with this symbol must not be disposed of along with normal household refuse! You are legally obliged to dispose of appliances separately from household waste. Electronic appliances contain hazardous substances and if stored or disposed of improperly, may cause harm to health and the environment.

BASIC PRODUCT SPECIFICATIONS

Product Name: Hair Dryer

Product Model: OHD-550N

Product Material: PC+ABS

Rated Voltage: 220-240V~/50-60Hz

Rated Power: 1700-2000W

ERROR DETECTION

The hair dryer features an error recognition function. If this function detects problems, the appliance will not switch on or will stop working. Depending on the type of error, the LEDs may signal the following:

Fault Code Modes	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6
Hardware Over Current Protection	Slow Blink	Off	Off	Off	Off	Off
NTC Overworking Range	Off	Slow Blink	Off	Off	Off	Off
Firmware Protection	Slow Blink	Slow Blink	Off	Off	Off	Off
Overvoltage (Upper Limit)	Slow Blink	Slow Blink	Slow Blink	Off	Off	Off
Undervoltage (Lower Limit)	Slow Blink	Slow Blink	Slow Blink	Slow Blink	Off	Off
Motor Blocking Protection	Slow Blink	Slow Blink	Slow Blink	Slow Blink	Slow Blink	Off
Phase loss	Slow Blink	Slow Blink	Slow Blink	Slow Blink	Slow Blink	Slow Blink
Other	Slow Blink	Off	Slow Blink	Off	Slow Blink	Off

SCAN & DOWNLOAD



oraimo store

Easily Smart, Simply Best



Authentic Products



Fast Delivery



Best Price



Prompt Service