



WELCOME GUIDE

SmartTrimmer 2 Pro | OTR-280 |

*Please read the instructions carefully before using the product and keep the user manual in a safe and accessible location for future reference.

Package Contents



Trimmer x 1



Guide Comb x 3
(1.5mm, 3mm, 4.5mm)



Cleaning Brush x 1



Type-C Charging
Cable x 1



Oil Bottle x 1

Specifications

Input: DC 5V=1A

Rated Power: 5W

Charging Time: 2 hours

Run Time: Up to 2.5 hours

Battery Capacity: 1200mAh

*oraimo Lab test results

Charge Your Trimmer

Fully charge the trimmer before you use it for the first time or after not using it for a long period (When charging, please use a power adapter with an output voltage not higher than 5V.)


🔌: When the digital display shows this indicator icon, it means the trimmer is on charge.

How to Use

Adjust the Angle of the Blade Head

One hand hold the trimmer, and use the other hand to press the blade head to toggle between the two available angles, choosing the one that best suits your grooming needs.

💡 Please ensure the protective cover is installed before adjusting the blade angle, and be mindful not to touch the blade or switch to prevent injury or unintentional activation.

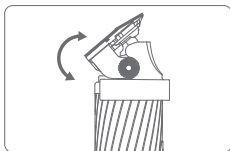


Remove the Protective Cover

Before usage, please remove the blade protective cover. Simply apply gentle pressure to the latch, and it will release the protective cover.

Install and the Guided Comb

Make sure the trimmer is turned off before you install or remove the guide comb.

You can install different sizes of guide combs to adjust the trimming length according to your needs.

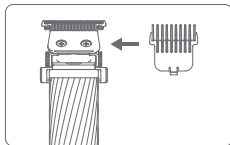

Turn on/off

Press the power switch to turn on/off the trimmer.

Trim Your Body

After adjusting the trimming angle and attaching the guide comb, switching on the trimmer to start trim. Gently glide the blade end through your skin using slow, stroking motions.

💡 Care should be taken to avoid scratching your skin.

To Activate the Travel Lock: Press and hold the power button for 3 seconds. The device will enter travel lock mode, and the lock symbol(🔒) will flash 3 times on the display screen to confirm activation.

To Deactivate the Travel Lock: While in travel lock mode, press and hold the power button for another 3 seconds to release the travel lock. The device will then turn on automatically.

Trouble Shooting

Fault	Possible Causes	Solutions
Trimmer does not cut well	Blade head is worn or damaged	Contact customer service
	Trimmer is clogged with hair	Thoroughly clean the trimmer
	Low battery level	Plug the trimmer into the charger to charge it
Trimmer does not turn on when pressing the power switch	Button does not function	Contact customer service
	The battery is drained	Please charge the trimmer fully before use
	The travel lock function has been activated	Please deactivate the travel lock function
Digital display do not light up	Circuit failure	Contact customer service
Unable to charge the battery	Trimmer is damaged	Contact customer service
	Charging cable is damaged	Replace the charging cable, if you are unable to resolve the issue, please contact customer service
Runs for less than 90 minutes on a full charge	Battery error	Contact customer service

Cleaning & Maintenance

1. Power Off and Disassemble:

Turn off the power and unplug the device, leaving the blade section only.

2. Brush Away Hair:

Use the cleaning brush to gently remove any hair from the trimmer head and the gaps between the body and the trimmer head.

3. Deep Clean the Trimmer Head:

Use a screwdriver (not included) to unscrew the two side screws and remove the trimmer head and torsional spring. Clean the inside of the body with the cleaning brush. Rinse the trimmer head and spring with water, dry thoroughly, and reassemble in order using the screwdriver.

4. Avoid Water Exposure:

Do not wipe the entire trimmer with a wet cloth to prevent damage to the electronic components.

Note:

Always detach the trimmer head for cleaning. Do not rinse the body with water, as it can damage the internal parts and make the trimmer unusable.

Safety Instruction

1. Before connecting to the adapter, ensure the Type-C charging port is completely dry.
2. Avoid wrapping the charging cable around the trimmer to prevent cable damage.
3. Install, remove, or adjust the trimming comb and blade head while the trimmer is turned off.
4. Turn off and unplug the trimmer before cleaning.
5. To prevent injuries, avoid pressing the blade teeth into the skin.
6. Immediately stop using the trimmer if it malfunctions. Consult the troubleshooting section or contact customer service for assistance.
7. Stop using the trimmer's charging cable if it is damaged or malfunctioning.
8. Fully charge the trimmer at least once every six months if it has not been used for an extended period.
9. Individuals (including children) lacking relevant experience, knowledge, or civil conduct should not use, clean, or maintain the device without adult supervision and guidance.

Notes:

1. It is recommended to use the oraimo charger to charge this trimmer.
2. Install the protective cover when transporting the trimmer.
3. Charge, use, and store the trimmer within temperatures ranging from 5°C to 35°C.
4. For hygiene purposes, it's recommended that only one person use this trimmer.
5. Store the trimmer in a cool, dry place.
6. Ensure the trimmer is dry before packing to prevent damage to other items in your luggage.



www.oraimo.com



@oraimo_accessories