

oraimo
smart accessories

WELCOME GUIDE

* For safety issue, the product remains low capacity during shipping. Please fully charge the product before initial use!

Smart✂️Clipper

Cleaning and Maintenance

Warning: This product is non-waterproof. Do not rinse the hair clipper's body with water.

1. Before using this product, the razor and the cutter tooth shall be lubricated by the lubricant oil provided by the manufacturer.



2. Before cleaning, please turn off the power and remove the plug of the power adapter from the power socket. Remove the trimming comb and dismantle the razor. When dismantling the razor hold out against the cutter tooth of the razor with your thumb and then apply force according to the direction of arrow.



3. Please use the special cleaning brush to brush off the hair at the slot of the razor.



Important Safety Instructions

When using this product, basic precautions should always be followed, including the following:

Danger:

1. This product and its accessories are not toys. Please put them out of the reach of children to avoid danger.
 2. Do not use wet hand to plug and pull the power cord, keep the power cord away from sticky liquid or other liquid.
 3. Make sure to keep the shaver's body, adapter and power cord dry. Do not use it in bathroom.
 4. This product contains a built-in rechargeable battery. Do not drop the battery into fire and never charge, use or place it at the place where temperature is high.
 5. Do not use the shaver when its power cord or adapter is damaged or when the connection between it and the electric outlet is loose.
- The symbol on the right indicates that the shaver's body cannot be cleaned under a running tap.

Warning: Please keep the shaver's body dry.




Warning:


1. Ensure to keep the power cord and this product dry. Do not clean the shaver with water.
2. Before connecting the power cord and charging, make sure that the voltage marked on the body of this product matches the local power supply voltage.
3. If the power cord is damaged or lost, please purchase the original model from the manufacturer or after-sales maintenance department for replacement.
4. Please use and store this product at a place where the temperature is between 5°C and 35°C.
5. When any abnormality or malfunction of this product is found stop using it immediately. Please deal with the problem according to the type of malfunction and if necessary, take it to the maintenance department of our company for repair.
6. Do not press this product too hard on your lips or any other part of your face and do not directly contact your scar or damaged skin with the razor net.
7. Do not disassemble the shaver's body for battery replacement.
8. Do not immerse this product in water or any liquid.

Please read this Guide carefully
before using the product

Package Contents

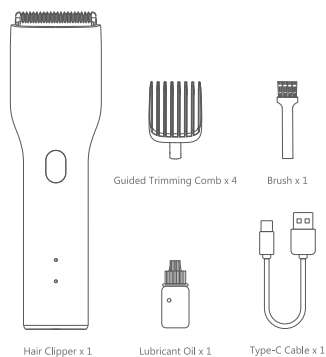

Product Features

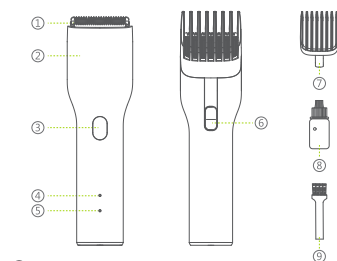

- ① Razor
- ② Body
- ③ On/Off
- ④ Power on
- ⑤ Power level
- ⑥ Guided trimming comb button
- ⑦ Guided trimming comb
- ⑧ Lubricant oil
- ⑨ Power cord

Specifications

Model: OPC-CL10
Rated Voltage: 5V
Rated Power: 5W
Charging Time: 1.5 hour

Steps for Using



Step 1
Assemble trimming comb:
Push one end of the trimming comb toward the tool body. Adjust the trimming comb to corresponding dimensions to cut hair.



Step 2
Choose cutting position of trimming comb:
There are 7 cutting positions for keeping hair length with the length from 3mm to 21mm.



Step 3
Trim the hair on the top of the head and sides:
Hold the trimming comb in hand make the bottom of the comb always in contact with the scalp and move it slowly forward in the opposite direction of hair growth, push and shave hair repeatedly from front to back. It is recommended that the hair around the fontanel shall be kept for 3-month-old baby.



Step 4
Trim the hair at the back of the head and sideburns:
Push and shave the hair repeatedly from the bottom to the top until the hair at the back of the head and sideburns is cut to appropriate length.




Step 5
Remove trimming comb:
If you finish using the trimming comb, you can press the button of the trimming comb and then gently pull the trimming comb outwards with one hand to remove the trimming comb. Please keep hair clean and smooth before haircut.

9. Do not knock down or drop this product. If it is damaged due to collision or fall, please stop using it.
10. Persons with physical disabilities, mental disorders or lack of relevant experience and knowledge (including children) should use this product under the supervision and guidance of their guardians.
11. Please do not use it on animals.
12. Before taking out the battery, the motor must be power off.

Charge Your Hair Clipper

Hair Clipper Status Indicator		Status
	Flashing and blinking	Being charged
	Steady light	Fully charged

* Tips: When the battery is empty and the hair clipper cannot be turned on, it can be used by directly connecting the hair clipper to the power supply.

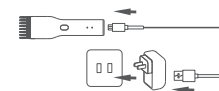

Battery Removal

1. Open the rear cover with a slotted screwdriver.
2. Use a screwdriver to unscrew the screw on the hair clipper.
3. Use a cross screwdriver to unscrew the two screws on the circuit board and take out the circuit board.
4. Cut off the electricity contact piece on the battery, take out the battery and dispose it properly.



Prize



Unscrew



Unscrew



Cut