



WELCOME GUIDE

UltraTrim | OTS-230 |

*Please read the instructions carefully before using the product and keep the user manual in a safe and accessible location for future reference.

SAFETY PRECAUTIONS

When using this product, basic precautions should always be followed, including the following:

Danger

1. This product and its accessories are not toys. Please put them out of the reach of children to avoid danger.
2. Do not use wet hands to plug in or unplug the power cord. Keep the power cord away from sticky substances or other liquids.
3. Make sure to keep the product's body, adapter, and power cord dry. Do not use it in the bathroom.
4. This product contains a built-in rechargeable battery. Do not throw the battery into fire, and never charge, use, or store it in high-temperature environments.
5. Do not use the product when its power cord or adapter is damaged or when the connection between it and the electric outlet is loose.

Warning: Keep the appliance dry.

Warning

1. Ensure that the power cord are dry.
2. Before connecting the power cord and charging, make sure that the voltage marked on the body of this product matches the local power supply voltage.
3. If the power cord is damaged or lost, please purchase the original model from the manufacturer or after-sales maintenance department for replacement.
4. It is recommended to charge, use, and store this appliance at temperatures between 5°C to 35°C.
5. If any abnormality or malfunction is found, stop using it immediately. Please deal with the problem according to the type of malfunction and if necessary, take it to the maintenance department of our company for repair.
6. Do not use broken or damaged trimming comb.
7. Do not disassemble the hair clipper's body for battery replacement.
8. Do not immerse this product in water or any liquid.
9. Do not knock down or drop this product. If it is damaged due to collision or fall, please stop using it.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Please do not use it on animals.

12. Before taking out the battery, the motor must be turned off..
13. Cleaning and user maintenance shall not be made by children without supervision.
14. Children should be supervised to ensure that they do not play with the appliance.
15. When charging, make sure to use a charger of 5V==1A
16. Do not charge this product for extended periods of time while leaving it unattended, and do not charge it longer than 24 hours.
17. This appliance contains a built-in lithium-ion battery. Do not disassemble, impact, crush, or throw the battery into fire. Stop using the product if the battery is severely swollen.
18. Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.
19. Before charging, make sure that the product body, especially the charging ports, are dry.
20. Before removing the battery, make sure the battery is depleted. You can make the product work until it stops automatically to drain the battery.

PRODUCT SPECIFICATIONS

Rated Input: 5V==1A

Blade Material: Stainless Steel

Working Time: 150 Mins



Waterproof Rating: IPX7

*oraimo Lab test results

Important Information About IPX7 Waterproofing

1. The device can withstand immersion in static water at a depth of 1 meter for 30 minutes under normal temperature and pressure conditions, without water damage or affecting normal functionality.
2. Waterproof does not mean resistance to drops or chemical corrosion (e.g., cosmetics, detergents). Please avoid using the device in such scenarios.
3. Only the body of the device is waterproof; the charging port is not waterproof. Please ensure the charging port is dry before charging.


PRODUCT OVERVIEW

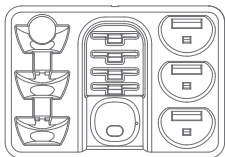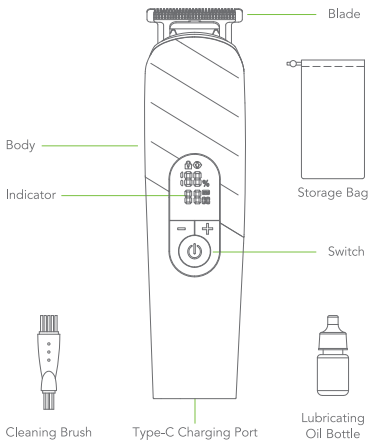

Storage Base



 USB Charging Cable



Guide Combs For Hair Clipper



Guide Combs For Precision U Blade



Guide Combs For Baby Trimmer



Hair Clipper



 
Precision U Blade



Design Trimmer



Guide Comb For Body Trimmer



Body Trimmer



Nose and Ear Trimmer



Baby Trimmer

Hair Clipper

For uniform cutting, allow the trimmer to cut its way through the hair. Select the desired guide comb, with 5 combs (1/3/6/9/12mm). Start by combing the hair in its natural direction. Place the largest guide comb onto your trimmer and begin trimming the sides from the bottom upwards. Hold the trimmer lightly against the hair, with the teeth of the guide comb pointing up but flat against the head. Slowly lift the trimmer up and outward through the hair, cutting only a small amount at a time. Repeat around the sides and back of the head.

Precision U Blade

Two adjustable combs for precision trimmer.

Hold the groomer with the cutting blade facing you. Start with the edge of your beard/mustache line. With the cutting blades resting lightly against your skin, use slow movements to create the beard/mustache line. Attach a beard guard to the full-size hair trimmer to trim your beard and mustache evenly. The hair length settings are indicated on the guards, and the settings correspond to the remaining hair length after trimming.

Design Trimmer

Use the design trimmer to create fine lines and contours around your facial style, close to the skin.

Hold the design trimming head perpendicular to the skin and move the trimming head upwards or downwards with gentle pressure.

Nose and Ear Trimmer

Attach the nose, ear, and eyebrow attachment.

Insert the groomer's cutting unit gently into the nostril or ear.

Gently move the groomer in and out of the nostril or ear, and at the same time rotate the groomer. Avoid inserting the cutting unit more than 6mm into your nostril.

Body Trimmer

The body trimmer is designed for body trimming, cutting body and back hair efficiently, with or without the guide comb. When using the guide comb, you can switch between different length settings (3mm / 6mm / 9mm) by changing the positioning slots.

Baby Trimmer

For baby hair trimming, the safe blade won't hurt the skin, with low noise, ensuring a quiet and smooth experience. When the kids' blade is attached, the motor speed is automatically reduced, and the digital display will show the Kids Mode icon .

Guide Combs Setting

5 cutting guide combs for hair clipper (1/3/6/9/12mm)

2 adjustable guide combs for precision U blade (3/4/5/6mm, 10/11/12/13mm)

2 adjustable guide combs for baby trimmer (3/6mm, 9/12mm)

1 adjustable guide comb for body trimmer (3/6/9mm)

USAGE INSTRUCTIONS

Attaching the Guide Comb:

To attach any type of guard onto a cutting element, slide the front part of the guard onto the teeth of the cutting element. Then push down the center of the guard with your fingers or the palm of your hand.

Detaching the Guide Comb:

To detach any type of guard from the cutting element, carefully pull its back part off the product and then slide it off the cutting element.

First Time Use:

When trimming for the first time, start by using the guard with the maximum trimming length setting to familiarize yourself with the product.

The device must always be turned off when inserting or removing a cutting guide comb.

USB Charging

The grooming kit is completely handy to carry and can be charged anywhere with the USB cable.

It comes with a built-in battery, requiring a full charging time of 2 hours to offer around 150 minutes of running time. Charge the device using the USB cord by connecting it to a power bank, adapter (5V $\Rightarrow$ 1A), or computer. This ensures that you can find a charging source conveniently, whether at home or while traveling. The LED display shows the battery power percentage and flashes when below 5%, reminding you to recharge.


Press the on/off switch, and the unit will start to work.

Long press the on/off switch for 3 seconds to activate the travel lock function. Press another 3 seconds or connect the power supply to unlock it when you need to use it.

Blade Installation and Removal Instructions:

Removal: Hold the upper part of the product body with one hand, and use the thumb of the other hand to push the center of the blade to detach it.


Installation: Hold the upper part of the product body with one hand, and with the other hand, align the plastic base of the blade with the product body. Press the blade assembly firmly into place.

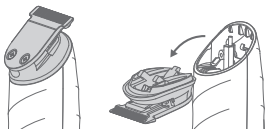

Attaching and Removing Trimming Attachments


1. For Hair Clipper (Snap-On Type):

- To attach the hair clipper or guide combs, align the comb rails with the corresponding slots on the clipper unit.
- Press down firmly until you hear a click, indicating it's securely locked in place.
- To remove, hold the top edge of the comb or clipper and pull upward gently to detach it.

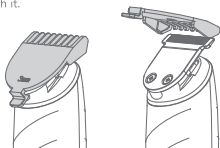

2. For Precision U Blade & Baby Trimmer (Slide-In Type):

- To attach, align the back tab of the blade with the inner groove of the trimmer unit.
- Then slide or push the top of the blade downward until it clicks into place.
- To remove, grip the top edge of the blade and pull it upward and slightly forward to detach.

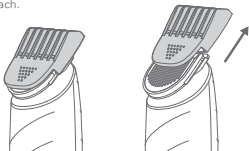

DISPOSAL

The device (including its removable parts and accessories) must not be disposed of together with municipal waste at the end of its life. It must be disposed of in compliance with European Directive 2012/19/EU. As it must be handled separately from household waste, either take it to a separately-collected waste disposal centre for electrical and electronic appliances or return it to the retailer when purchasing a new device with the same purpose. Any infringement will be severely prosecuted. The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before discarding and handing in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries.

First, unplug the product and allow the motor to run until the battery is completely empty. Remove both side panels from the appliance with a screwdriver. Lift the power unit out of the appliance.

Specifications and designs are based on the latest information available at the time of printing and are subject to change without notice.

MAINTENANCE

- Before starting cleaning the appliance, always switch it off and unplug it.
- Clean the device after every use for optimal performance.
- Never use detergents or solvents to clean the appliance.
- The grooming kit is washable; rinse the unit and hair chamber under running water.
- Carefully shake off excess water and let it air-dry completely.
- Remove hair from the cutting blade using the cleaning brush. Put 2 or 3 drops of oil on the blade, then allow the machine to run for several seconds to ensure proper lubrication.

Note: All the heads are detachable.

This product complies with all applicable European directives.

For more information, please visit:



www.oraimo.com



[@oraimo accessories](https://www.facebook.com/oraimo_accessories)