

# OTR-280说明书 加FCC 20260312

材质：128g铜板 形式：风琴折 尺寸：85x55mm（成品）

Internal Use（内部公开）

### Package Contents

### Specifications

Input: DC 5V=1A  
Rated Power: 5W  
Charging Time: 2 hours

Run Time: Up to 2.5 hours  
Battery Capacity: 1200mAh  
\*oraimo Lab test results

### Charge Your Trimmer

Fully charge the trimmer before you use it for the first time or after not using it for a long period (When charging, please use a power adapter with an output voltage not higher than 5V.)

🔋: When the digital display shows this indicator icon, it means the trimmer is on charge.

### How to Use

#### Adjust the Angle of the Blade Head

One hand hold the trimmer, and use the other hand to press the blade head to toggle between the two available angles, choosing the one that best suits your grooming needs.

⚠️ Please ensure the protective cover is installed before adjusting the blade angle, and be mindful not to touch the blade or switch to prevent injury or unintentional activation.

### Remove the Protective Cover

Before usage, please remove the blade protective cover. Simply apply gentle pressure to the latch, and it will release the protective cover.

### Install and the Guided Comb

Make sure the trimmer is turned off before you install or remove the guide comb.  
You can install different sizes of guide combs to adjust the trimming length according to your needs.

### Turn on/off

Press the power switch to turn on/off the trimmer.

### Trim Your Body

After adjusting the trimming angle and attaching the guide comb, switching on the trimmer to start trim. Gently glide the blade end through your skin using slow, stroking motions.  
⚠️ Care should be taken to avoid scratching your skin.

### To Activate the Travel Lock:

Press and hold the power button for 3 seconds. The device will enter travel lock mode, and the lock symbol(🔒) will flash 3 times on the display screen to confirm activation.

### To Deactivate the Travel Lock:

While in travel lock mode, press and hold the power button for another 3 seconds to release the travel lock. The device will then turn on automatically.

### Trouble Shooting

| Fault   | Possible Causes                             | Solutions   |
|---|---|---|
| Trimmer does not cut well                               | Blade head is worn or damaged               | Contact customer service  |
|   | Trimmer is clogged with hair                | Thoroughly clean the trimmer  |
|   | Low battery level                           | Plug the trimmer into the charger to charge it  |
| Trimmer does not turn on when pressing the power switch | Button does not function                    | Contact customer service  |
|   | The battery is drained                      | Please charge the trimmer fully before use  |
| Digital display do not light up                         | The travel lock function has been activated | Please deactivate the travel lock function  |
|   | Circuit failure                             | Contact customer service  |
| Unable to charge the battery                            | Trimmer is damaged                          | Contact customer service  |
|   | Charging cable is damaged                   | Replace the charging cable, if you are unable to resolve the issue, please contact customer service |
| Runs for less than 90 minutes on a full charge          | Battery error                               | Contact customer service  |

### Cleaning & Maintenance

- Power Off and Disassemble: Turn off the power and unplug the device, leaving the blade section only.
- Brush Away Hair: Use the cleaning brush to gently remove any hair from the trimmer head and the gaps between the body and the trimmer head.
- Deep Clean the Trimmer Head: Use a screwdriver (not included) to unscrew the two side screws and remove the trimmer head and torsional spring. Clean the inside of the body with the cleaning brush. Rinse the trimmer head and spring with water, dry thoroughly, and reassemble in order using the screwdriver.
- Avoid Water Exposure: Do not wipe the entire trimmer with a wet cloth to prevent damage to the electronic components.

**Note:**  
Always detach the trimmer head for cleaning. Do not rinse the body with water, as it can damage the internal parts and make the trimmer unusable.

### WELCOME GUIDE

SmartTrimmer 2 Pro | OTR-280 |

\*\*Please read the instructions carefully before using the product and keep the user manual in a safe and accessible location for future reference.

### Safety Instruction

- Before connecting to the adapter, ensure the Type-C charging port is completely dry.
- Avoid wrapping the charging cable around the trimmer to prevent cable damage.
- Install, remove, or adjust the trimming comb and blade head while the trimmer is turned off.
- Turn off and unplug the trimmer before cleaning.
- To prevent injuries, avoid pressing the blade teeth into the skin.
- Immediately stop using the trimmer if it malfunctions. Consult the troubleshooting section or contact customer service for assistance.
- Stop using the trimmer's charging cable if it is damaged or malfunctioning.
- Fully charge the trimmer at least once every six months if it has not been used for an extended period.
- Individuals (including children) lacking relevant experience, knowledge, or civil conduct should not use, clean, or maintain the device without adult supervision and guidance.

**Notes:**

- It is recommended to use the oraimo charger to charge this trimmer.
- Install the protective cover when transporting the trimmer.
- Charge, use, and store the trimmer within temperatures ranging from 5°C to 35°C.
- For hygiene purposes, it's recommended that only one person use this trimmer.
- Store the trimmer in a cool, dry place.
- Ensure the trimmer is dry before packing to prevent damage to other items in your luggage.

### Customer Service

**365 DAYS WARRANTY**

✉ Email: service@carlcare.com  
India: care@oraimo.com

### Warranty Certificate

|                               |  |
|-------------------------------|--|
| Name :                        |  |
| Address :                     |  |
| Tel. No. :                    |  |
| Date of purchase : (dd/mm/yy) |  |
| Store name :                  |  |
| Warranty period :             |  |

### Warranty Terms & Conditions

- All quality-related defects on items sold directly by oraimo or oraimo's authorized resellers are covered by an extensive warranty, starting from the date of purchase.
- oraimo's limited warranty is restricted to the country of purchase. The limited warranty is void on items taken outside the country they were originally bought in or shipped to directly from an authorized online purchase.
- This warranty covers only original oraimo products. It is not applicable to normal wear and tear, or any defects arising from damage caused by misuse of this product.
- Warranty is for the primary product only nor transferable. Any free additional product(s) are not covered in this warranty.
- If the product fails regardless of usage in compliance with the instruction manual and other written precaution, replacement will be provided free of charge.
- To claim the warranty, contact the services team from the platform or store where you bought from.

**FCC Caution: Labeling requirements.**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device must not cause harmful interference.  
(2) This device must accept any interference received, including interference that may cause undesired operation.

**Information to user.**  
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Information to the user.**  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.  
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.  
Note: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

www.oraimo.com @oraimo\_accessories

RoHS Made in China

↑  
封面

↑  
封底

oraimo特调绿 注：绿色部分以此专色印刷！

为保证最终效果，可根据页面调整封面封底位置