





Skånejakt

Jaktbutiken som gör natt till dag!

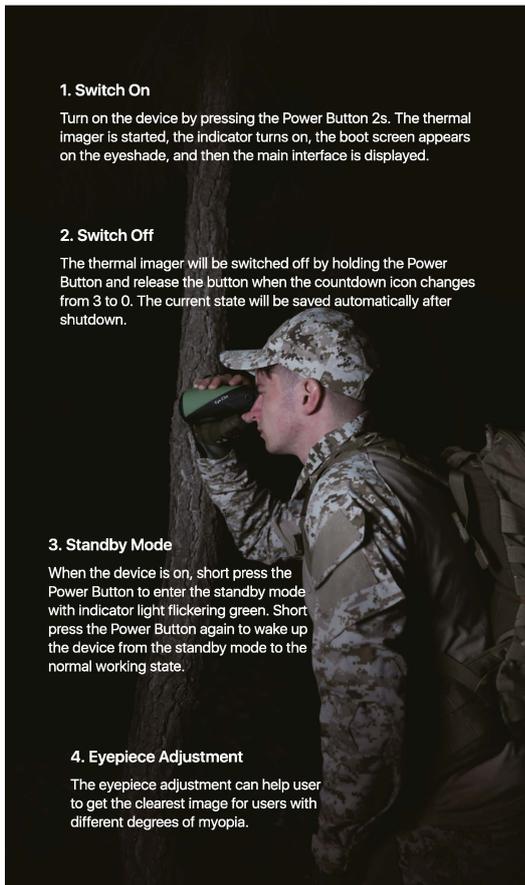

5. Switch the Image Mode

Short press the Image Mode Button to switch the image mode from white hot, black hot, red hot, pseudo color, target highlight mode circularly.

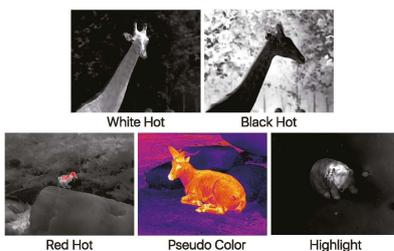

6. LED Lighting

When the device is off, short press the Image Mode Button. You can turn on/off the LED indicator.

7. E-Zoom

Short press the E-Zoom Button for image zooming from 1x / 2x / 4x circularly. x2/x4

x2/x4

8. Stadiametric Rangefinder


Long press the E-zoom and Image Mode Button to turn the Stadiametric Rangefinder mode on/off. Then by short or long pressing the Image Mode Button or Photo Button to adjust the selecting range of the target.

The distance of human (1.7m target), wild boar (0.9m target) and hare (0.2m target) can be measured and displayed on the left the corresponding icon.



9. Photo / video

In the normal display mode, short press the Photo Button to take photos and long-pressing for video recording. A video time prompt box appears in the upper-right corner. Long press again to quit and save the video.

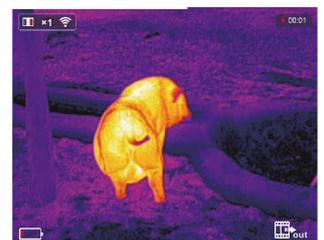






Skånejakt

Jaktbutiken som gör natt till dag!



10. HotSpot Tracking

Long press the Image Mode Button and Photo Button simultaneously to start hotspot tracking function and the hottest objects on the screen can be tracked.

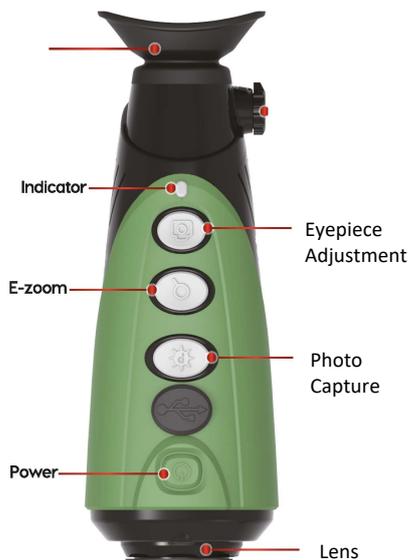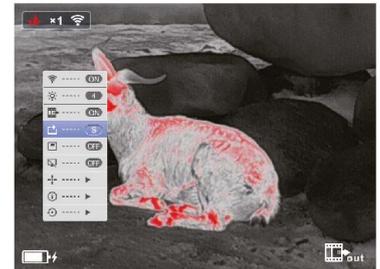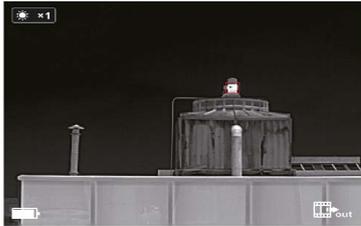

11. Setting Menu

Long press the E-Zoom Button to enter the menu, then short press the Image Mode Button or the Photo Button to switch up and down. And short press the E-Zoom Button to perform following settings: Wi-Fi / display brightness / video output / calibration mode / PIP / auto standby / cursor calibration and more. When done, long press the E-Zoom Button to exit the menu

12, Wi-Fi

Turn an Wi-Fi in the menu, and connect ta the Wi-Fi an your phone. The Wi-Fi names Eye_XXXXX-XXXXXXX, XXXXX-XXXXXXX is the SN code of the device, and the password is 12345678.

After the Wi-Fi connection is successful, the APP installed on the phone can be used for real-time operations, such as taking photos and recording videos.

13. Video Output


Turn an the analog video in the menu, and a video output icon will appear on the lower-right corner of the image. The analog video can be output to the monitor with the specific video transmission cable via the USB interface.

14. Calibration Mode

The image degrading can be improved by manual correction. The manual calibration has B (background) and S (shutter) modes ta be switched through the menu.


Press and hold down the E-Zoom and Photo Button at the same time ta achieve the manual correction.

In B mode, cover the camera with a lens cap during calibration, and then remove the lens cap after calibration.

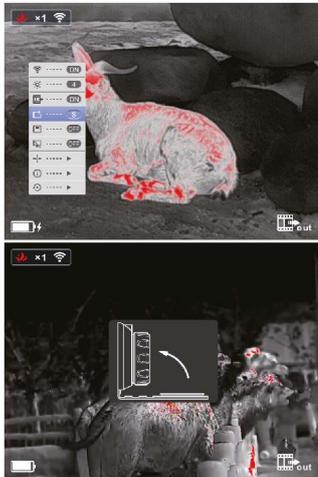

15. Picture in Picture (PIP)

After the PIP is enabled in the Menu, an independent window is displayed in the center on the top of the screen, showing the 2x zoomed-in image of the central area of the current image.

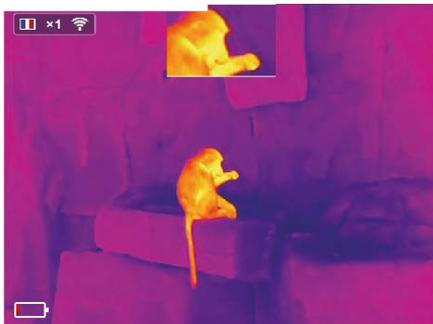

16. Automatic Standby

When the standby function is on, if there is no operation within 15 minutes, the device will switch to standby mode. Automatically power off after 15 minutes in the standby state.

Note: When Wi-Fi, recording or video output function is turned on, it will not automatically stand by.

17. System Information

Short press the E-Zoom Button to enter the system information interface, under which user can check all version information and product code.




18. Factory Reset!

Short press the E-Zoom Button for factory reset. Select , (Yes) or x (No) with a short press of the Image Mode Button or Photo Button. Press the E-Zoom Button briefly to confirm your selection.

If Yes is selected, the following settings will be restored to the factory state:
Image Mode - white hot mode,
Brightness - level 2,
E-zoom - x1,
Calibration Mode - S,
and the other functions are off

Note: Restore factory settings will format memory, so please save the data in advance.

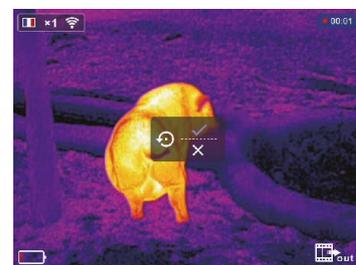



Skånejakt

Jaktbutiken som gör natt till dag!



ATTENTION!!

19. Data Catching


After the device is connected to a computer through a USB cable, you can open the device memory on the computer and read the stored photos and videos.

20. Charging

When the indicator light is flashing red, it means the battery is less than 10%. Please charge the device in time. At the same time, there will be relevant text prompts on the screen.

Open the USB cover at the bottom, plug in the USB charging cable, and connect with the power to charge, or use a portable power source to charge the device.

During charging, the indicator is yellow. When it turns green, the charging is completed.

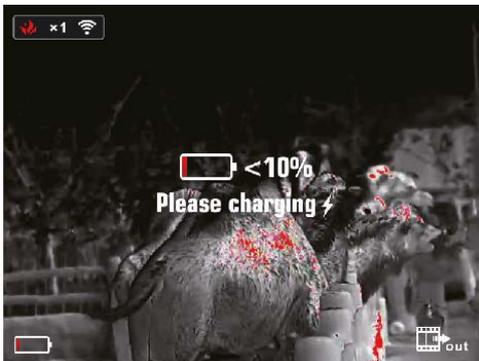

InfiRay Outdoor

1. The rated charging voltage of this product is 5V, please charge timely when power is low, so as to avoid the service life loss caused by battery over-discharge.

2. The thermal imager is not recommended to use in high-temperature environment for a long time, if the temperature is too high, the imager will enter the high-temperature protection state, and automatically shut down.

3. The use of temperature is recommended at -10°C to +50°C. Otherwise, the service life of the product will be affected.

4. Make sure that the USB port cover of the thermal imager is tightly plugged firstly when using in water environment, such as rainy days.

5. Under any circumstances (whether on or off), do not expose the thermal imager directly into the high-intensity radiation sources (such as the sun, laser, etc.), to avoid irreversible damage to the device.

6. The B correction mode will reduce the frequency of automatic shutter correction after the condition of the device becomes stable. If the image gets worse, please cover the lens cover for manual background correction.

7. When the device is not used for a long time, it should be charged at least 2 months during storage and stored in a dry and ventilated environment.

8. Do not shine the laser pointer on human eyes.

9. Do not be charged in an environment above 40°C