










Preliminary Steps:

- 1. Read all instructions carefully and study diagrams before installing the reverse light
- 2. Check with state and local authorities for laws governing usage and proper mounting
- 3. Disconnect ground connection from battery (marked "-") to avoid accidental short circuits before attempting to connect electrical wires
- 4. Route new wires along existing wiring. Tape as necessary to correct slack
- 5. When running wires through the firewall, keep them away from moving parts


Mounting and installation:

- 1. Drill 7 mm holes for screw placement on the surface where you would like to fix the light
- 2. Use the bolt to fasten the light, add the locking washer and tighten the bolt
- 3. Cable colors:

Red: Power (+) Black: Ground (-)

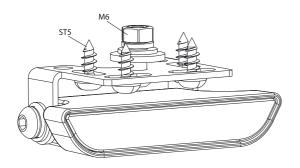



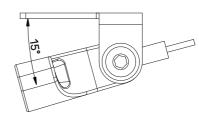

NOTE:

The reverse light is approved according to ECE R23, when the angle is at least 15 degrees downwards.

Warning!

- 1. Works under the specified voltage (DC9-36V)
- 2. This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the light off
- 3. Keep heat-sink clean and exposed to maintain air flow