

[All Collections](#)[Spare parts](#)[How to replace Blue Connect Battery ?](#)

How to replace Blue Connect Battery ?




Written by Mathieu - Aftersales manager


Updated over a week ago

To ensure an optimized battery life, put Blue Connect into standby mode when the pool is in winterization.



1. Take out the device from the water, remove the rubber ring and the usage cap and place Blue Connect on the storage cap.

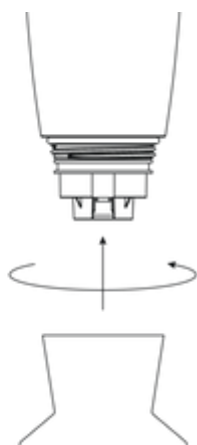

2. Wipe it and start the procedure in a dry and clean place.


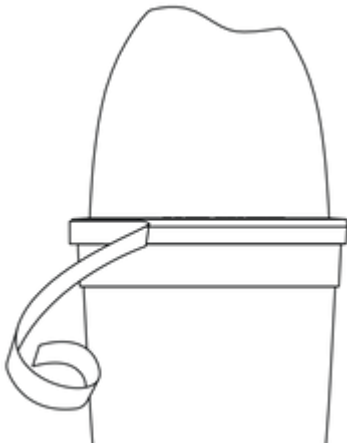


3. Remove the adhesive tape and unscrew the upper part of the device. This is a left-hand thread. Unscrew it in a clockwise direction. Remove the seal and discard it.

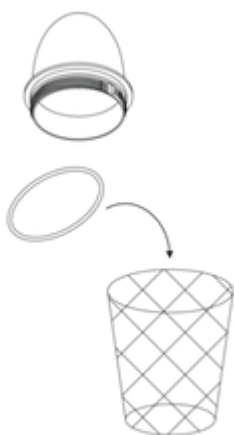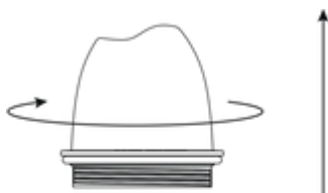



4. Unplug the white connector by pulling the red and black cable. The battery is at the other end of the cable. Press the plastic rod to release the battery, and

remove it by pulling the cable.

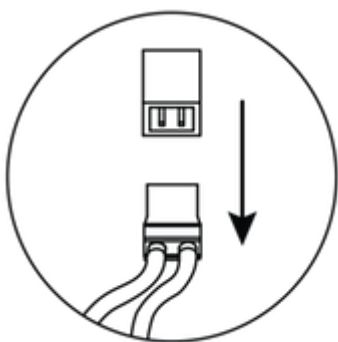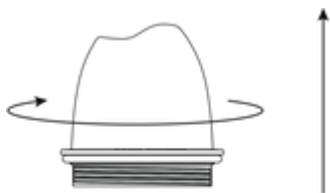


5. Take the new battery and place it at the bottom of the cavity until it is secure. Then, plug in the connector.



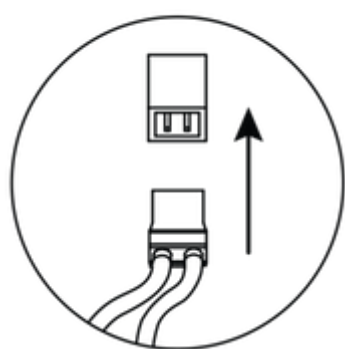
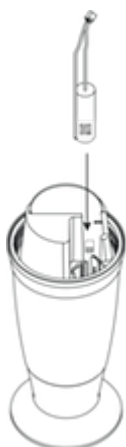


6. Place the new seal supplied with the battery on the screw thread of the upper part of the device. Close the upper part. This is a left-hand thread. Screw it counter-clockwise.



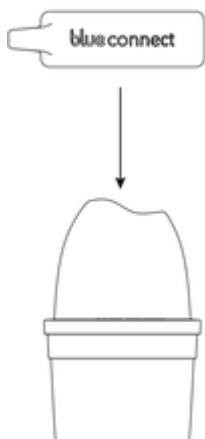

7. Replace the ring. Then, place the usage cap and place Blue Connect back in the water.

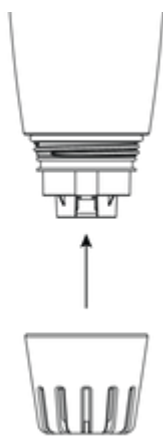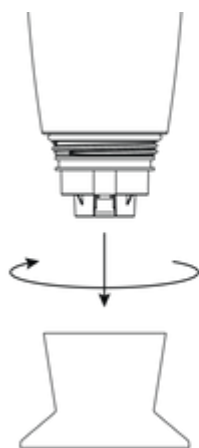

Did this answer your question?



blueriot

[Last version of the iOS application](#)

[Last version of the Android application](#)

