



WIRELESS CHARGING

Wireless Charging Activation and Control Guide

Function	Operation	Description
Activate wireless charging for the first time	Short press power button once	Enables wireless charging
Automatic wireless charging	/	Place the phone on the wireless charging area to start charging automatically
Disable wireless charging	Short press power button three times	Turns off wireless charging to save power
Re-enable wireless charging	Short press power button once	Re-enables wireless charging after it has been disabled

IMPORTANT SAFETY INSTRUCTIONS

- Power bank can be recharged for an extended 1-2 hours after the first three full charges, which allowing the power bank to achieve optimal performance.
- Power bank can be fully recharged and discharged for the first three times to achieve optimal performance.
- Do not store the power bank in excessive heat or in a humid environment, such as in direct sunlight or near heating appliances, as it may cause an explosion.
- Using chargers or power supply units that are not recommended by or sold with the power bank may increase the risk of fire or personal injury.
- The permissible temperature range for using the power bank should be between 0°C and 45°C.
- Avoid disassembling, modifying, inserting any foreign objects into, or immersing in water or any liquid to prevent liquid leakage, overheating, fire or explosion.
- If the power bank is not in use for a long period of time, ensure it is recharged regularly once every three months, and it is recommended to store more than 50% of the power.
- When the power bank is recharged, some heat may be generated which is normal. No need to worry.
- Keep the power bank out of reach of children to prevent them from swallowing or entangling it. Furthermore, do not expose it to heat.
- Cleaning the power bank should not be done with any harmful chemicals or detergents.
- Overuse, intense shocks or drops may damage to the power bank.
- Utilize only original/certified cables for connecting.

the consumer may request a refund, a price reduction proportional to the defect, or replacement with a non-defective equivalent, if possible. The seller may not refuse this request. If the request is not fulfilled, the seller, manufacturer, and importer are jointly and severally liable to the consumer.

6) The repair period shall not exceed 20 business days. This period starts from the date the file is reported to the authorized service station or seller within the warranty period, or from the date the product is delivered to the authorized service station if outside the warranty period.

If the defect cannot be repaired within 10 business days, the manufacturer or importer must provide the consumer with another product of similar features for use until the repair is completed.

If the product breaks down before the warranty period, the time spent in repair shall be added to the warranty period.

7) Failures resulting from use contrary to the instructions in the user manual are outside the scope of the warranty.

8) In disputes arising from the exercise of warranty rights, the consumer may apply to the competent administrative committee or the Consumer Court in the place of residence or where the consumer transaction was carried out.

9) If this Warranty Certificate is signed by the seller, the consumer may apply to the General Directorate of Consumer Protection and Market Surveillance of the Ministry of Trade.

Technical Service

Ömer Sınırsız Tutul Şube
Adres: Tepeören Demirelmerkez No:137, 34595 Tutul
Sadece karadönümlerine hizmet vermektedir.
Ömer Sınırsız Genel Merkez
Adres: Atilla İhan Cd. No:20, 34750 Ataşehir/İstanbul
Sadece on büründen hizmet vermektedir.
Webste: <https://oumssence.com.tr>
For authorized service centers, please visit <https://oumssence.com.tr>, as required by the distributor.

Consumer Maintenance and Repairs

Your consumer serviceable or repairable parts. For maintenance or repair, contact an authorized service point listed in the Technical Service List.

Efficient Energy Use

Turn off data connections (Bluetooth, Wi Fi) when not in use.
Lower screen brightness and set shorter screen timeout.
Disable unnecessary sounds.

Recycling

This product complies with the AEEE Regulation.






Proper disposal of the product.
This symbol indicates that the product should not be disposed of together with other household waste across the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal and to promote the sustainable reuse of material resources, please recycle responsibly. To return a used product, please use return and collection systems or contact the retailer from whom the product was purchased. They can take this product for environmentally safe recycling.

For more information, please visit:



www.oraimo.com @oraimo accessories

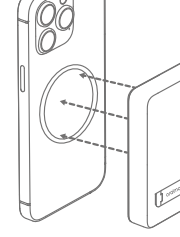

KabloSuz Şarj Etkinleştirme ve Kontrol Kılıfı

Fonksiyon	Kullanım	Açıklama
KabloSuz şarjı ilk kez etkinleştirme	Güç düğmesine bir kez kısa basın	KabloSuz şarjı etkinleştirir
Özmatik kabloSuz şarj	/	Özmatik şarjı başlatmak için telefonu kabloSuz şarj alanına yerleştirin
KabloSuz şarjı devre dışı bırakma	Güç düğmesine üç kez kısa basın	Güç tasarrufu için kabloSuz şarjı kapatır
KabloSuz şarjı yeniden etkinleştirme	Güç düğmesine bir kez kısa basın	Devre dışı bırakıldıktan sonra kabloSuz şarjı yeniden etkinleştirir

ÖNEMLİ GÜVENLİK TALİMATLARI

- Powerbank, ilk üç saat garđan sonra 1-2 saat daha şarj edilebilir, bu powerbank'in optimum performansına ulaşılmıştıdır.
- En iyi performans için powerbank ilk üç kullandıkda tamamen şarj edilip tamamen boşaltılmalıdır.
- Powerbank'in ağırı sıcak veya ıslak ortamdan, örneğin duşdan önce üç gün altkda veya ısıtıcılı ağırı kullanılmakla, bu powerbank'e zarar vermez.
- Powerbank ile birlikte önerilmeyen veya satılmayan şarj cihazları veya güç kayırlarının kullanılması, ağırı veya kişisel verilerin riskini artırabilir.
- Powerbank'in kullandıkda uygun sıcaklık aralıđı 0°C ile 45°C arasında olmalıdır.
- Sıcaklık, ağırı ısıtma, ağırı veya powerbank'in ağırı için ısıtıcı sökmekten, ısıtıcı yabancısı olma sökmekten ve suya veya herhangi bir sıvıya batırmaktan kaçınır.
- Powerbank uzun süre kullandıkda, üç ayda bir düzenli olarak şarj edilmesi sağlanmalı ve %60'dan fazla doluluk seviyesinde saklanması önerilir.
- Powerbank şarj olurken bir süre ısı oluşması normaldir. Endişelenmeye gerek yok.
- Yalnızca veya doluluđna riskini önlemek için powerbank'in ııcılıklarını eritemeyecek yerde tutun. Ayrıca, ısı veya ateşle maruz bırakmayın.
- Powerbank'i temizlemek zararlı kimyasallar veya deterjanlar kullanılmamalıdır.
- Ağırı kullanırken, şiddetli darbe veya döşölşler powerbank'e zarar verebilir.
- Bağlıları için yalnızca orijinal veya sertifikalı kablolar kullanın.

[illegible]

Teknik Özellikler Yapılabilecek Bakım ve Onarım

Çökeltici ile ilgili teknik özellikler yapılabilecek bir bakım veya onarım bulanamadık. Bakım ve onarım ihtiyacınız olması durumunda Yüklü Servis İstasyonu bulan noktalarından destek alabilirsiniz.

Verimli enerji kullanımı

Kullanımınızda Bluetooth ve kablolu ağlar gibi veri bağlantılarını kapatın.

Enarkı parlaklığı azaltın ve ekranı daha kısa bir süre sonra kapanacak şekilde ayarlayın.

Tuş sesleri vs. gereksiz sesleri kapatın.

Geri Dönüşüm



Bu ürün AEEE yönetmeliğine uygundur.



Ürünün doğru şekilde atılması.

Bu işaret ürünün AB çapında diğer ev ürünleriyle birlikte atılmaması gerektiğini göstermektedir. Kontrolünüz altına alınmış çevreye ya da insan sağlığına olası zararlarını engellemek için, malınızı kayınlardan sürdürülebilir yeniden kullanımı desteklemek amacıyla oluşturulmuş biriminde geri dönüşüne verin. Kullanılmış ürünü işde etmek için, lütfen satış ve toplama sistemlerini kullanın ya da ürünün satın alındığı satış ile teslimine gidin. Bu ürünü çevreye zararlı geri dönüşüm için teslim alabilir.

Daha fazla bilgi için lütfen şu adresi ziyaret edin:



www.aralimo.com

[@aralimo_accionesites](https://www.instagram.com/aralimo_accionesites)

تعليمات تفكيك الهاتف

[illegible][illegible]

المباني والإعلامات وأوساطة المصاحف

لا توجد قطع غير قابلة للتجديد أو الإصلاح من قبل المصنّعة، للتصنيع أو الإصلاح،
أفضل بطلقة مصنوعة مدعومة بمرحلة في قائمة الخدمات الفنية.

استخدام النفايات البلاستيكية

تم تصنيع منتجات التغليف البلاستيكية (البلاستيك، 1961 م) بعد استخدامها
في منتجات سائقة الشائعة وقد صممت لخدمة أغراض المصاحف.
تم تعطيل الأصوات غير المرغوبة

إعادة التدوير



يؤهلون المنتج مع علامة AEEA.



تخلص من هذا المنتج بشكل صحيح
يتم إرساله إلى المرء إلى أنه لا ينبغي التخلص من المنتج مع النفايات المنزلية الأخرى في
موقع أو إلى الشارع الأمامي. يرجى عدم التخلص من المنتج مع النفايات أو مع النفايات
الخاصة من النفايات من النفايات (إزالة استخدام المصاحف المستخدمة للزوار المأهولة،
التي يمكن استخدامها مرة أخرى في منتجات مختلفة). يرجى استخدام المنتج لإعادة الإرجاع
والإصلاح أو الاتصال بالبرامج التجارية التي توفر هذه الخدمة. يمكنكم أخذ المنتج
إعادة التدوير النظيف.

للتزويد من المعلومات، يرجى زيارة:



www.enaimo.com @horaimo_accessories