WELCOME GUIDE

UltraShave | OFS-280

Please read this Guide carefully before using the product

* For safety issue, the product remains low capacity during shipping. Please fully charge the product before initial use!

FCC Caution

Labeling requirements.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Information to user.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the **following measures:**

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


-- Consult the dealer or an experienced radio/TV technician for help.

Note: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

SAFETY INSTRUCTIONS

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Keep the product out of the reach of children to prevent accidents or injury.
4. Do not disassemble the main body to replace the battery.
5. Do not charge the product unattended for extended periods. The maximum charging time should not exceed 24 hours.
6. This product contains a built-in rechargeable battery. Do not dispose of it in fire. Do not charge, use, or store it in high-temperature environments.
7. The battery must not be disassembled, impacted, crushed, or thrown into a fire. If severe swelling occurs, discontinue use immediately.
8. Do not use the battery if it has been submerged in water. Do not place it in a high-temperature environment.
9. If the shaver or charging cable is damaged, please contact after-sales service and have it repaired by the manufacturer.
10. To avoid damaging the charging cable, do not wrap it around the product.
11. Please use a 5V charger for charging.
12. Do not insert foreign objects into the product.
13. When traveling, ensure the shaver is stored in its protective case to protect it.
14. Please charge, use, and store the shaver in an environment between 5°C and 35°C.
15. This product is designed for facial hair only. It is not recommended for use on the head or other parts of the body. This product is for single-person use only.
16. This product is IPX7 waterproof, allowing it to be washed under a running tap. However, do not immerse it in water for extended periods.
17. When unplugging the charger, do not pull on the cord itself. Always grip the plug.
18. The handheld part must be detached from the power cord before it can be cleaned in water.
19. Do not charge in a humid environment. Ensure the charging port is dry before plugging in.
20. If the product is not used for a long period, please fully charge it at least once every six months to maintain battery health.
21. This product is for indoor use only.
22. The battery type: Li-ion Cell QJ 14280 400mAh.
23. Do not handle a damaged or leaking battery.
24. Do not let leaking battery fluid come in contact with your eyes skin or clothing.
25. Do not expose the device or battery to excessive temperatures.
26. Be aware of the risk of terminals of the battery-operated device or battery being short circuited by metal objects.
27. This appliance contains batteries that are non-replaceable. When the battery is at end of life, the appliance shall be properly disposed of.
    WARNING: Use only an external supply with the following specifications: 5V⎓1A
28. This symbol indicates that the product is suitable for cleaning under an open water tap, but it should not be immersed for long periods. (The handheld part must be detached from the power cord before cleaning in water).


PACKAGE CONTENT

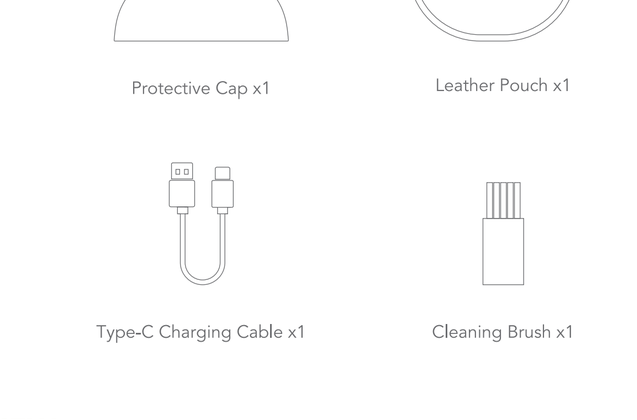

Main Unit x1 · Protective Cap x1 · Leather Pouch x1 · Welcome Guide x1 · Type-C Charging Cable x1 · Cleaning Brush x1

PRODUCT OVERVIEW

1. Protective Cap
2. Outer Foil
3. Inner Blade
4. Slide Switch
5. Main Body
6. Type-C Charging Port

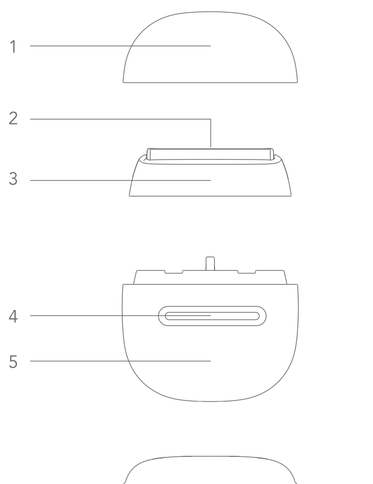

BASIC PRODUCT SPECIFICATIONS

Size: 67.8*62.8*31mm

Product Material: PC

Rated Input: 5V⎓1A

Charging Time: 1.5 Hours

*oraimo Lab test results


USAGE INSTRUCTIONS

Power On/Off

Slide your finger across the touch slider from one end to the other to power the shaver on or off. The white indicator light will illuminate as you slide and will turn off once the operation is complete.

Travel Lock

With the shaver powered off, slide your finger to either end of the touch slider and hold for 3 seconds. The white indicator will flash twice and the motor will vibrate twice, confirming that the travel lock has been engaged or disengaged.

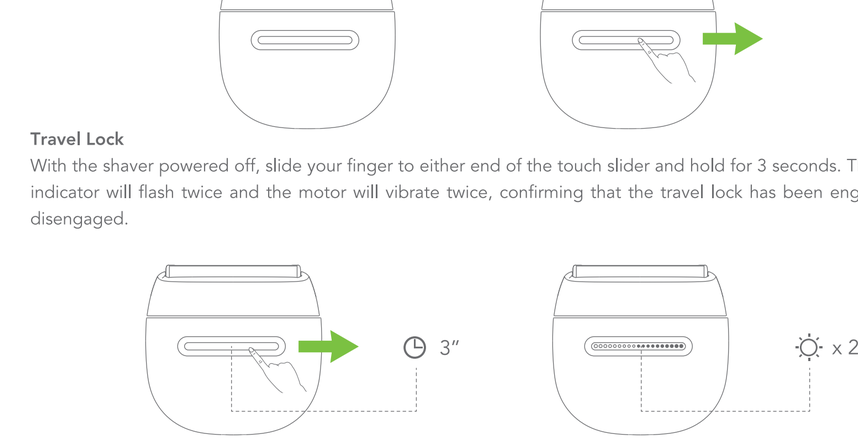

Shaving Guide

- Cleanse Your Face Before Shaving
  Shaving on a clean, dry face helps achieve a closer shave.
- Hold at the Correct Angle
  Hold the shaver at a 90-degree angle to your skin. This allows the foils to easily capture stubble at the root for a smooth finish.
- Apply Gentle Pressure
  There is no need to press down hard. Gently glide the shaver across your skin, allowing the thin foil to capture even difficult hairs.
- Shave Against the Grain
  For the closest shave, move the shaver in straight, back-and-forth strokes against the direction of your beard growth.

- Tackle Difficult Areas
  For hard-to-reach areas like the upper lip (under the nose) or chin, stretch your skin slightly with your free hand to create a flat surface. This makes it easier to shave those areas thoroughly.

Tips:

1. Complete the slide switch motion within approximately 1 second for the best response.
2. When operating the slide switch control, ensure that no other fingers are touching the area.
3. Wet hands or wearing gloves may affect the sensitivity of the touch control.

Battery Indicator Light

Not Charging (In Use or Standby)	< 20%	The red light flashes to indicate low battery.
	= 0%	The device automatically powers off and cannot be turned on. The red light will flash.
Charging (In Use or Standby)	Charging < 100%	The red light breathes (fades in and out).
	Fully Charged (100%)	The red light turns off, and the white light turns solid.

Charging Instructions


- The shaver will not operate when the battery is empty. Please ensure the shaver is powered off before charging.
- Ensure your local mains voltage matches the voltage range indicated on the product's rating label. Plug the power cable into a suitable charger and then into a certified power outlet.
- If the red indicator light flashes and the shaver does not turn on when you operate the slide control, it means the battery is completely drained and needs to be recharged.
- The shaver supports use while charging (pass-through charging). If the battery is too low to power on, you can connect it to a power source and use it immediately. It can be charged via a power bank, mobile phone charger, computer, or car charger.
- It is recommended to charge the shaver while it is powered off. Connect the Type-C cable to the shaver's charging port, and then plug the other end into a 5V power source.
- A full charge takes approximately 90 minutes. During charging, the red light will breathe. Once fully charged, the red light will turn off, and the white indicator will become solid. A full charge provides approximately 60 minutes of continuous use.
- Once fully charged, please unplug the charger from the power outlet promptly. Do not leave the charger plugged in for more than 5 hours.

Note: Please use a power adapter with an output of 5V⎓1A for charging. Do not use adapters with a power output exceeding 15W (e.g. some fast chargers).

- Before first use, or if the shaver has not been used for over six months, please charge it for 1.5 hours to activate and condition the battery.

Cleaning and Care


- For optimal performance, we recommend cleaning your shaver after each use.
- Before cleaning, ensure the shaver is powered off and disconnected from the charging cable.
- Grasp the shaver head firmly and pull it straight off the body.

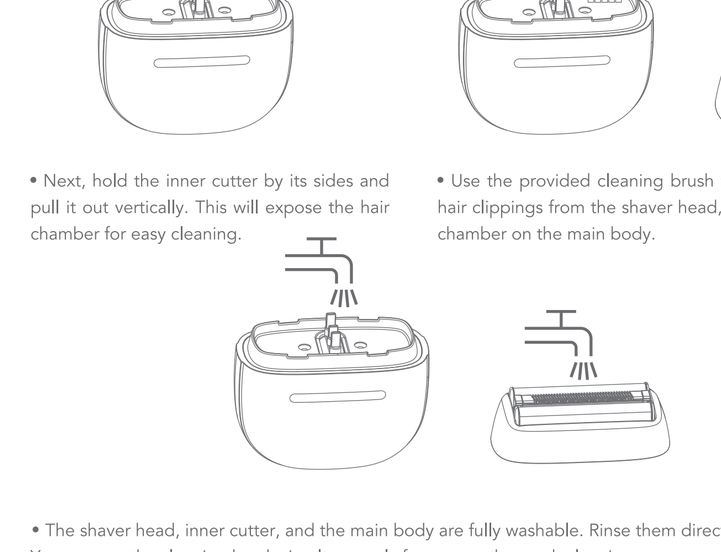

- Next, hold the inner cutter by its sides and pull it out vertically. This will expose the hair chamber for easy cleaning.
- Use the provided cleaning brush to sweep away any loose hair clippings from the shaver head, inner cutter, and the hair chamber on the main body.
- The shaver head, inner cutter, and the main body are fully washable. Rinse them directly under running water. You can use the cleaning brush simultaneously for a more thorough cleaning.


Important: The shaver must be detached from the charging cable before it can be cleaned with water.

- After rinsing, shake off any excess water and allow all parts to air dry completely, or gently pat them dry with a soft cloth. Ensuring the shaver head is dry is essential for proper maintenance.
- Once all parts are dry, reassemble them in the reverse order of disassembly.
- After each use, always place the protective cover back on the shaver head. The foil is delicate, and the cover will protect it from damage caused by bumps or impacts.

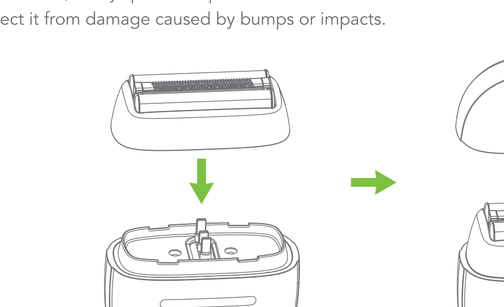

Disposal and Recycling

- This product contains a built-in rechargeable battery with materials that may be harmful to the environment. The battery must be disposed of safely. Before discarding the shaver, the battery must be removed and taken to an official or designated recycling center. Alternatively, you can return the entire shaver to an authorized service center, where the battery will be professionally removed and recycled.
- Before attempting to remove the battery, the shaver MUST be disconnected from any power source and the battery must be fully discharged. To do this, turn the shaver on and let it run continuously until the motor stops.
- You may also remove the battery yourself by following these steps: Pry open the back cover to remove the internal assembly. Use a soldering iron or pliers to detach and remove the battery. After the battery has been removed, NEVER reconnect the appliance to a power outlet.

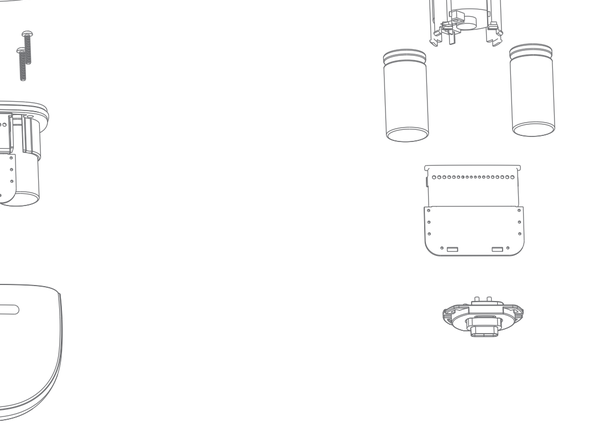

TROUBLESHOOTING

Issue	Possible Cause	Solution
Slide control does not work	The travel lock is activated.	Slide your finger from one end to the other and hold for 3 seconds to unlock.
	The battery is completely empty.	Recharge the battery.
	The slide control area is covered with shaving foam, soap residue, etc.	Inspect and clean the area, then try operating the slide control again.
Poor shaving performance	The outer foil or inner cutter is worn, aged, or deformed.	Replace the outer foil or inner cutter.
	The shaver head is clogged with stubble clippings or residue.	Clean the shaver thoroughly after each shave to prevent clogging.
Short runtime after charging	The room temperature is outside the optimal range.	The recommended charging temperature is 0-35°C (32-95°F). Charging time may vary and battery performance may decrease if the temperature is outside this range.
	The battery has reached the end of its lifespan or is faulty.	Contact after-sales service.
Abnormal noise during use	The shaver head is installed incorrectly.	Check and reinstall the shaver head correctly according to the instructions.
	The inner cutter or other parts are damaged.	Contact after-sales service.
Shaver head has an odor	The head is clogged with stubble and residue.	Clean the shaver head.
Outer foil overheats	The outer foil is damaged or deformed.	Replace the outer foil.
Stubble clippings scatter during use	The inner cutter or outer foil is clogged.	First, use the cleaning brush to clean the inner cutter and outer foil, then rinse with water.

Note: If the problem persists after following these steps, please contact an authorized service center or your dealer. Do not attempt to disassemble or repair the shaver yourself.

CUSTOMER SERVICE

✉ **Email**

India: care@oraimo.com
Nigeria: care.ng@oraimo.com
Kenya: care.ke@oraimo.com
Ghana: care.gh@oraimo.com
Morocco: care.ma@oraimo.com
Egypt: care.eg@oraimo.com
South Africa: care.za@oraimo.com
Cameroon: care.cmr@oraimo.com
Tanzania: care.tz@oraimo.com
UAE: care.ae@oraimo.com
Ivory Coast: care.ci@oraimo.com
Bangladesh: care.bd@oraimo.com
Angola: care.ao@oraimo.com
Others: service@carlcare.com

WARRANTY CERTIFICATE

Name :	
Address :	
Tel. No. :	
Date of purchase : (dd/mm/yy)	
Store name :	
Warranty period :	

WARRANTY TERMS & CONDITIONS

* All quality-related defects on items sold directly by oraimo or oraimo's authorized resellers are covered by an extensive warranty, starting from the date of purchase.
* oraimo's limited warranty is restricted to the country of purchase. The limited warranty is void on items taken outside the country they were originally bought in or shipped to directly from an authorized online purchase.
* This warranty covers only original oraimo products. It is not applicable to normal wear and tear, or any defects arising from damage caused by misuse of this product.
* Warranty is for the primary product only nor transferable. Any free additional product(s) are not covered in this warranty.
* If the product fails regardless of usage in compliance with the instruction manual and other written precaution, replacement will be provided free of charge.
* To claim the warranty, contact the services team from the platform or store where you bought from.

WARRANTY TERMS & CONDITIONS

1) The warranty period starts from the date of delivery of the product and is 2 years. (This period may not be less than 2 years.)

2) The product, including all its parts, is covered under warranty.

3) If the product is found to be defective, the consumer may exercise one of the rights specified in Article 11 of Law No. 6502 on the Protection of Consumers, namely:

a- Withdrawal from the contract,

b- Requesting a price reduction,

c- Requesting free repair,

d- Requesting replacement with a non-defective equivalent.

4) If the consumer chooses the right of free repair, the seller is obliged to repair or have the product repaired free of charge, without demanding any fee under any name such as labor cost, replaced part cost, or otherwise. The consumer may also exercise this right against the manufacturer or importer. The seller, manufacturer, and importer are jointly and severally liable.

5) If the consumer uses the right of free repair and:

- The product breaks down again within the warranty period,
- The maximum repair period is exceeded,
- It is determined by an authorized service station, seller, manufacturer, or importer (by report) that repair is not possible;

the consumer may request a refund, a price reduction proportional to the defect, or replacement with a non-defective equivalent, if possible. The seller may not refuse this request. If the request is not fulfilled, the seller, manufacturer, and importer are jointly and severally liable.

6) The repair period shall not exceed 20 business days.

This period starts from the date the fault is reported to the authorized service station or seller within the warranty period, or from the date the product is delivered to the authorized service station if outside the warranty period.

If the defect cannot be repaired within 10 business days, the manufacturer or importer must provide the consumer with another product of similar features for use until the repair is completed.

If the product breaks down within the warranty period, the time spent in repair shall be added to the warranty period.

7) Failures resulting from use contrary to the instructions in the user manual are outside the scope of the warranty.

8) In disputes arising from the exercise of warranty rights, the consumer may apply to the Consumer Arbitration Committee or the Consumer Court in the place of residence or where the consumer transaction was carried out.

9) If this Warranty Certificate is not provided by the seller, the consumer may apply to the General Directorate of Consumer Protection and Market Surveillance of the Ministry of Trade.

CUSTOMER SERVICE

Ouno Servis Tuzla Şube
Adres: Tepeören Demokrasi Caddesi No:137, 34959 Tuzla
Sadece kargo gönderimlerine hizmet vermektedir.
Ouno Servis Genel Merkez
Adres: Atilla İlhan Cd. No:20, 34750 Ataşehir/İstanbul
Sadece ön bürodan hizmet verilmektedir.
Web site: https://ounoservice.com/
For authorized service centers, please visit www.doraas.com/mi, as required by the distributor.

Importer Company:

Company Name: Dora Communication and Trade Inc.
Address: Küçükbakkalköy Mah., Atilla İlhan Cd. No:22, 34750 Ataşehir, Istanbul
Telephone: (0216) 469 40 60
Authorized Signature:
Company Stamp:

Manufactured for:

Company Name: ORAIMO TECHNOLOGY LIMITED
Address: FLAT N 16/F BLOCK B UNIVERSAL INDUSTRIAL CENTRE 19-25 SHAN MEI STREET FOTAN NT HONGKONG
Email: hello.ab@oraimo.com

Manufactured by:

Company Name: ORAIMO TECHNOLOGY LIMITED
Address: FLAT N 16/F BLOCK B UNIVERSAL INDUSTRIAL CENTRE 19-25 SHAN MEI STREET FOTAN NT HONGKONG
Email: hello.ab@oraimo.com

Transport and Shipping Instructions

- Before moving the device, ensure all connections are disconnected and cables removed.
- Use the original box and packaging materials for repacking.
- Avoid shock, impact, heat, humidity, and dust during use and transport.

Consumer Maintenance and Repairs

No consumer serviceable or repairable parts. For maintenance or repair, contact an authorized service point listed in the Technical Service List.

Efficient Energy Use

Turn off data connections (Bluetooth, Wi-Fi) when not in use.
Lower screen brightness and set shorter screen timeout.
Disable unnecessary sounds

Recycling

This product complies with the AEEE Regulation.

Proper disposal of the product.

This symbol indicates that the product should not be disposed of together with other household waste across the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal and to promote the sustainable reuse of material resources, please recycle responsibly. To return a used product, please use return and collection systems or contact the retailer from whom the product was purchased. They can take this product for environmentally safe recycling.