OBS-382说明书-四国语 版本号：V2

Internal Use（内部公开）

100g双铜，单色印刷　　展开尺寸：680*135mm

成品尺寸：85*135mm

oraimo
smart accessories

WELCOME GUIDE

SpaceBox | OBS-382 |

Please read this Guide carefully before using the product.
** For safety reasons, do not remove or tear the warranty label. Please fully charge the product before initial use!*

PACKAGE CONTENTS



Wireless Speaker x 1

Welcome Guide x 1



Lanyard x 1



Type-C Charging Cable x 1

PRODUCT OVERVIEW



BASIC PRODUCT SPECIFICATIONS

Product Size: 146*72*50mm	
Bluetooth Version: V5.4	
Bluetooth Range: 10m	
Music Play Time: Up to 5 hours (Maximum volume), up to 16 hours (Medium volume)	
Frequency Response: 80Hz-20kHz	
Play Mode: Bluetooth, Memory card, and FM radio	
Battery Capacity: 1800mAh/3.7V	
Charging Input: Type-C	
Speaker Output: 8W	
*oraimo Lab test results	

DOWNLOAD THE APP

oraimo sound

iOS 12.0 or above

Android 6.0 or above

Download the app. Please scan the QR code or search "oraimo sound" in App Store or Google Play.


Download and set up the app to experience the following features:

Custom RGB Ring Lights
Choose your desired RGB presets (Standard, HeavyBass™, Vivid) or create a new EQ yourself.

Custom Equalizer
Choose your desired EQ presets (Standard, HeavyBass™, Vivid) or create a new EQ yourself.

PlayStandBoost Mode
The mode boosts the volume of the music while consuming less battery. By switching on it, you will get longer playtime in this mode.


USING YOUR SPEAKER

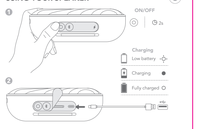

Long Press the Power Button for 2s
- The speaker will automatically power off after 5 minutes if no device is connected.
- The speaker will automatically power off after 30 minutes of inactivity.

Charge the Speaker
- Use the original Type-C cable to charge the speaker. Fully charge the speaker before first use.



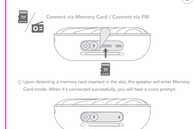

- When entering the FM mode for the first time, the speaker will automatically start searching FM stations.

CONTROLS



Play/Pause: Press once; **Volume Down:** Press once; **Previous Track:** Long press for 1s.
Volume Up: Press once; **Next Station:** Long press for 1s.

FM COMMANDS

Mute/Unmute: Press once; **Start/Stop Searching Stations:** Long press for 1s;
Volume Down: Press once; **Previous Station:** Long press for 1s.
Volume Up: Press once; **Next Station:** Long press for 1s.

CONTROLS

Music ; Pulse Cards: Tekan sekali; **Tunurkan Volume:** Tekan sekali; **Lagu sebelumnya:** Tekan lama selama 1 detik; **Lagu seterusnya:** Tekan lama selama 1 detik; **Main/Jeda:** Tekan sekali; **Kuasa:** Tekan lama selama 2 detik; **Sorotan/Irama/Rentak:** Tekan sekali; **Mode/Gambaran Pencahaya Ekzotik:** Tekan lama selama 1 detik; **Turunkan Volume:** Tekan sekali; **Station Seterusnya:** Tekan lama selama 1 detik; **Naikkan Volume:** Tekan sekali; **Station Sebelumnya:** Tekan lama selama 1 detik.

التحكم

الموسيقى ؛ بطاقات النبض: اضغط مرة واحدة؛ **رفع مستوى الصوت:** اضغط مرة واحدة؛ **الأغنية السابقة:** اضغط مطولاً لمدة ثانية واحدة؛ **الأغنية التالية:** اضغط مطولاً لمدة ثانية واحدة؛ **التشغيل/الإيقاف المؤقت:** اضغط مرة واحدة؛ **الطاقة:** اضغط مطولاً لمدة ثانيتين؛ **الإيقاع/الإيقاع/نمط الإضاءة المحفزة:** اضغط مطولاً لمدة ثانية واحدة؛ **خفض مستوى الصوت:** اضغط مرة واحدة؛ **المحطة التالية:** اضغط مطولاً لمدة ثانية واحدة؛ **رفع مستوى الصوت:** اضغط مرة واحدة؛ **المحطة السابقة:** اضغط مطولاً لمدة ثانية واحدة.

FM Hafuza Kwin ko Bagian / FM ke Bagian: Tekan sekali; **Kuasa:** Tekan lama selama 2 saat; **Mod Kuasa:** Tekan hudoong pasal. Bagian bagian sebagainya adalah ke satu dugaannya.; **4.2. FM Hafuza gan:** Tan; **Saluran Seterusnya:** Tekan lama selama 1 saat; **Saluran sebelumnya:** Tekan lama selama 1 saat; **Kuasa:** Tekan lama selama 2 saat; **Mod Kuasa:** Tekan hudoong pasal. **Saluran seterusnya:** Tekan lama selama 1 saat; **Saluran sebelumnya:** Tekan lama selama 1 saat; **Kuasa:** Tekan lama selama 2 saat; **Mod Kuasa:** Tekan hudoong pasal. **Saluran seterusnya:** Tekan lama selama 1 saat; **Saluran sebelumnya:** Tekan lama selama 1 saat; **Kuasa:** Tekan lama selama 2 saat; **Mod Kuasa:** Tekan hudoong pasal.

Connect to Memory Card / Connect via FM

Upon detecting a memory card inserted in the slot, the speaker will enter Memory Card mode. When it's connected successfully, you will hear a voice prompt.

Enter FM mode

When entering the FM mode for the first time, the speaker will automatically start searching FM stations.

Restart/Stop searching stations

Long press for 1s.

Switch among Bluetooth/Memory Card/FM Mode: Press twice;

Disconnect and Re-pairing: Press once; **Turn On/Off RGB Ring Lights:** Long press for 2s; **Restore to Factory Settings:** Long press the two buttons for 5s

FB Ayarlar : oraimo Spacebox : ACTIVE ; oraimo Spacebox ; oraimo Spacebox ; oraimo Spacebox ; oraimo SpaceBox ; eşleştirilebilir cihazlar. **; AUJARAGE ; APPARAGE ; CONNECTE ;** Le noyau Bluetooth d'abord. Appuyez sur le noyau Bluetooth vous devez

ID Pengendalian :oraimo Spacebox ; NYALA ; oraimo Spacebox ; oraimo Spacebox ; oraimo Spacebox ; oraimo SpaceBox ; MATIKAN/MENGUNCI ; MATIKAN/MENGUNCI TERKUNCI; perangkat Bluetooth terlebih dahulu. Bluetooth inti yang pertama. Anda perlu

oraimo Spacebox :oraimo Spacebox ; oraimo Spacebox ; oraimo Spacebox ; oraimo SpaceBox ; ضوابط **oraimo Spacebox** ; **oraimo Spacebox** ; **oraimo Spacebox** ; **oraimo Spacebox** ; **oraimo SpaceB