WELCOME GUIDE


Traveler Link L22 | OPB-5205CM

USAGE INSTRUCTION

1. The power bank is equipped with two built-in Type-C and Micro-USB charging cables to charge your device, and the Type-C cable can be used to recharge your power bank.

Micro-USB Cable	Output	
Type-C Cable	Output	

2. 2 ways of recharge: The Type-C port and Type-C cable are used for recharging power bank.

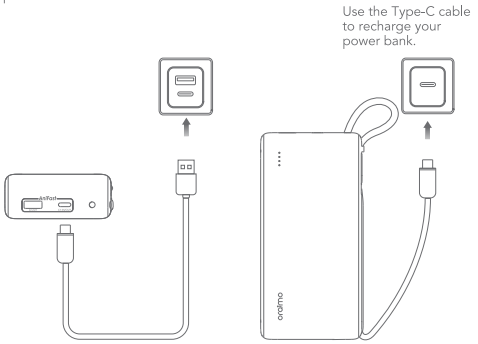

3. Press the power button to view the battery percentage. The four LED indicators represent the battery level of 25%, 50%, 75% and 100%.
4. When the power bank detects a fast-charging device, it will enter fast charging mode, and the indicator light will turn green.
5. Double press the power button to enter low-current charging mode. The indicator light will display a flowing pattern. Double press the power button again to exit low-current mode.
6. The power bank will automatically shut off after 30 seconds in the absence of any connected devices. In low-current charging mode, press and hold the power button to power off the device.

oraimo
smart accessories

SAFETY INSTRUCTIONS

- Power bank can be recharged for an extended 1-2 hours after the first three full charges, which allowing the power bank to achieve optimal performance.
- Power bank can be fully recharged and discharged for the first three times achieve optimal performance.
- Do not store the power bank in excessive heat or in a humid environment, such
- Using chargers or power supply units that are not recommended by or sold with the power bank may increase the risk of fire or personal injury.
- The permissible temperature range for using the power bank should be between 0°C and 45°C.
- Avoid disassembling, modifying, inserting any foreign objects into,or immersing in water or any liquid to prevent liquid leakage, overheating, fire or explosion.
- If the power bank is not in use for a long period of time, ensure it is recharged regularly once every three months, and it is recommended to store more than 50% of the power.
- When the power bank is recharged, some heat may be generated which is normal. No need to worry.
- Keep the power bank out of reach of children to prevent them from swallowing or entangling it. Furthermore, do not expose it to heat or fire.
- Cleaning the power bank should not be done with any harmful chemicals or detergents.
- Overuse, intense shocks or drops may cause damage to the power bank.
- Utilize only original or certified cables for connecting.