

# Backljus med blixtljus-funktion

## Tekniska specifikationer:

- Godkänt som backljus, ECE R23
- Med godkänt blixtljus, ECE R65
- 9-36 VDC

## Läs instruktionerna noggrant innan du monterar och installerar backljuset!


1. Håll kylflänsarna rena och fria för att upprätthålla nödvändig kylning
2. Kontrollera lagar som reglerar backljusa för korrekt montering och bruk
3. Koppla bort jordanslutningen från batteriet (märkt "-") för att undvika oavsiktlig kortslutning innan anslutning av nytt kablage
4. Dra de nya kablarna längs med redan existerande kablar, använd tejp/buntband om nödvändigt.  
Se till att kablarna inte är i närheten av några rörliga/heta delar i motorrummet

## Montering och installation

1. Borra 7 mm hål för skruvplaceringen på den yta där du vill montera
2. Placera först brickan och dra sedan åt muttern ordentligt
3. Koppla in kablarna enligt nedan:
  - **Svart:** Backljus/blixtljus "-"
  - **Röd:** Backljus "+"
  - **Gul:** Blixtljus "+"
  - **Vit:** Blixtljus-synkronisering "+"

### Instruktioner för synkronisering av blixtljus

- Vid installation av två lampor kopplas de vita kablarna samman.
- Anslut den vita kabeln till "+" i cirka 3 sekunder för att synkronisera lampornas blyxmönster.
- Anslut därefter den vita kabeln till "+" i cirka 1 sekund för att växla mellan synkront (samtidigt) och asynkront (växelvis) blinkande.
- Funktionen för asynkront blinkande stöds endast vid installation av två lampor. Vid fler än två lampor är endast synkronisering möjlig.

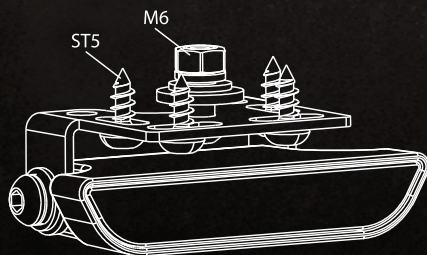

33490606

## Reverse light with strobe function

### Technical specifications:

- Approved as reverse light, ECE R23
- With approved strobe light, ECE R65
- 9-36 VDC

## Read the instructions carefully before mounting and installing the light!


1. Keep the cooling fins clean and unobstructed to maintain proper cooling
2. Check local laws regulating reverse lights to ensure proper installation and usage
3. Disconnect the negative battery terminal (marked "-") to avoid accidental short circuits before connecting any new wiring
4. Route the new cables alongside existing wiring, using tape or zip ties if necessary. Make sure the cables are not near any moving or hot parts in the engine bay

## Mounting and installation

1. Drill a 7 mm hole for the mounting screw in the surface where you want to install the reverse light
2. First place the washer, then securely tighten the nut
3. Connect the cables as follows:
  - **Black:** Reverse/strobe light "-"
  - **Red:** Reverse light "+"
  - **Yellow:** Strobe light "+"
  - **White:** Strobe light synchronization "+"

### Instructions for strobe light synchronization

- When installing two lights, connect the white wires together
- Connect the white wire to positive (+) for approximately 3 seconds to synchronize the strobe pattern of the lights
- Then connect the white wire to positive (+) for approximately 1 second to switch between synchronous (simultaneous) and asynchronous (alternating) strobe
- The asynchronous strobe function is only supported when two lights are installed. When more than two lights are connected, only synchronization is possible.

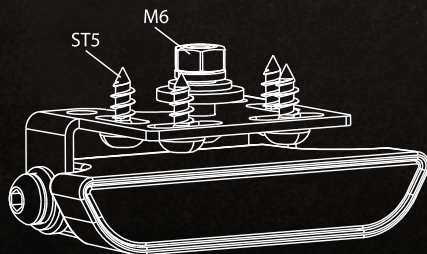

33490606