



FRO-COR-AM-001

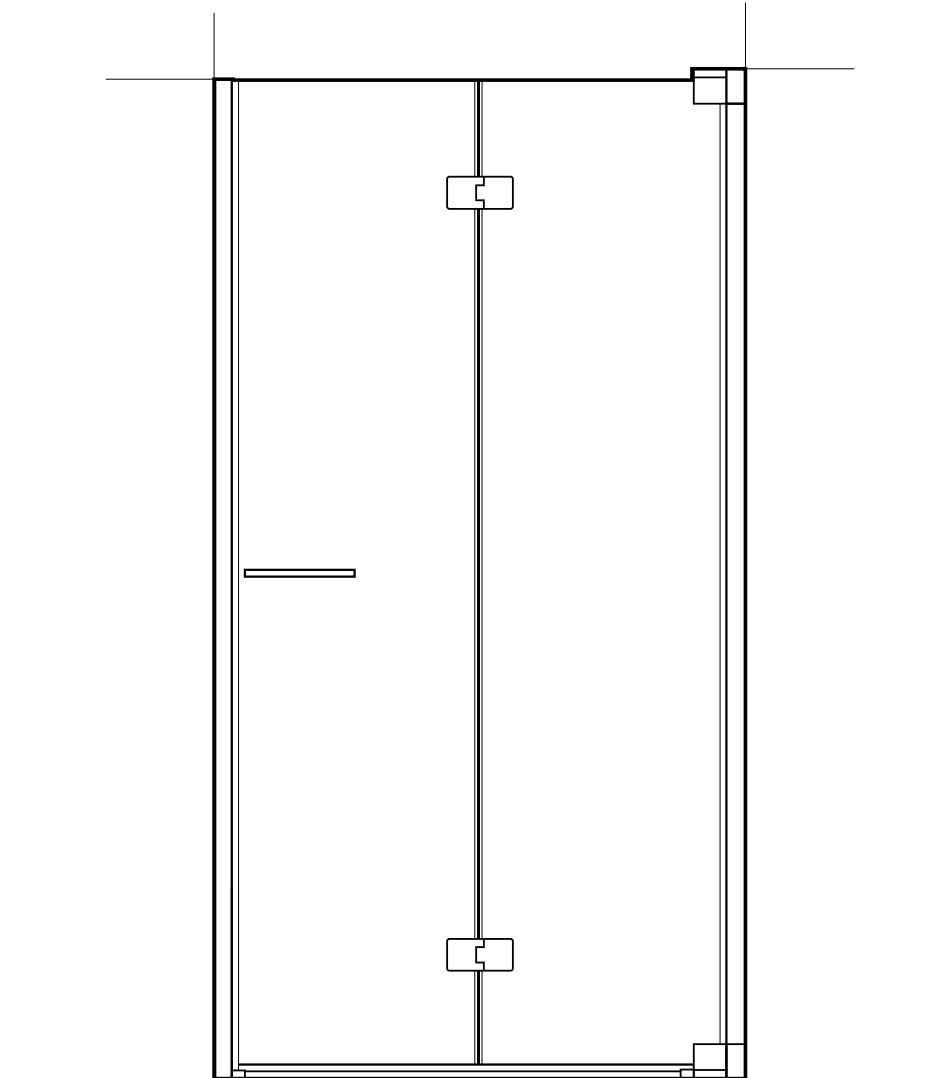


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA //DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


A

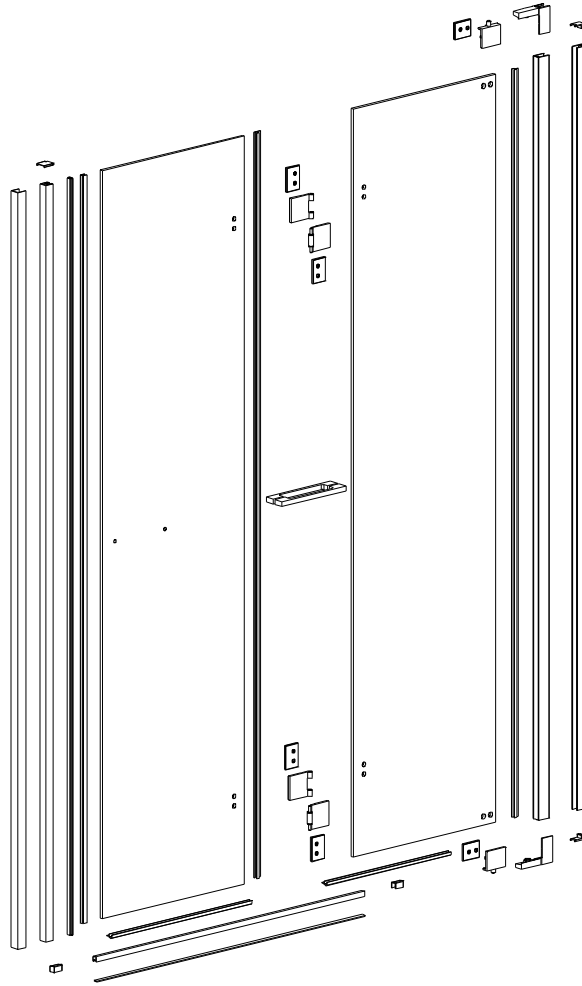

B

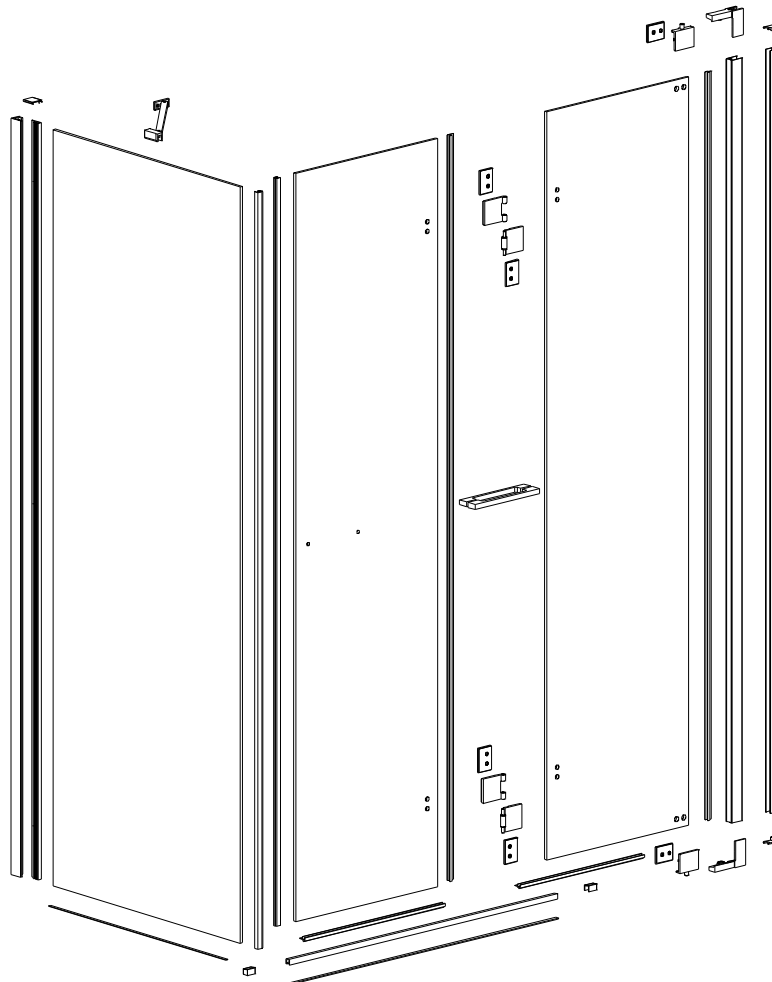

M-01



1


A

M-02



1

M-03

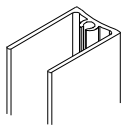


1

M-04




1

M-05




1

M-06



2

M-07



1

M-08



1

M-09



1

M-10




1

M-11




1

M-12




2

M-13




1

M-14




1

M-15



1

M-16



1

M-17



2

M-18



12

M-19



6

M-20



6

M-21




6

M-22



6


M-23



1


B

M-24



1

M-25



1

M-26



1

M-27



1

M-28



2

M-29





2


M-30




3




A

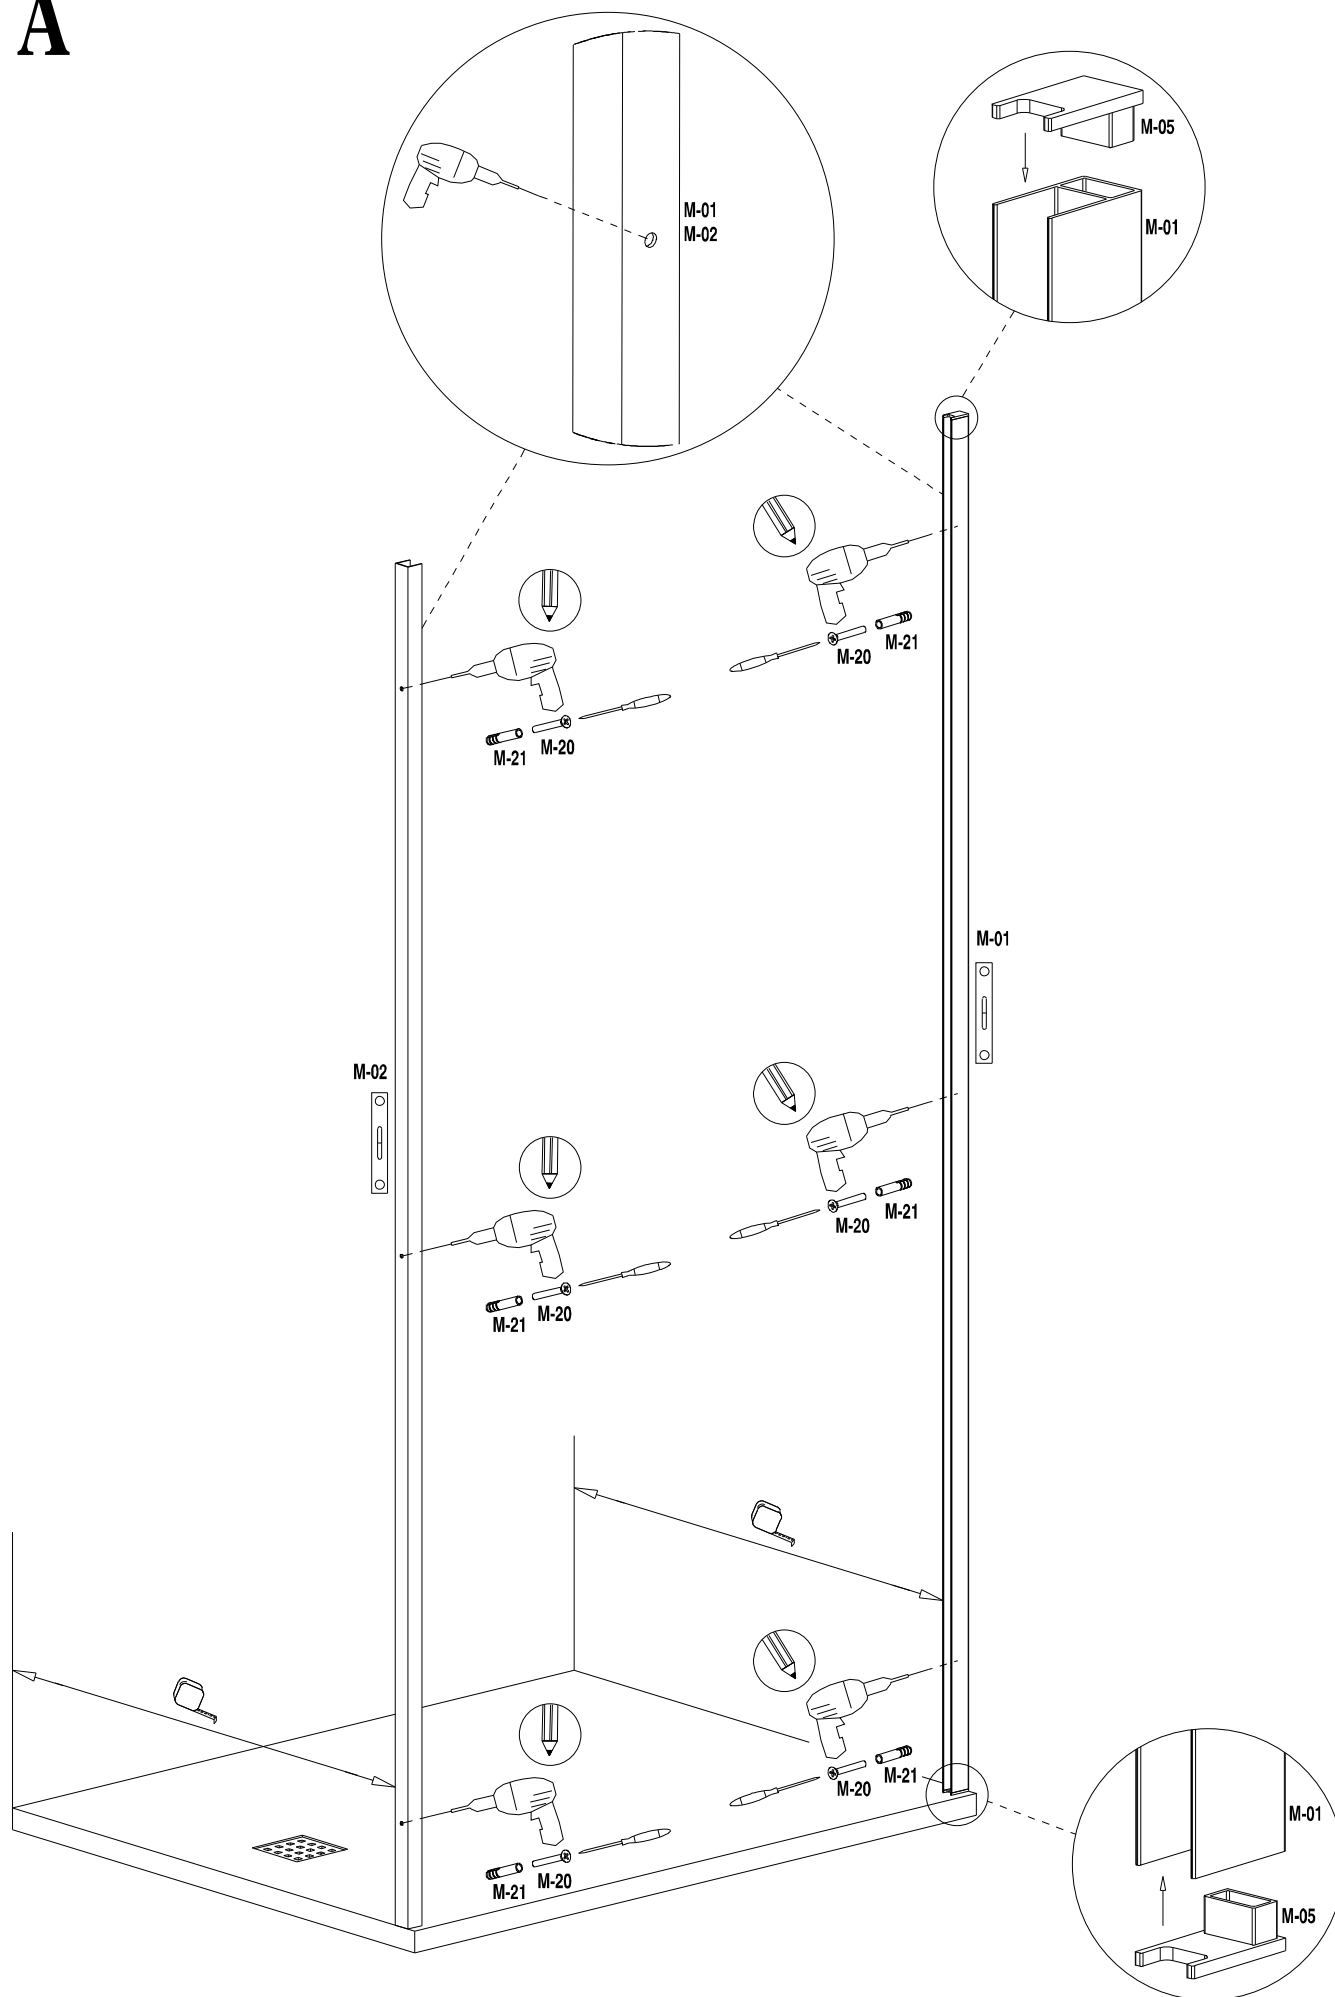





B

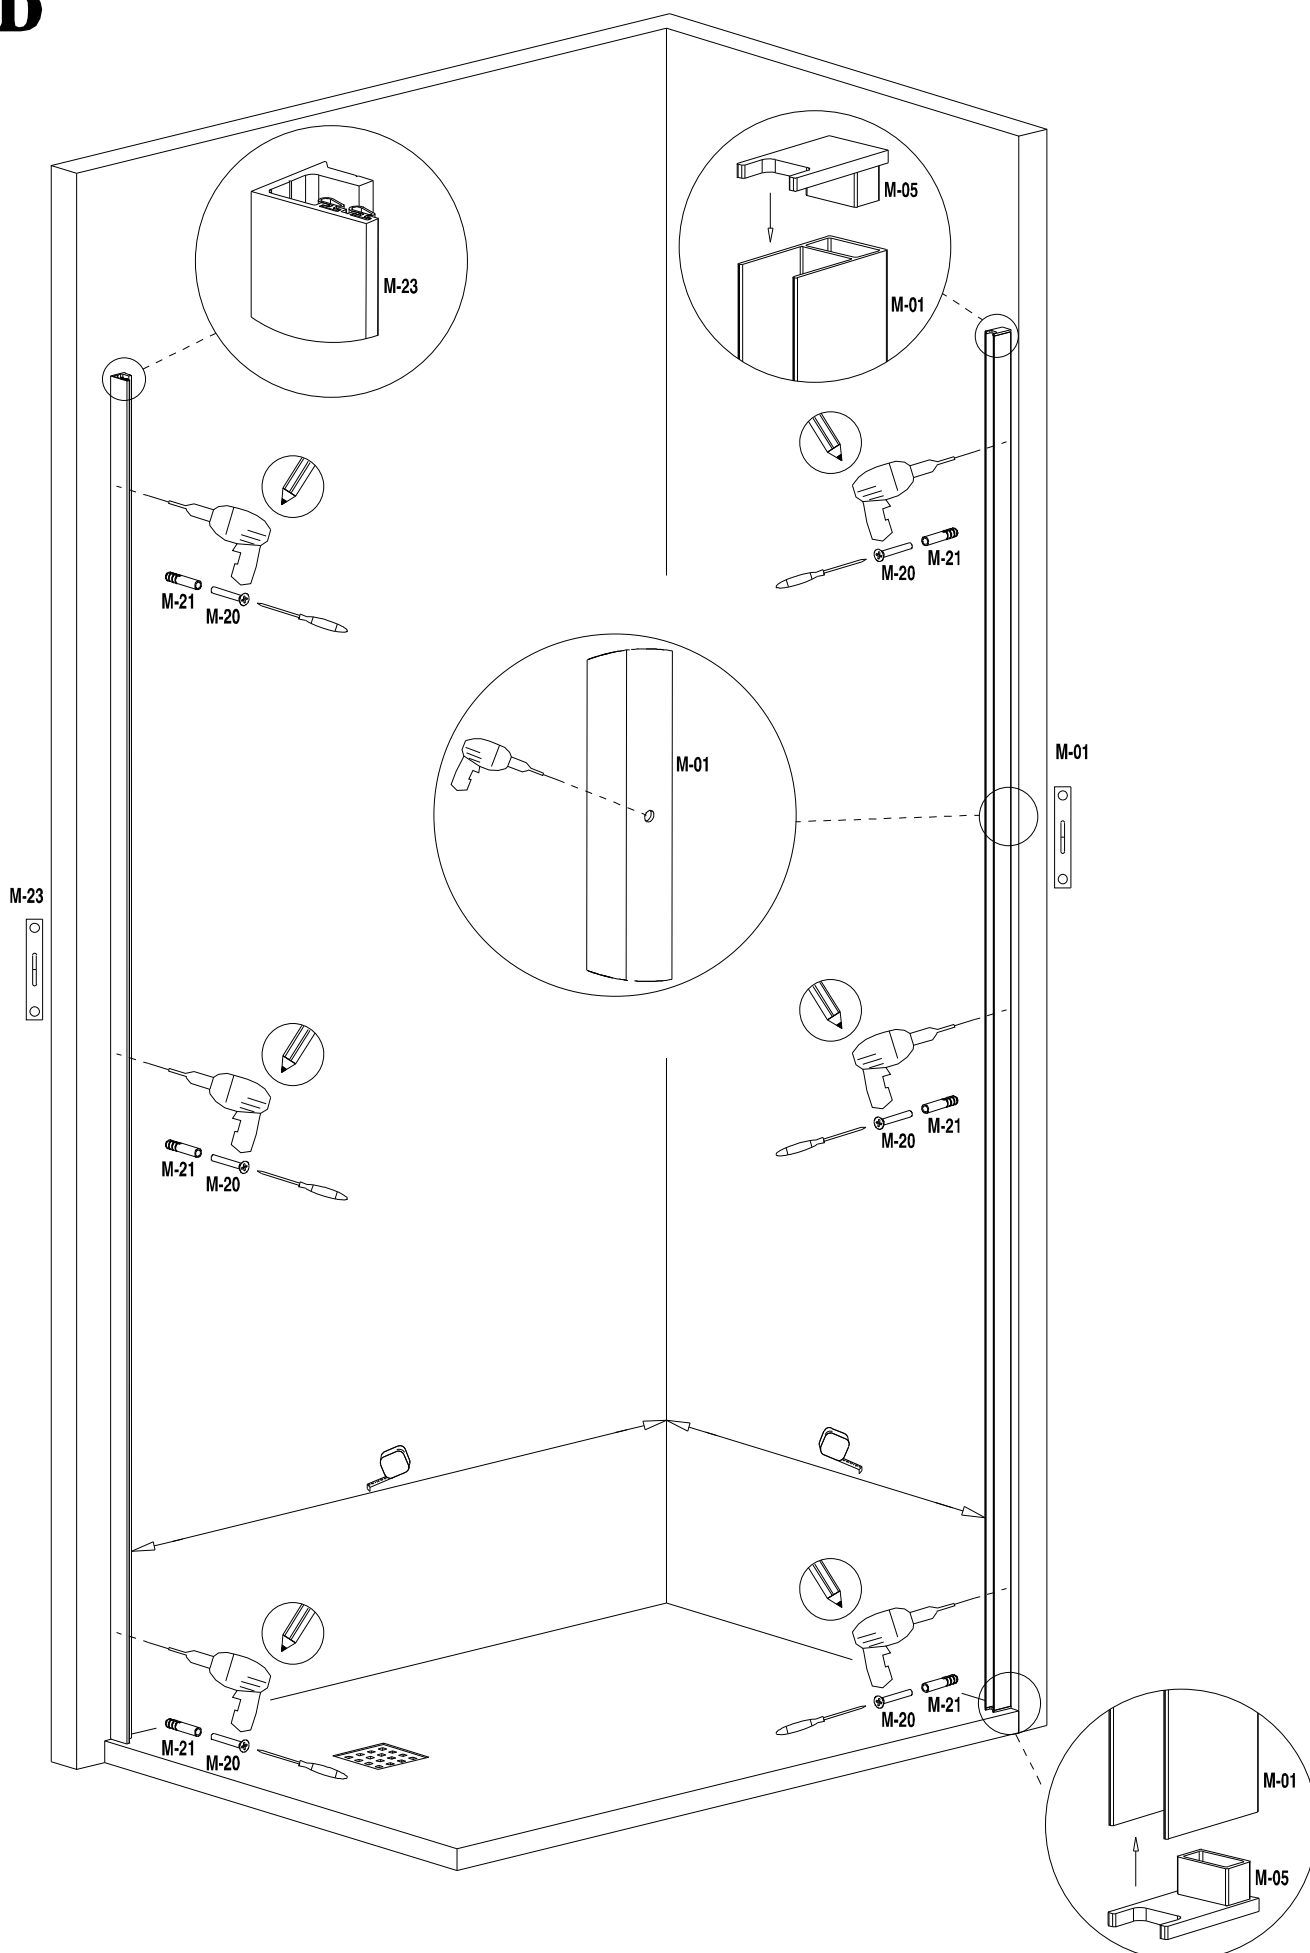




A-B

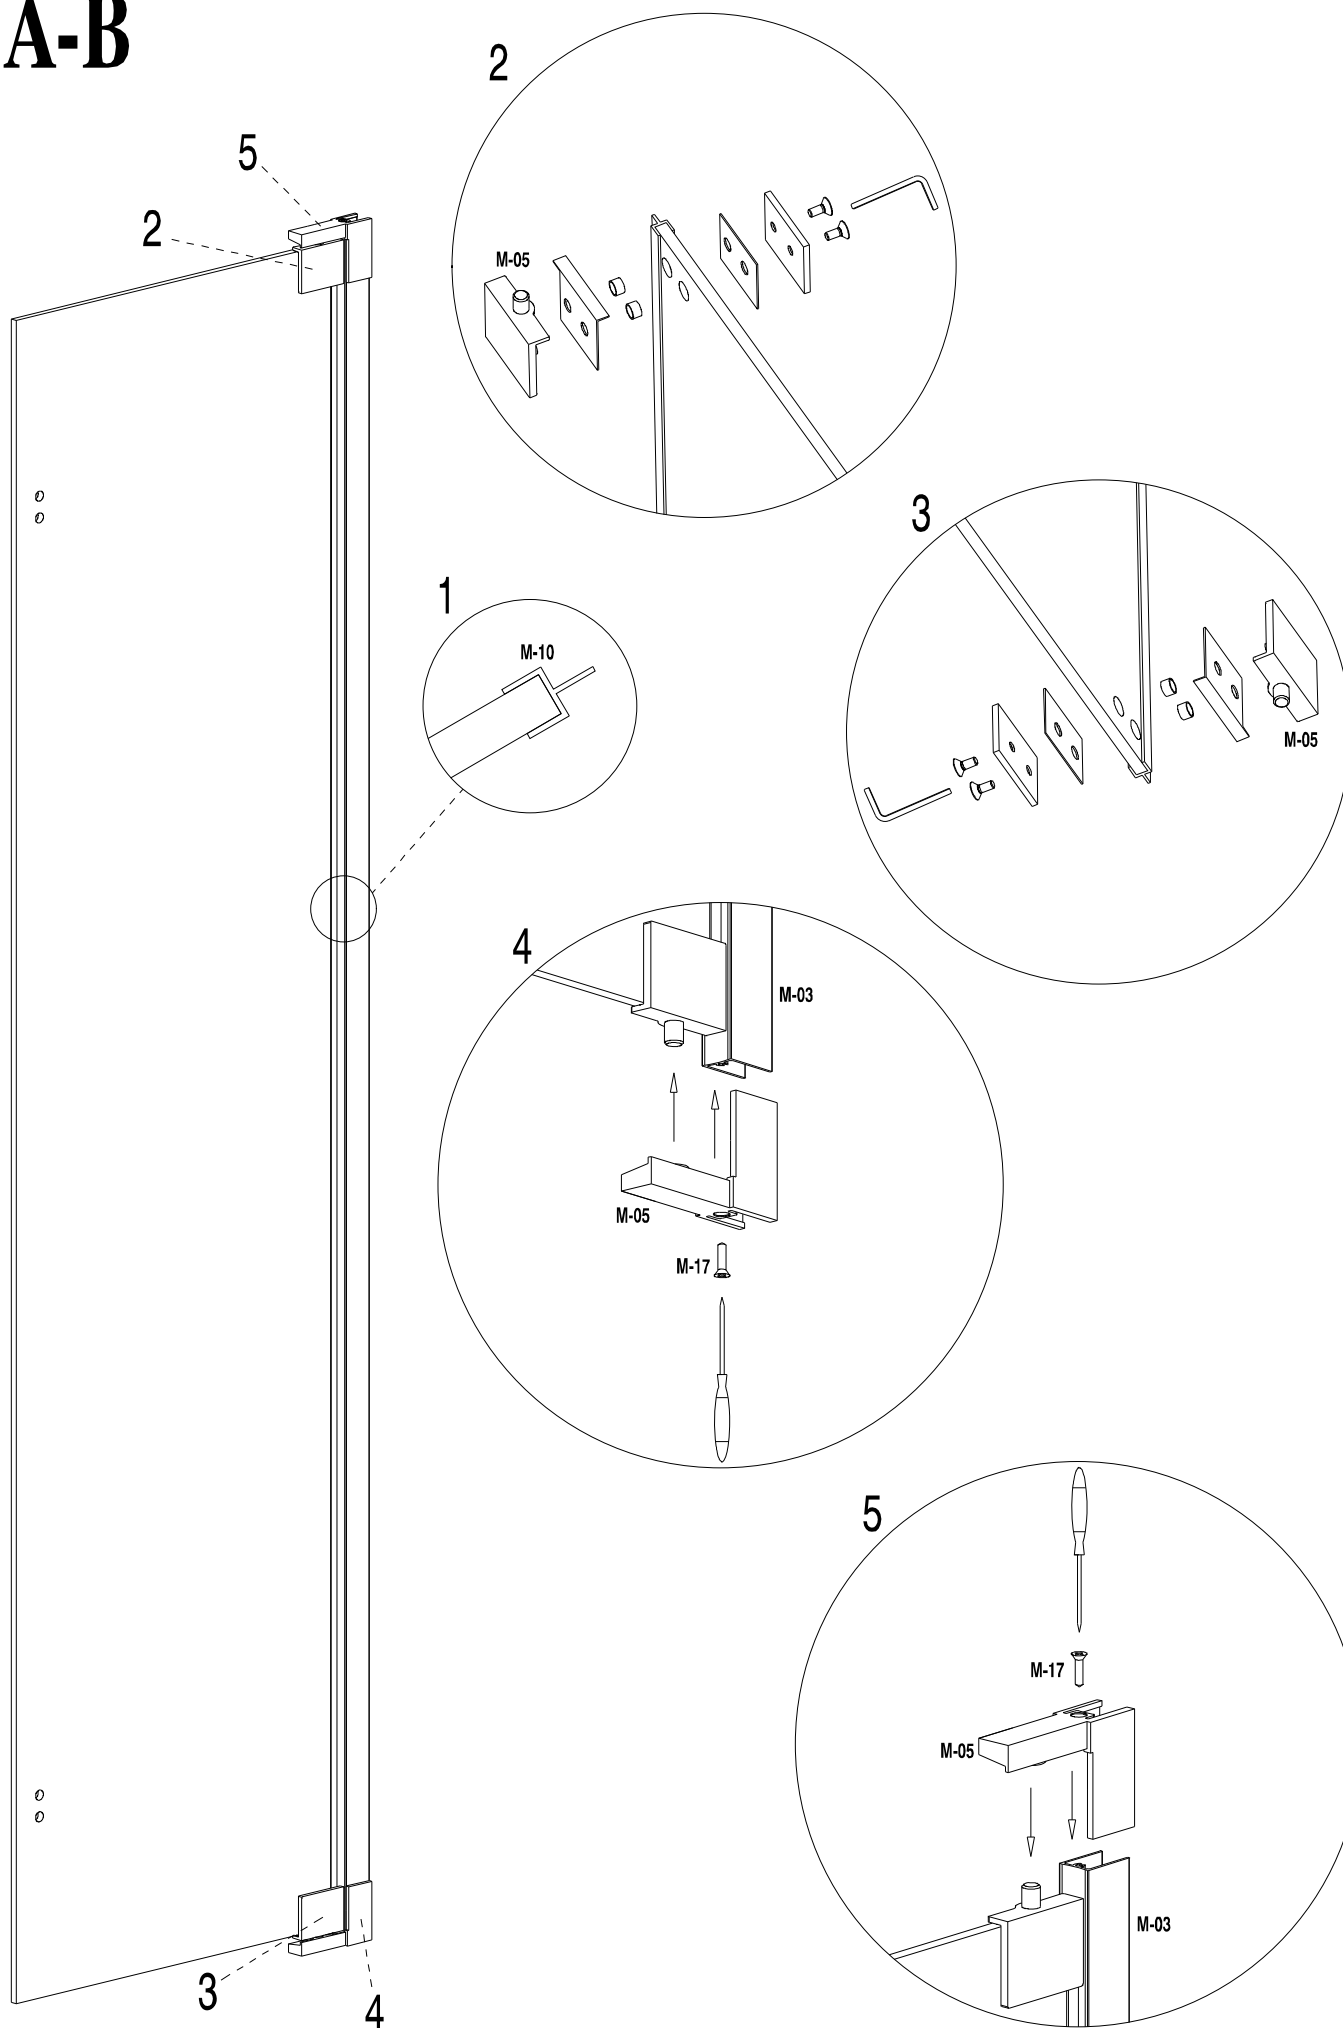





A-B




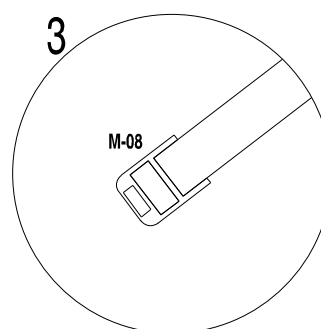
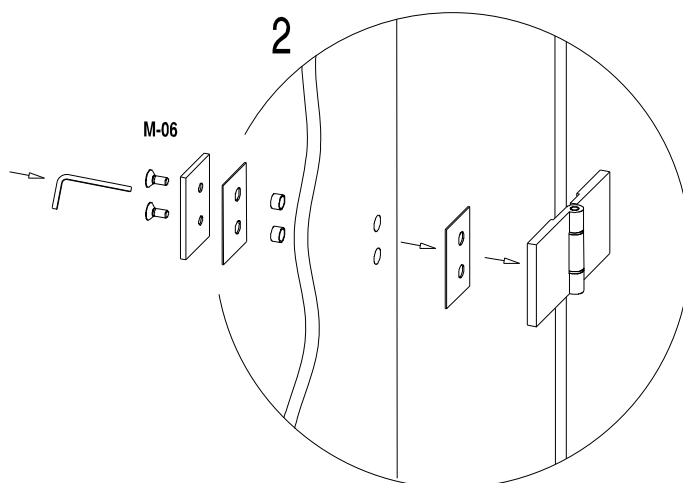
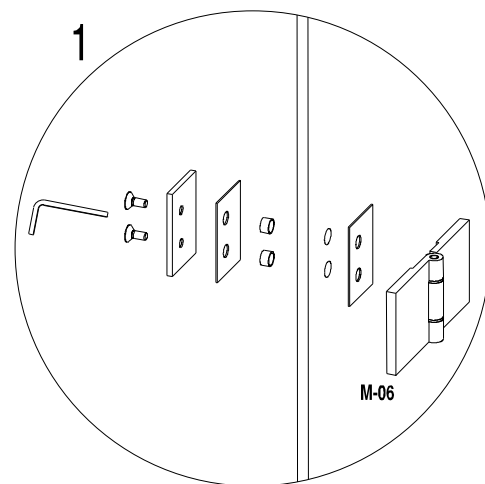
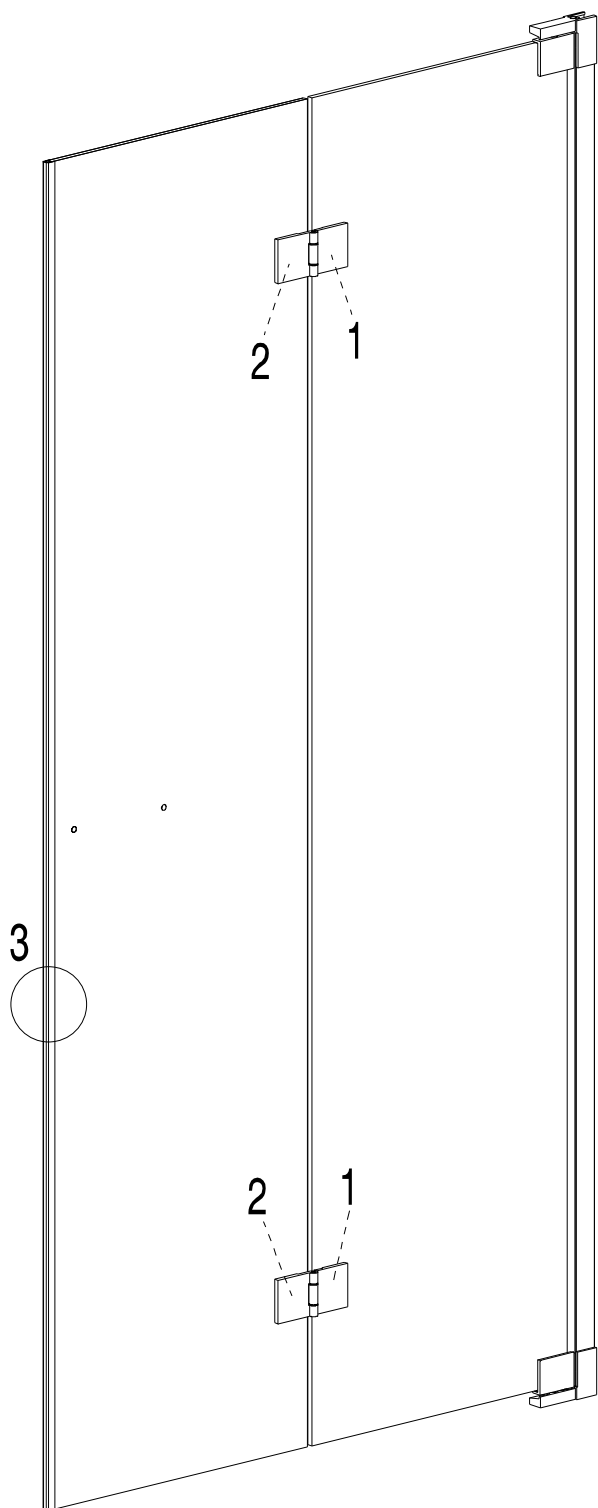


A

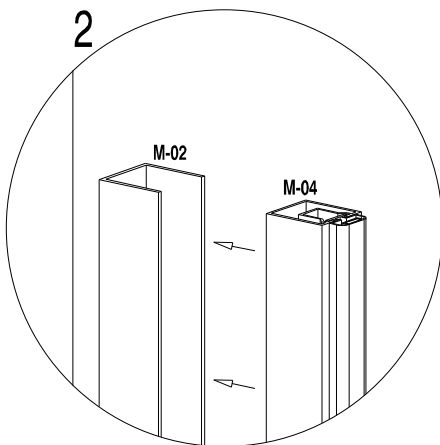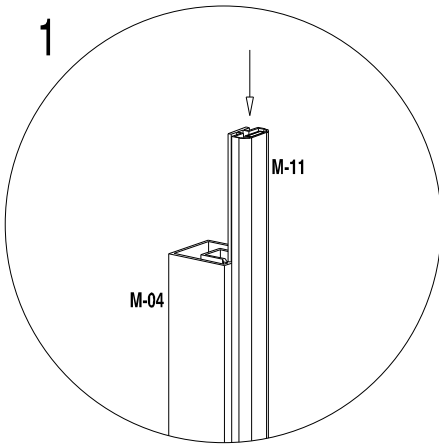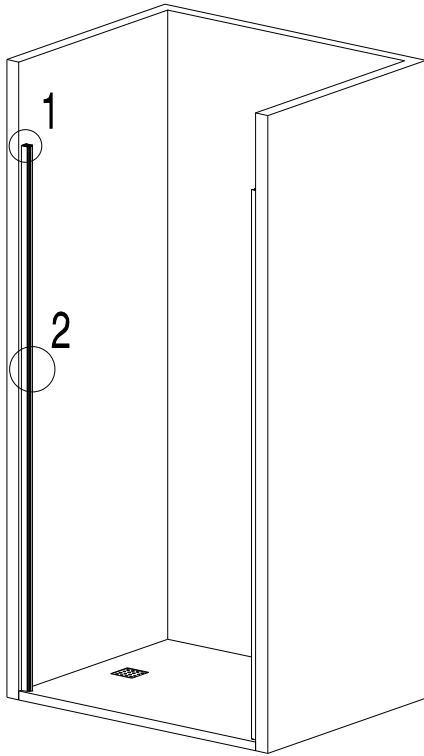







B

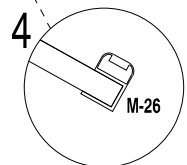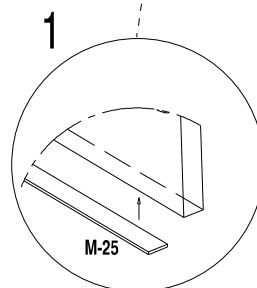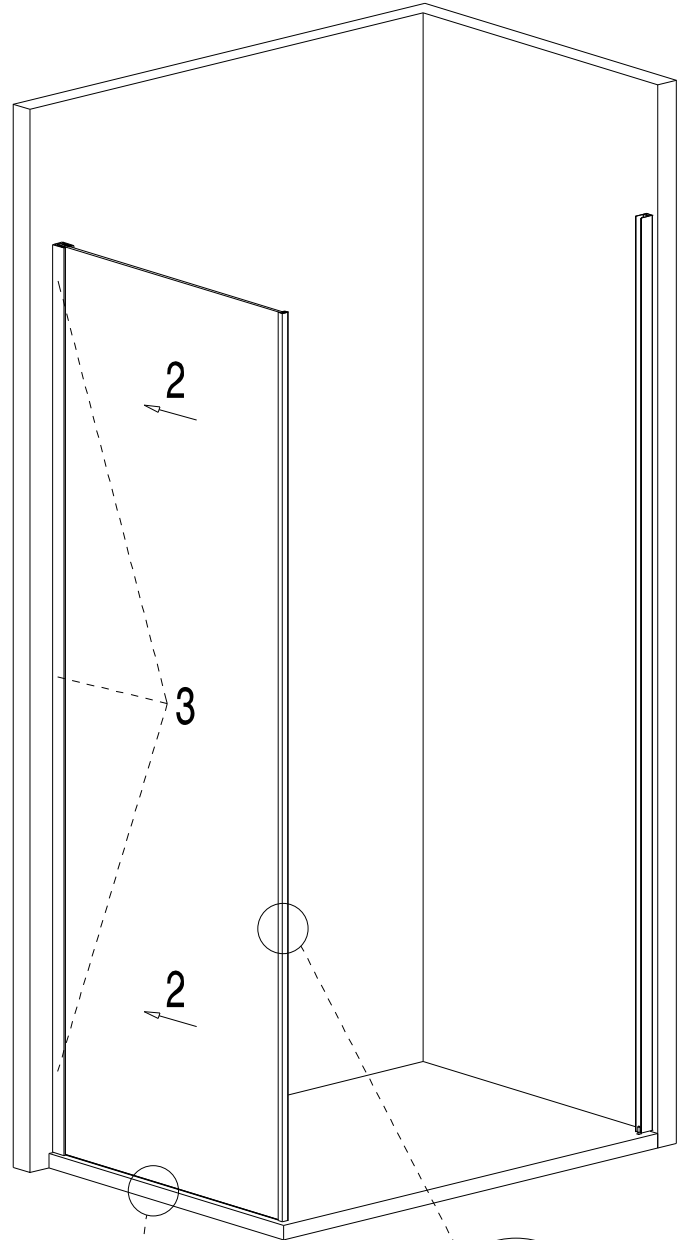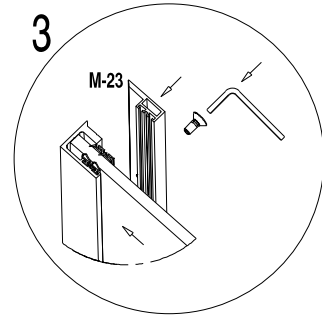

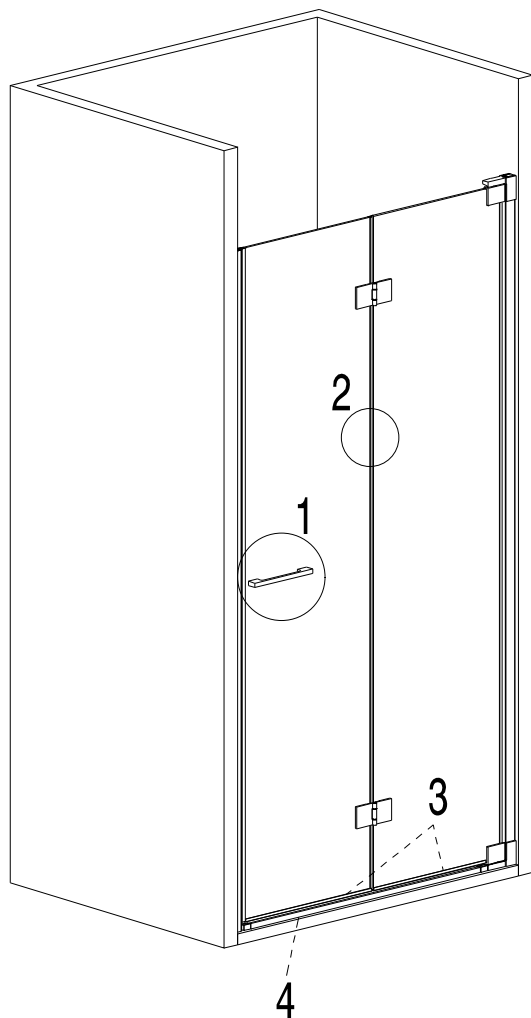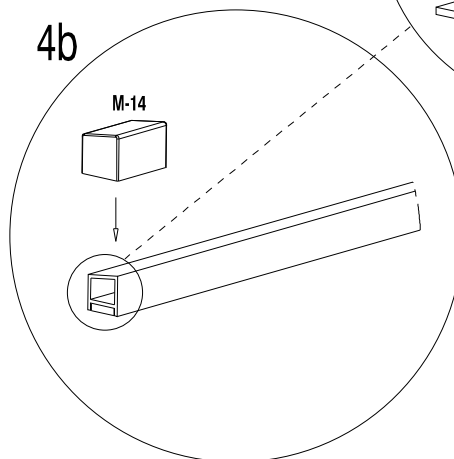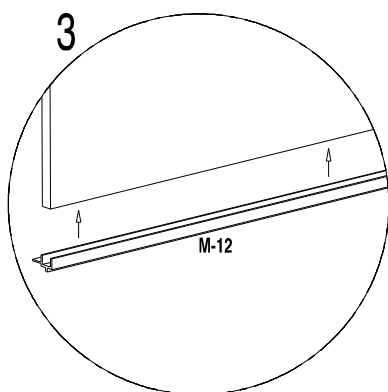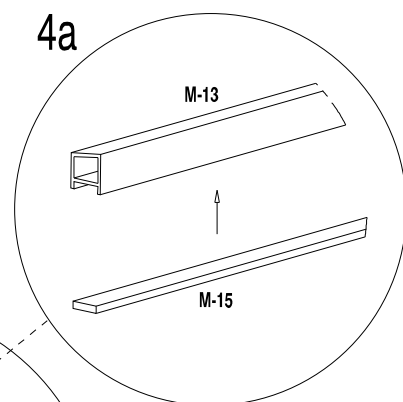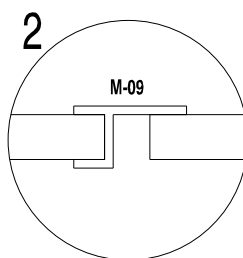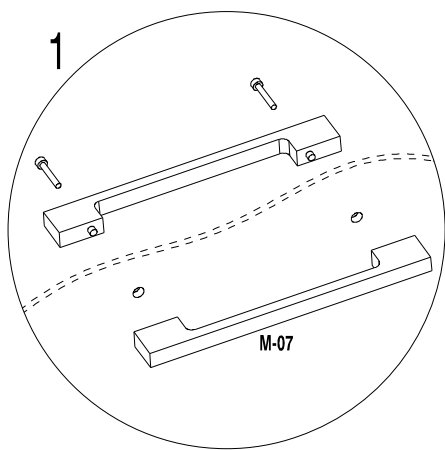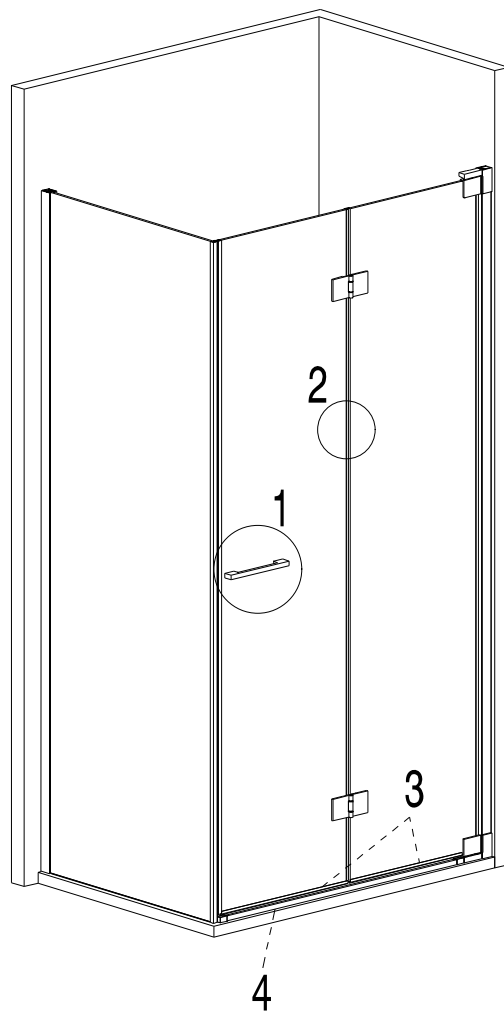A**B**




A

3a

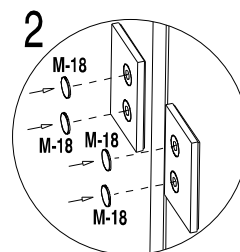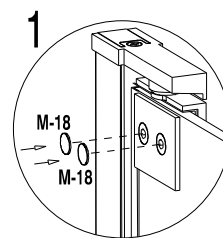
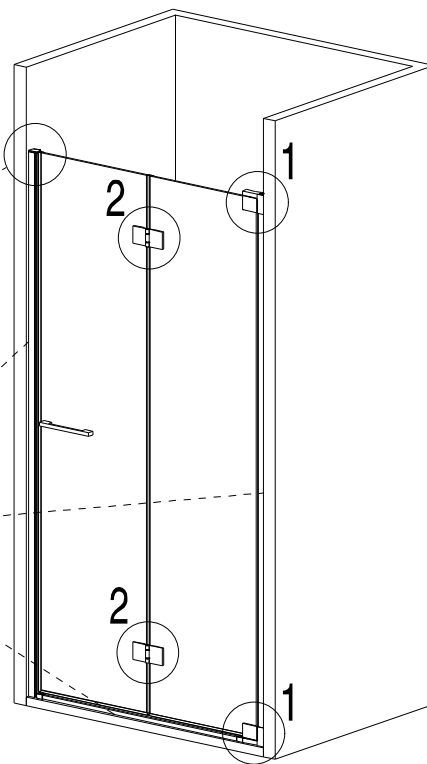

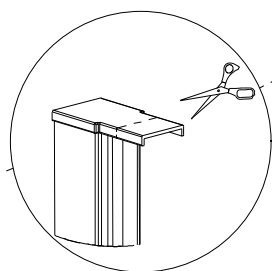
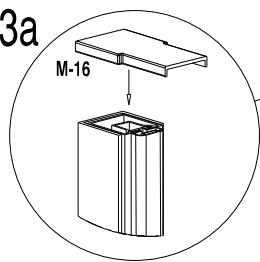


B


4

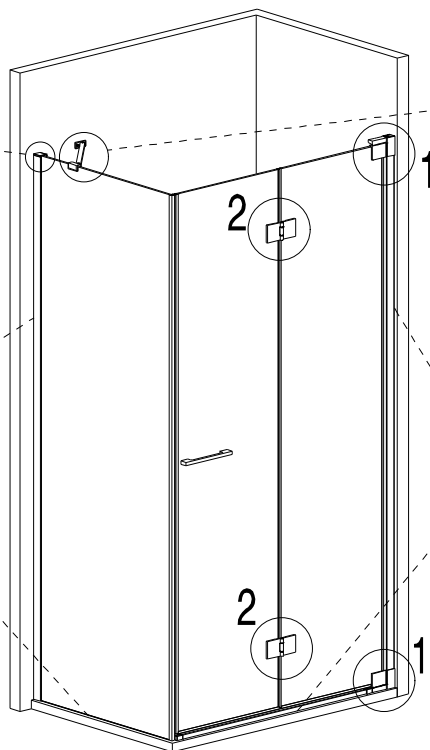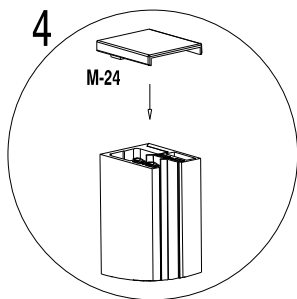

3

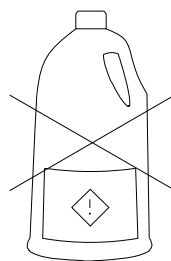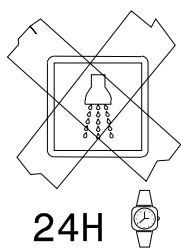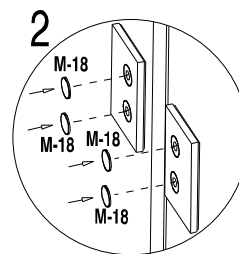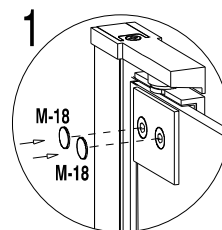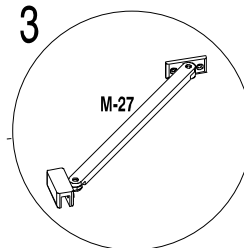

X

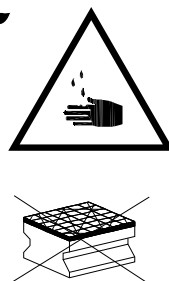

✓

