



# FRO-LIB-AM-000

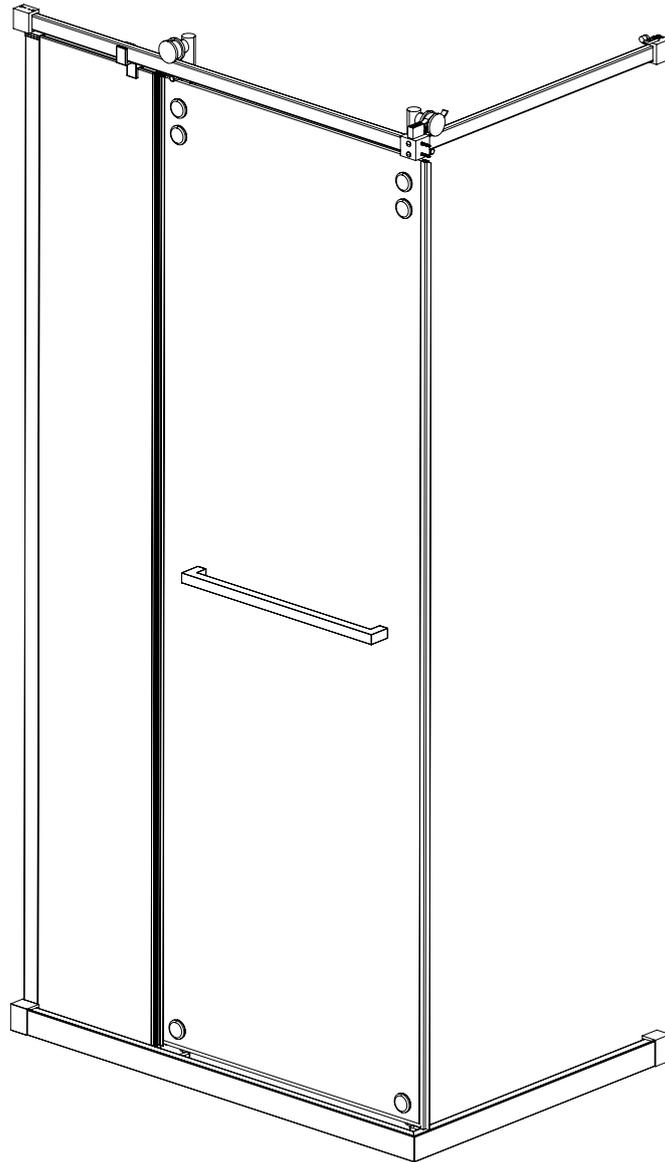


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //  
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //

---

M-01  
x1



M-11  
x2




M-21  
x1




M-02  
x1



M-12  
x2



M-22  
x1




M-03  
x1



M-13  
x2



M-23  
x11



M-04  
x1



M-14  
x1




M-24  
x1




M-05  
x2



M-15  
x1




M-25  
x11



M-06  
x1



M-16  
x2



M-07  
x1



M-17  
x2




M-08  
x1




M-18  
x2




M-09  
x1




M-19  
x1




M-10  
x1







M-20  
x1







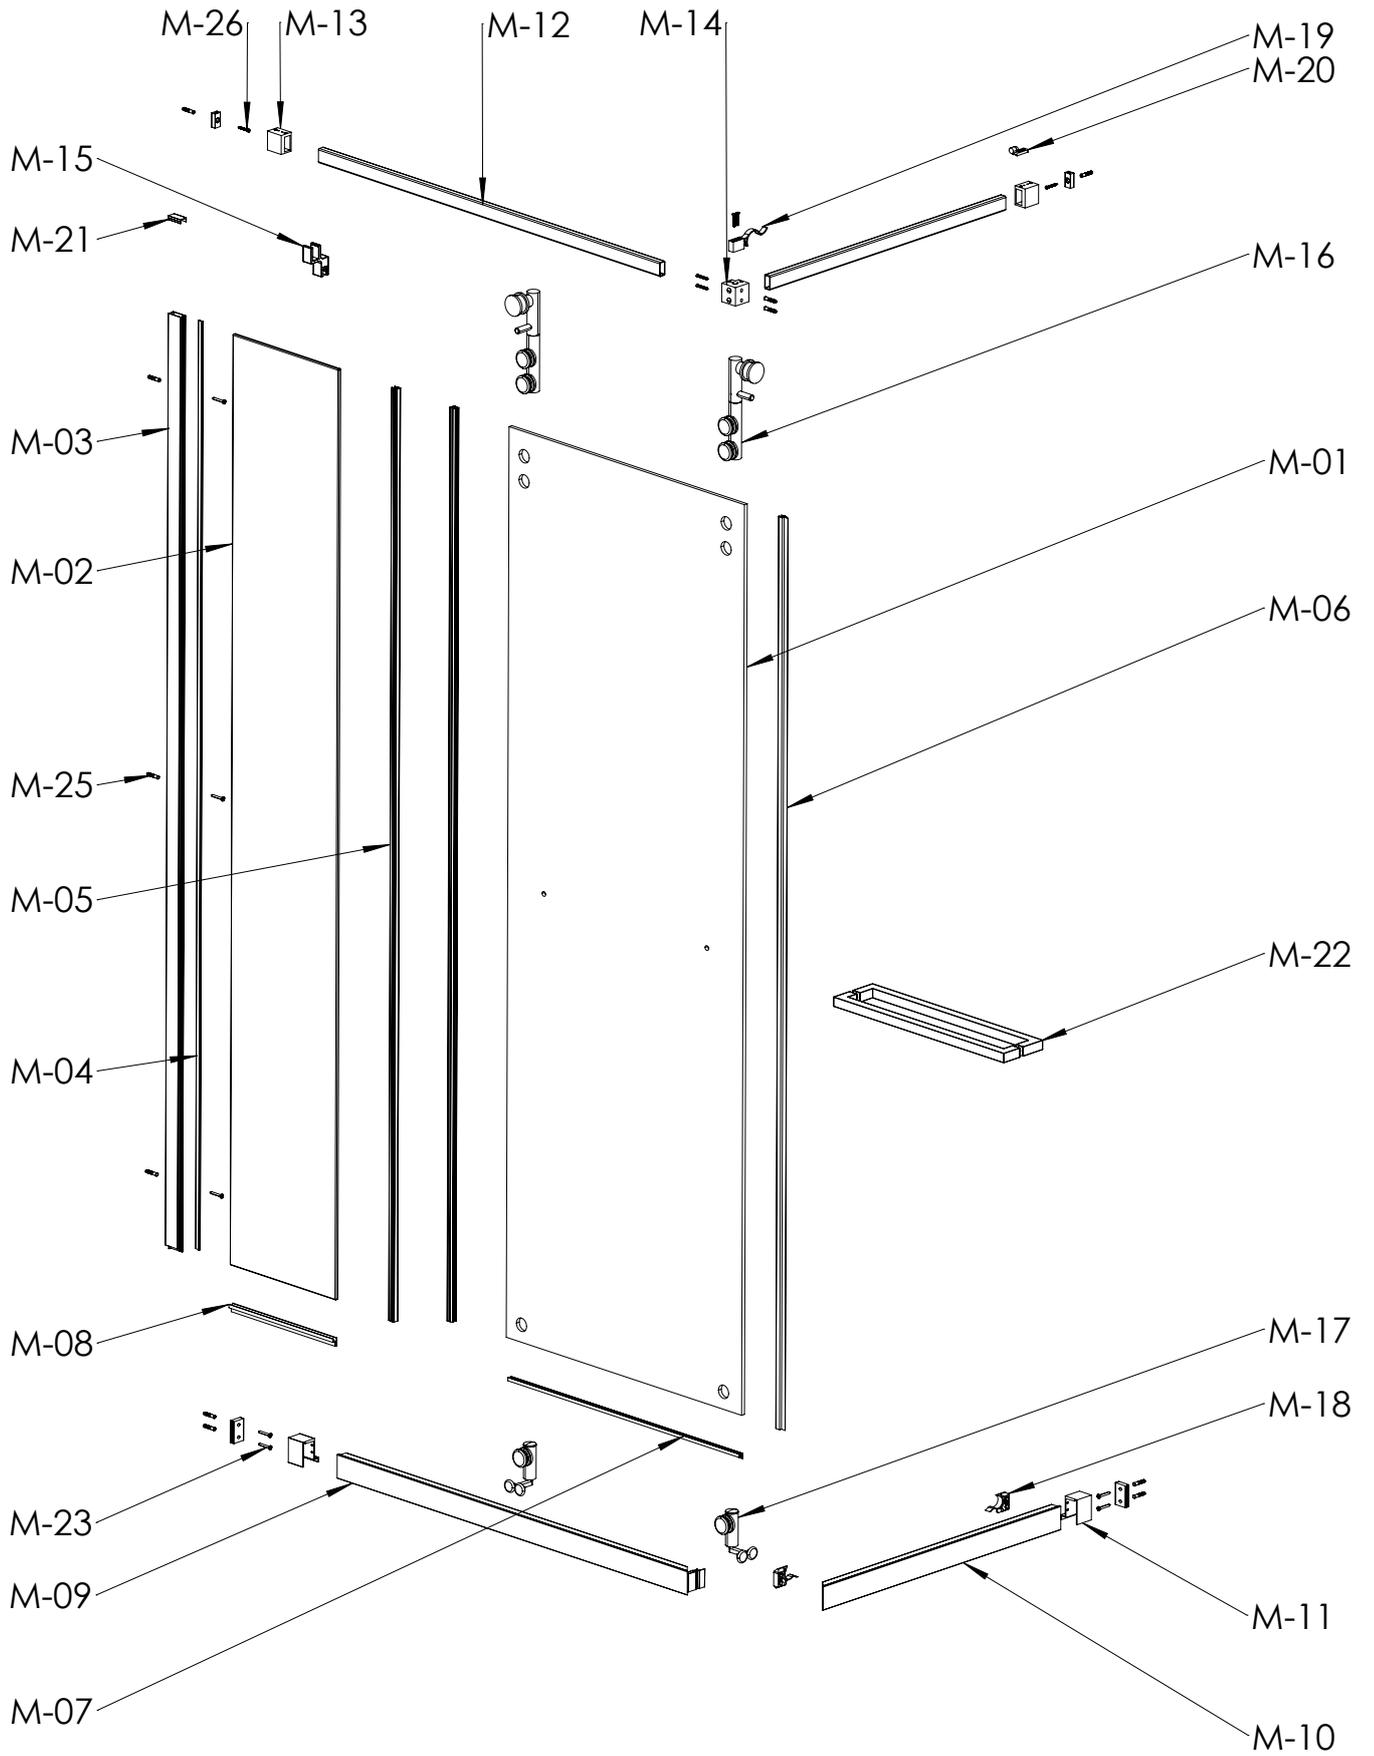


1

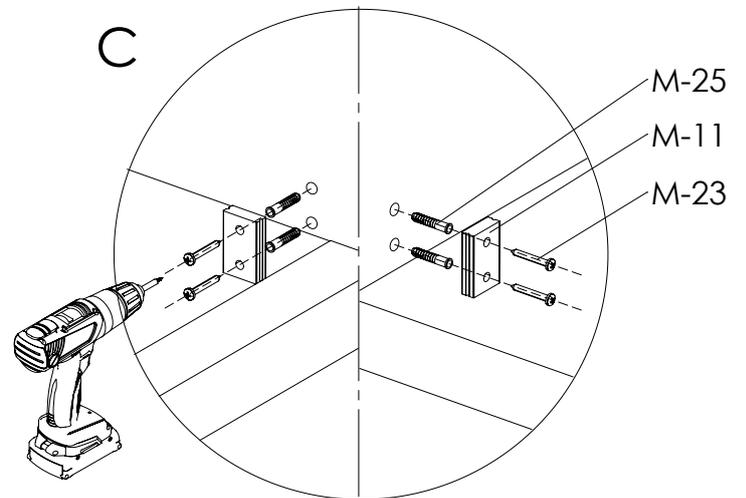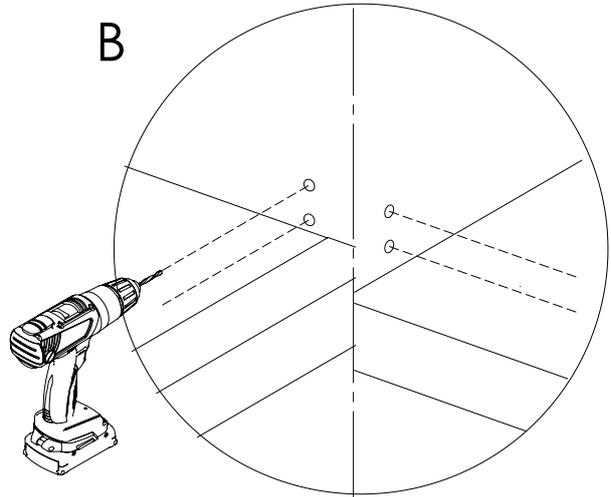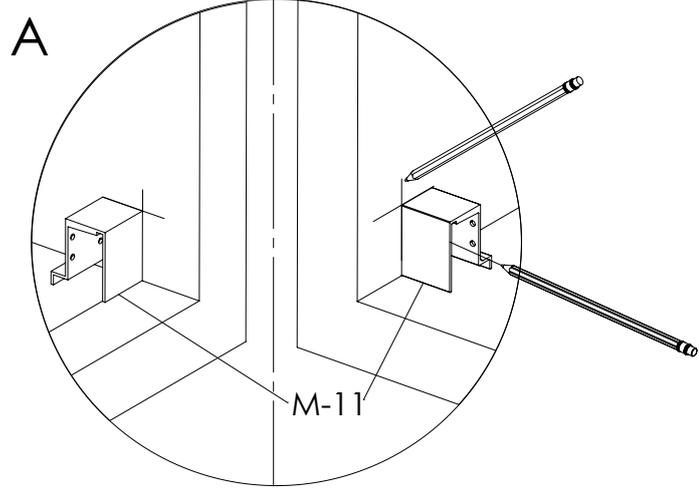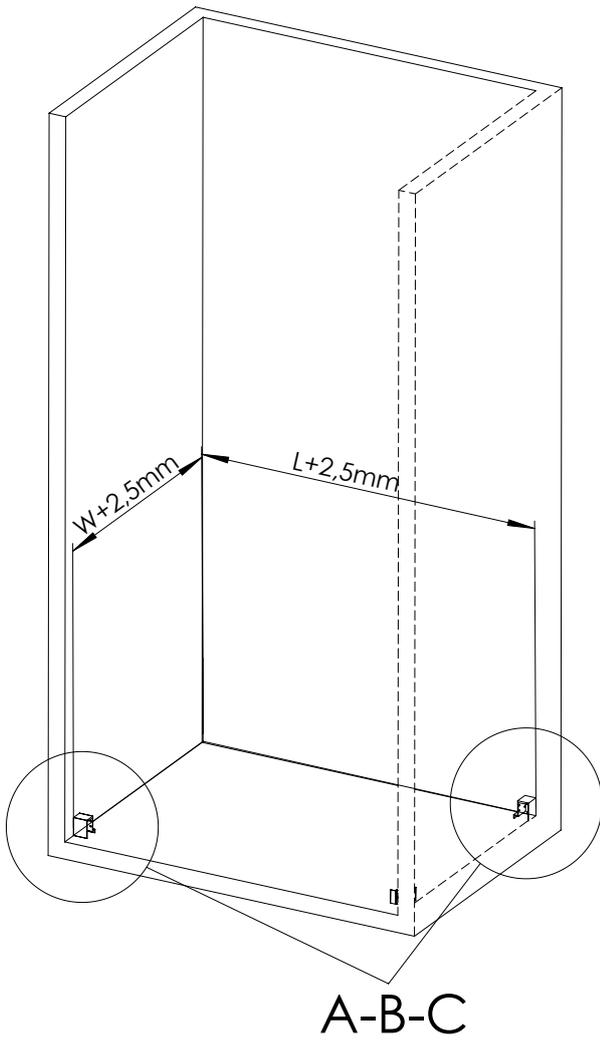


# 2

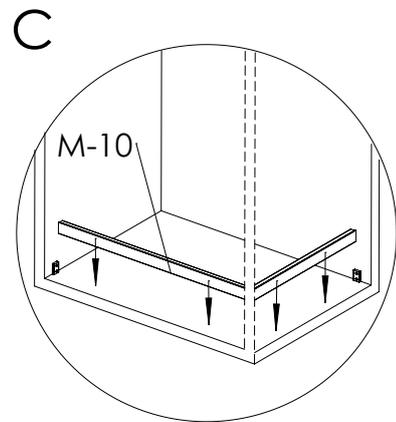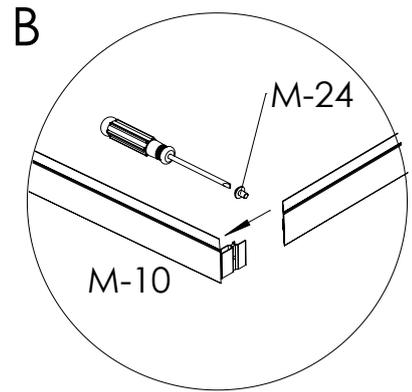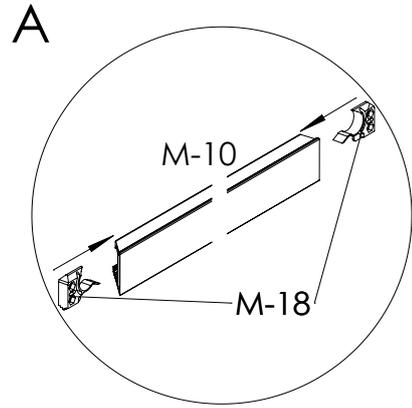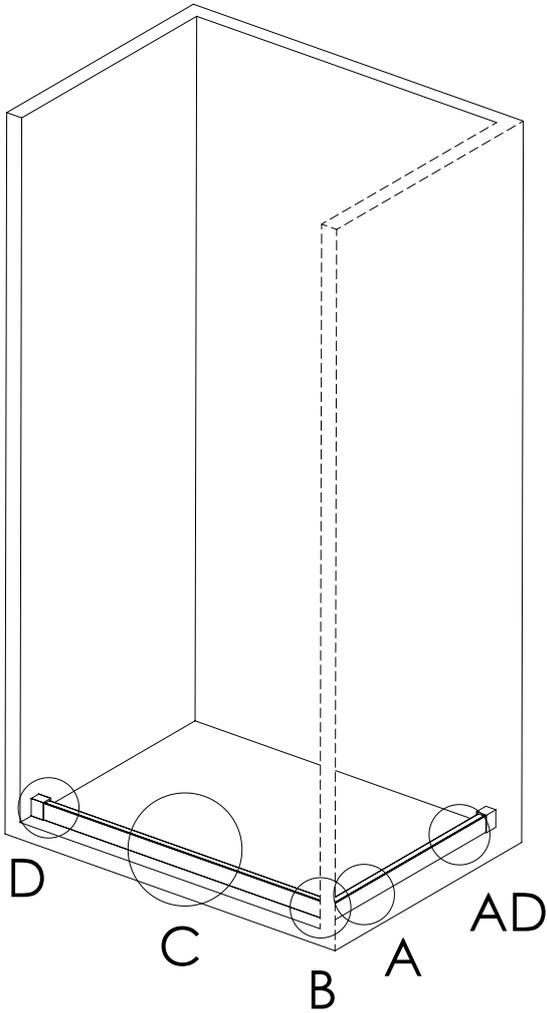








## D.2

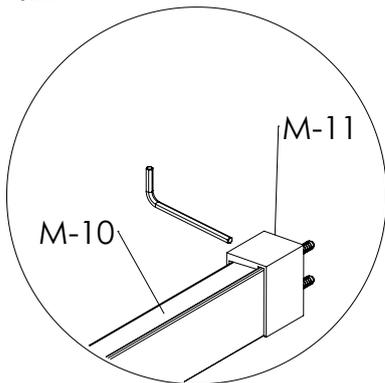






## D.1

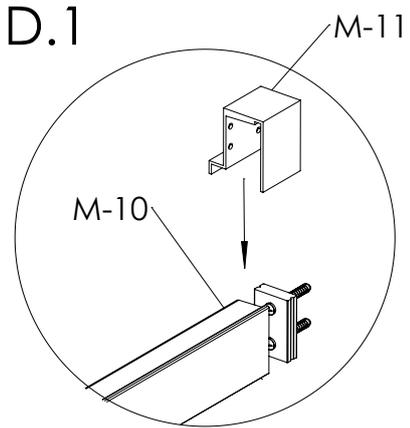



# 3

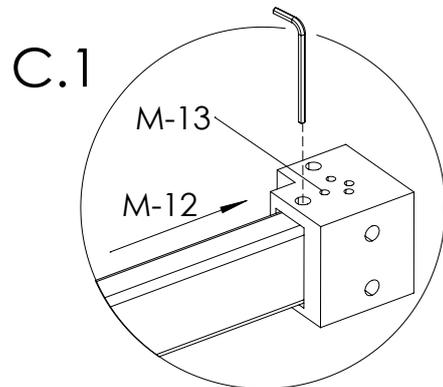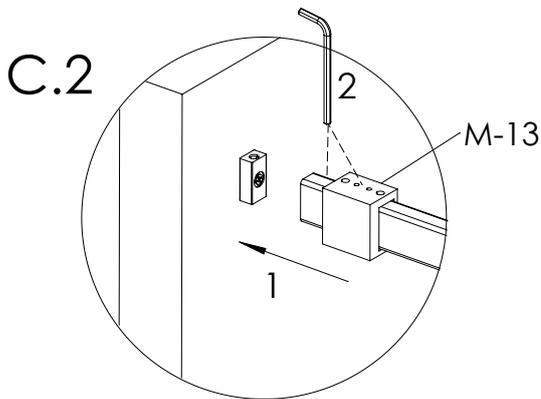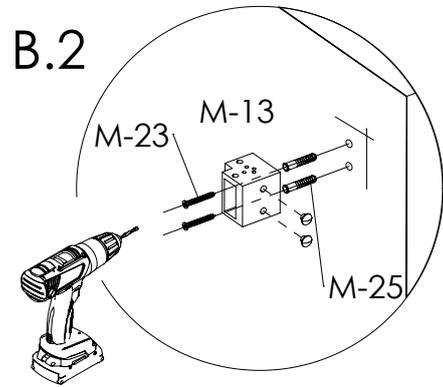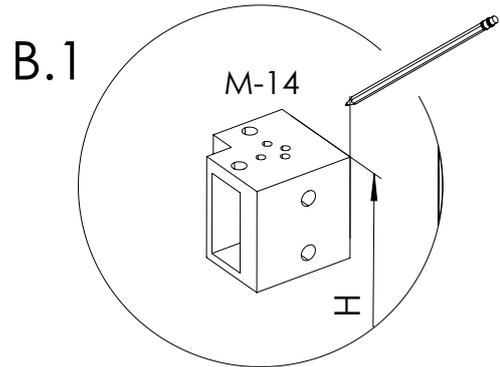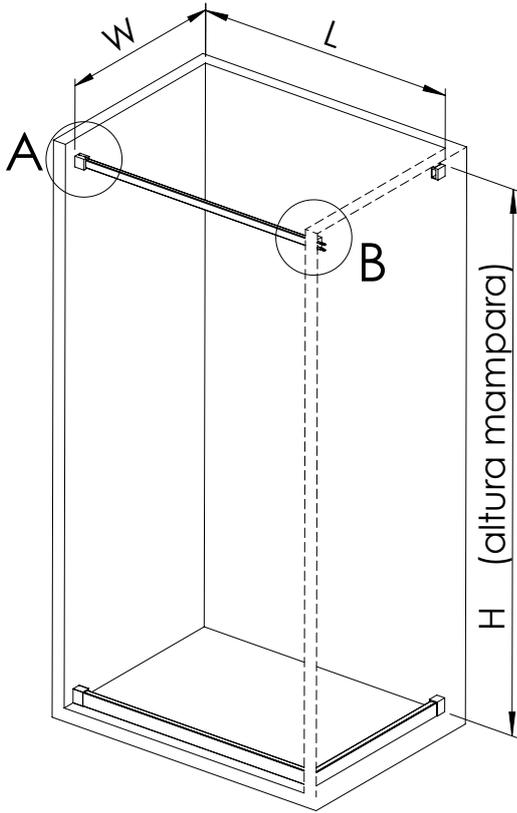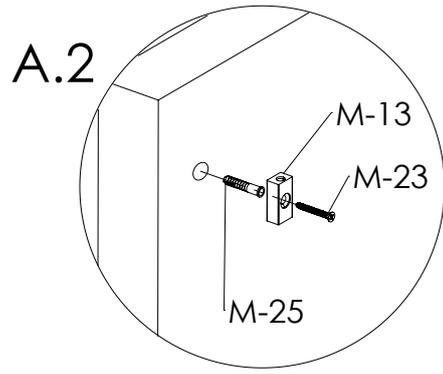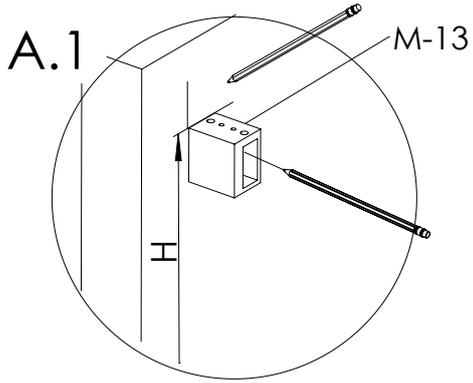



# 3

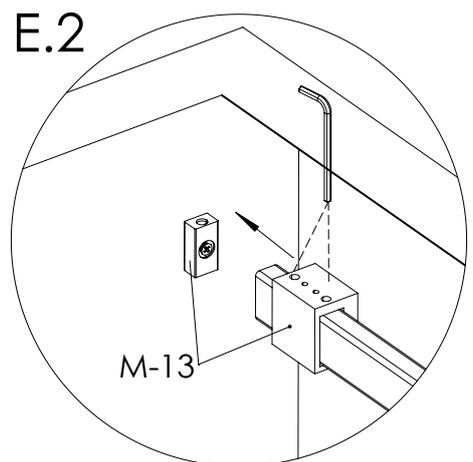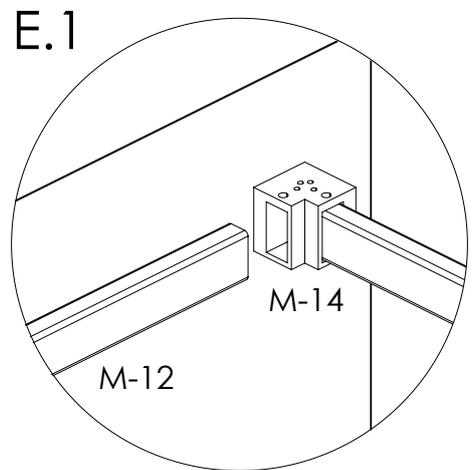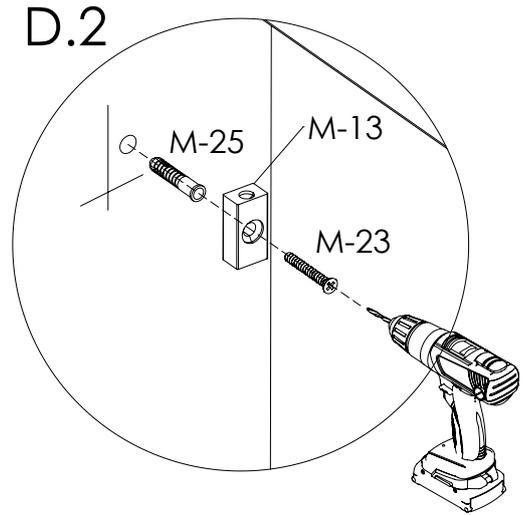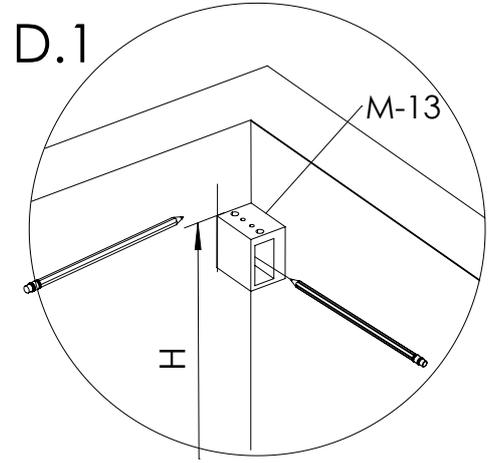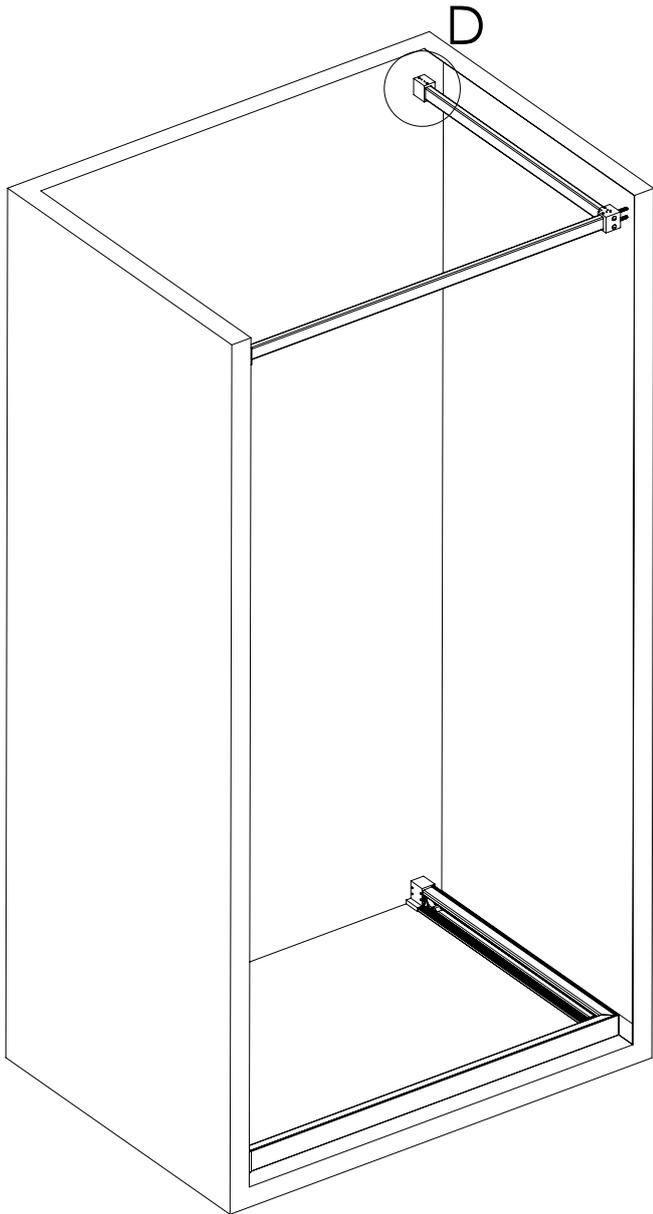






# 4

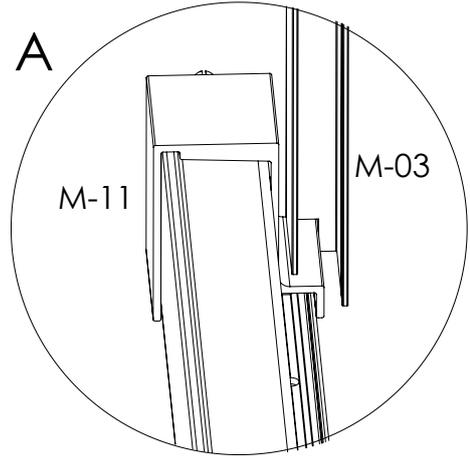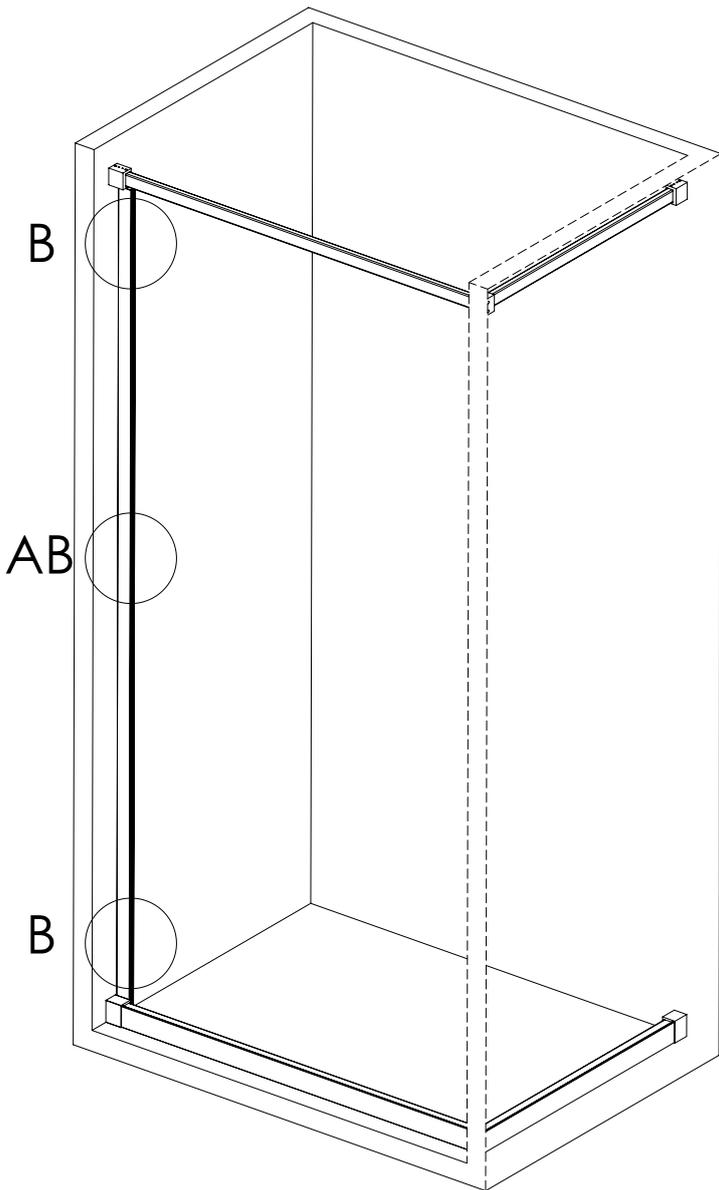


M-03

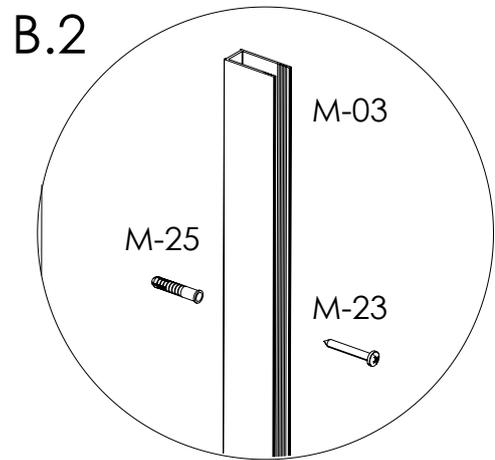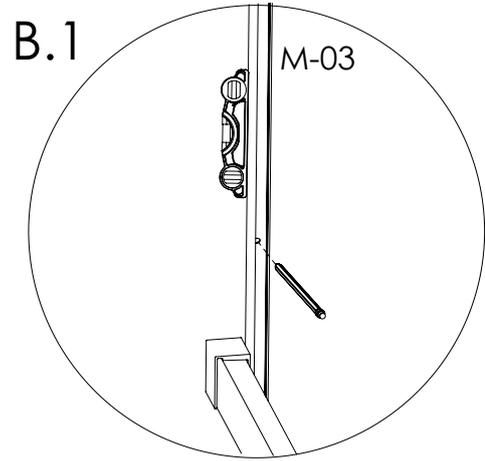


# 5

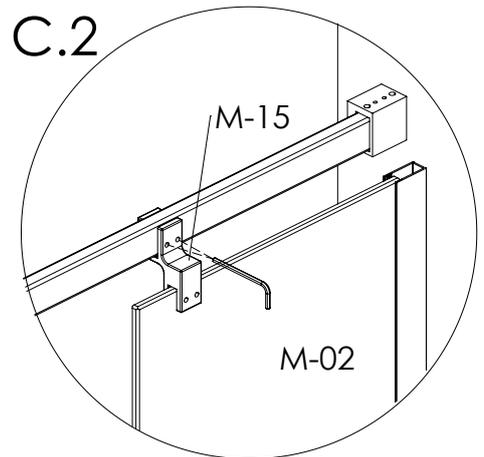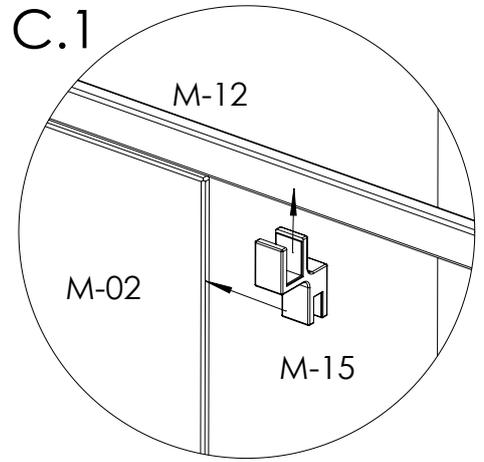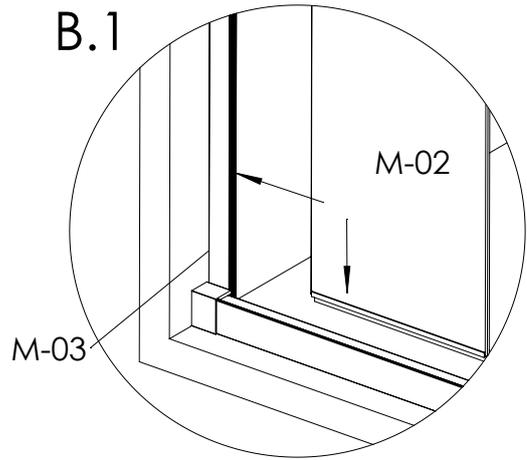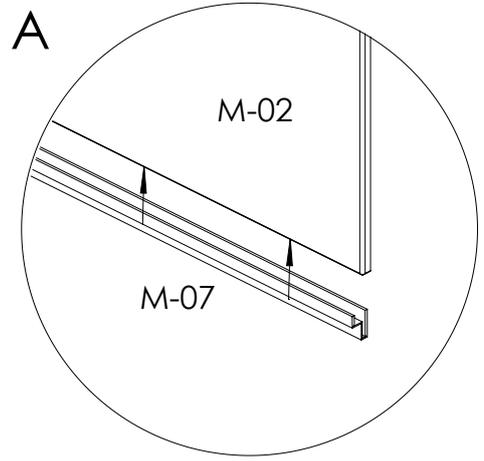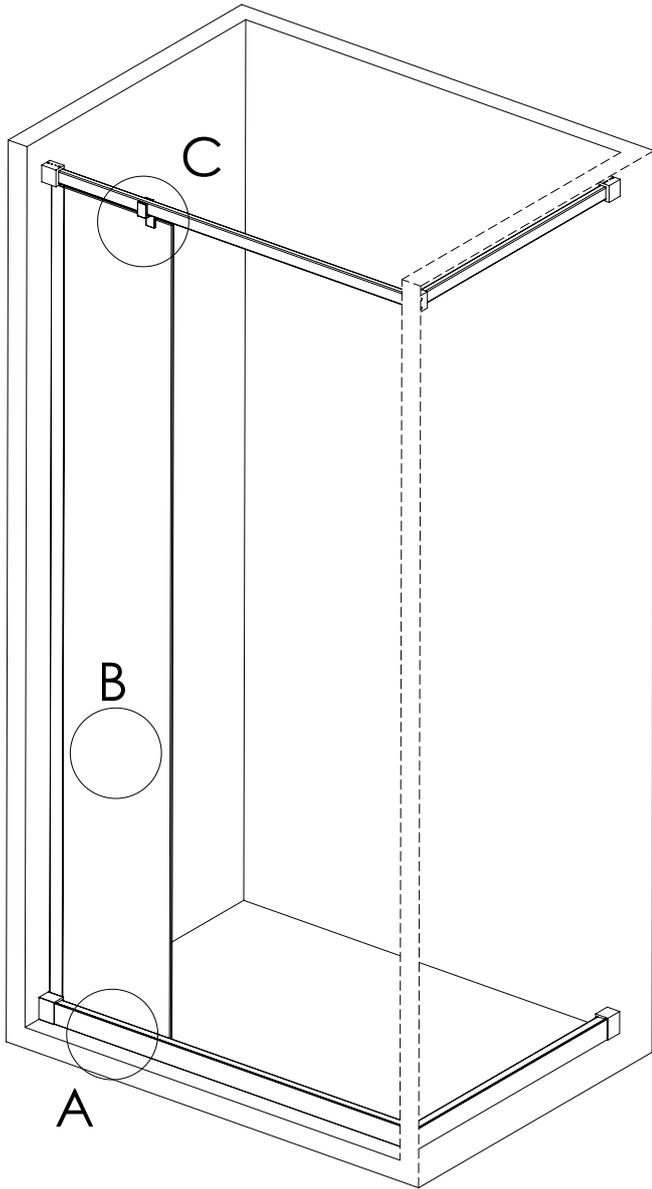


6

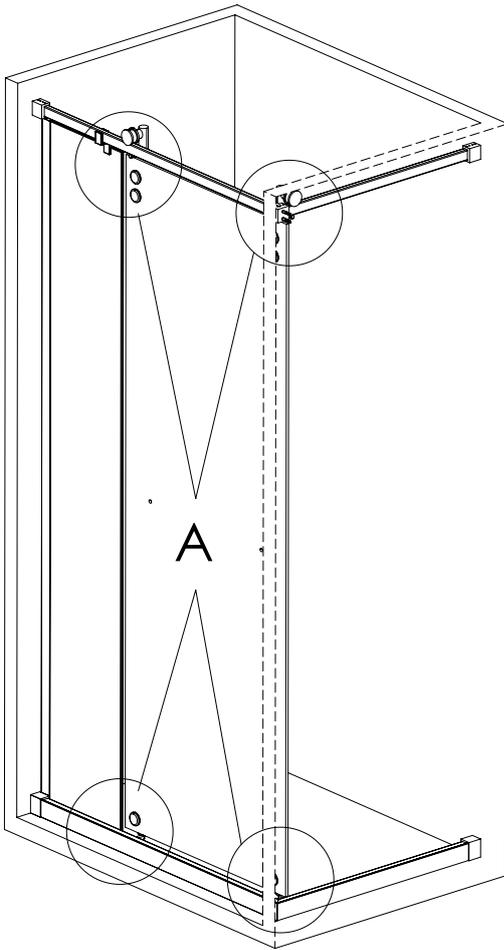


A.1

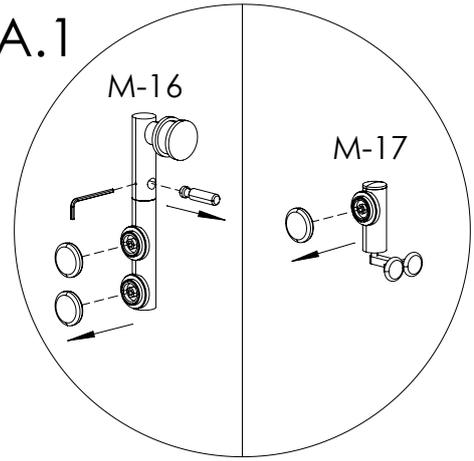






A.2






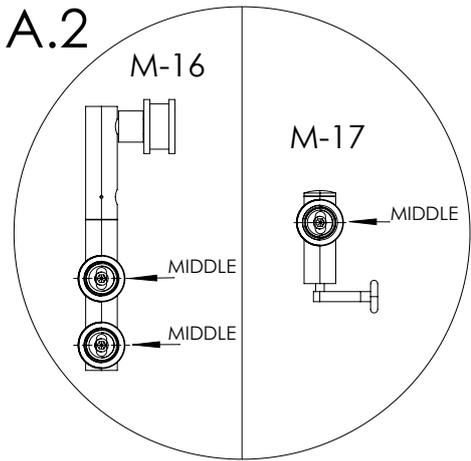





A.3

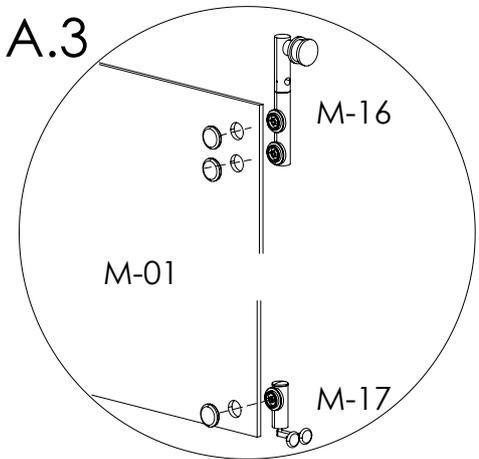

7

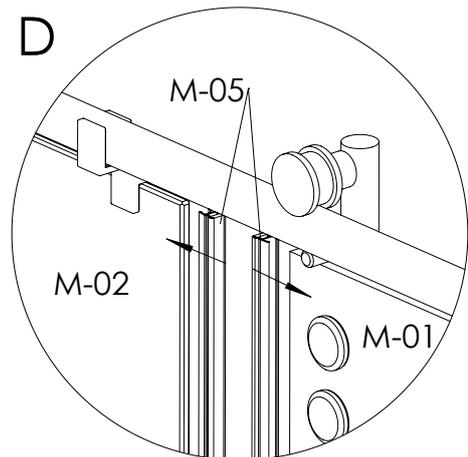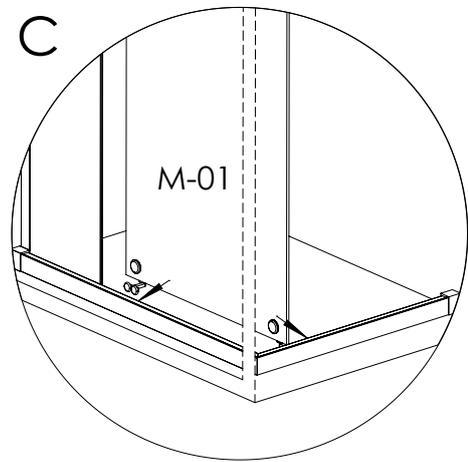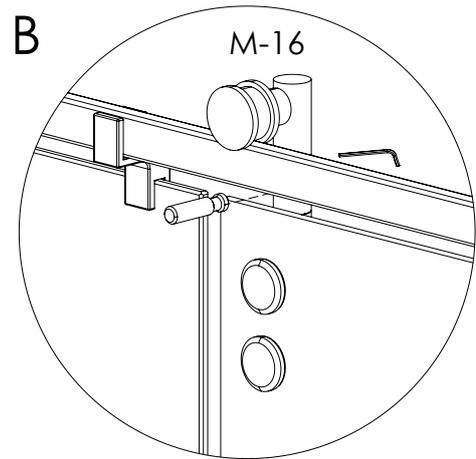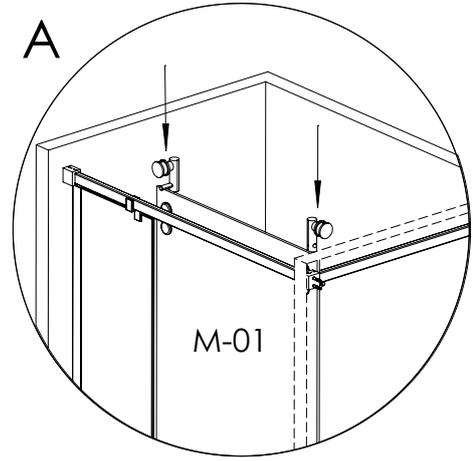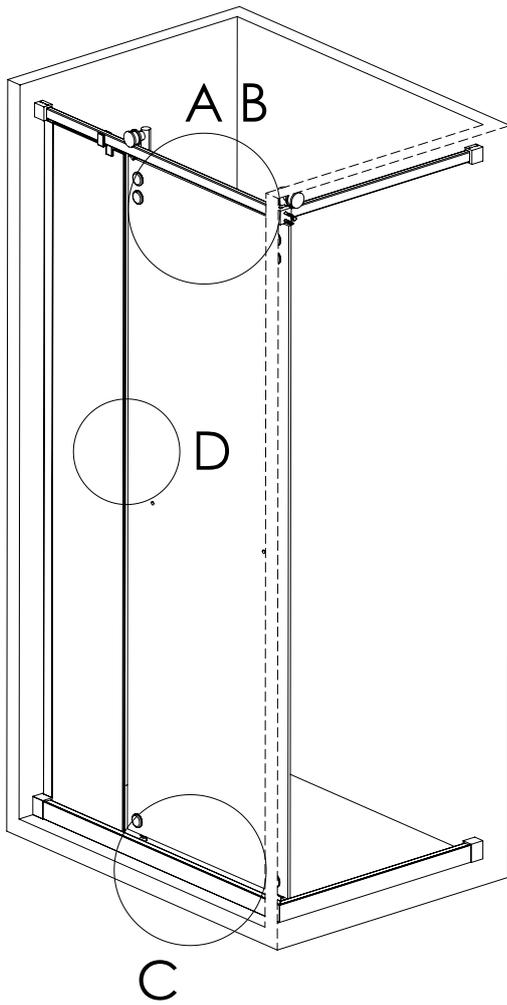

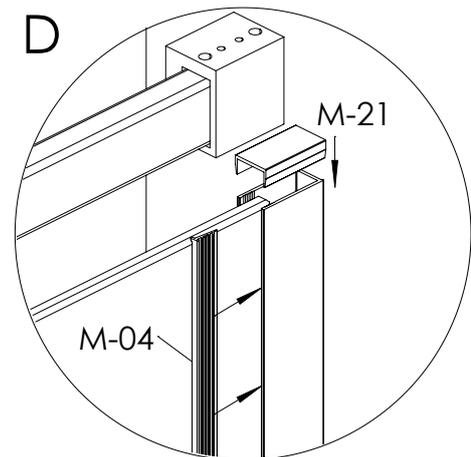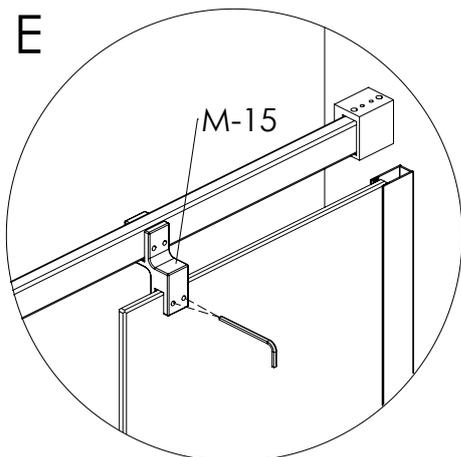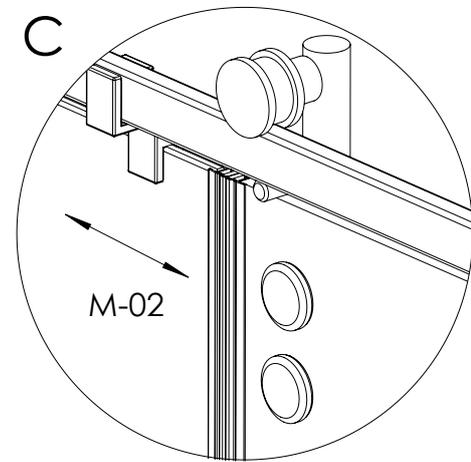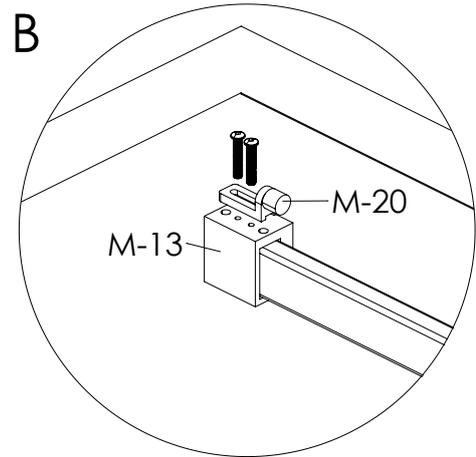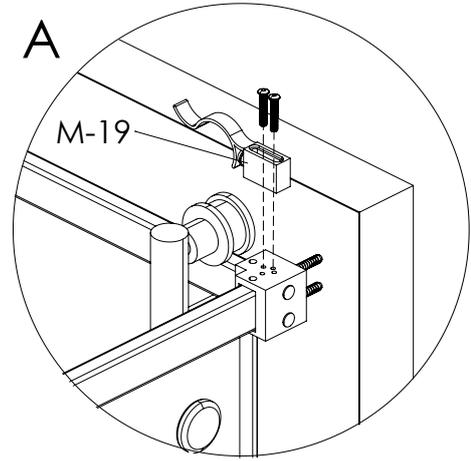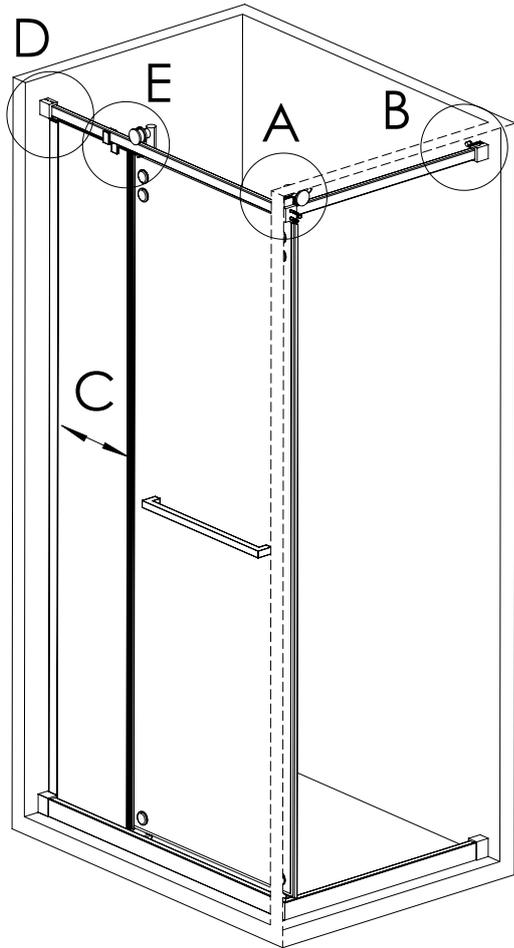

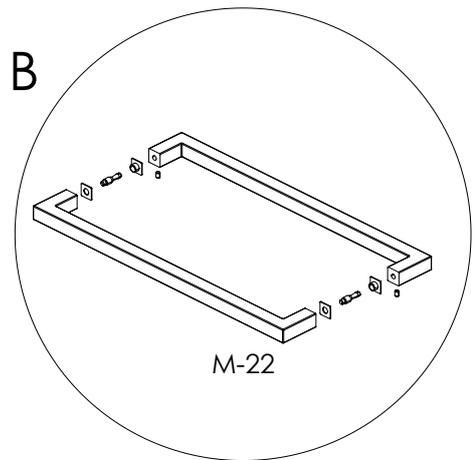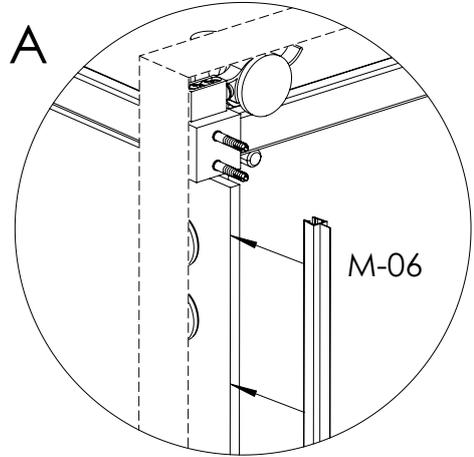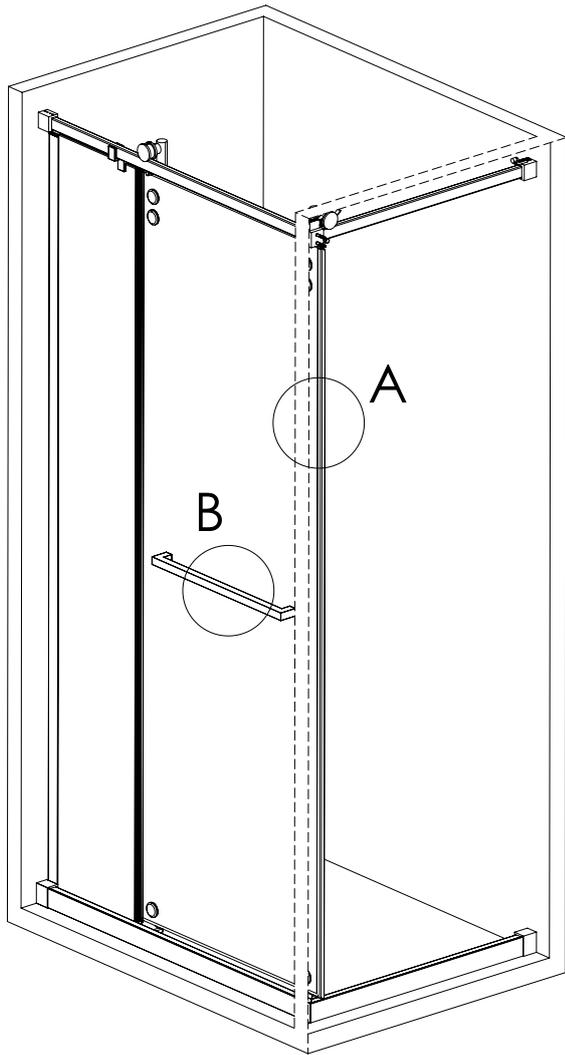

# 10

