



FRO-ORI-AM-000

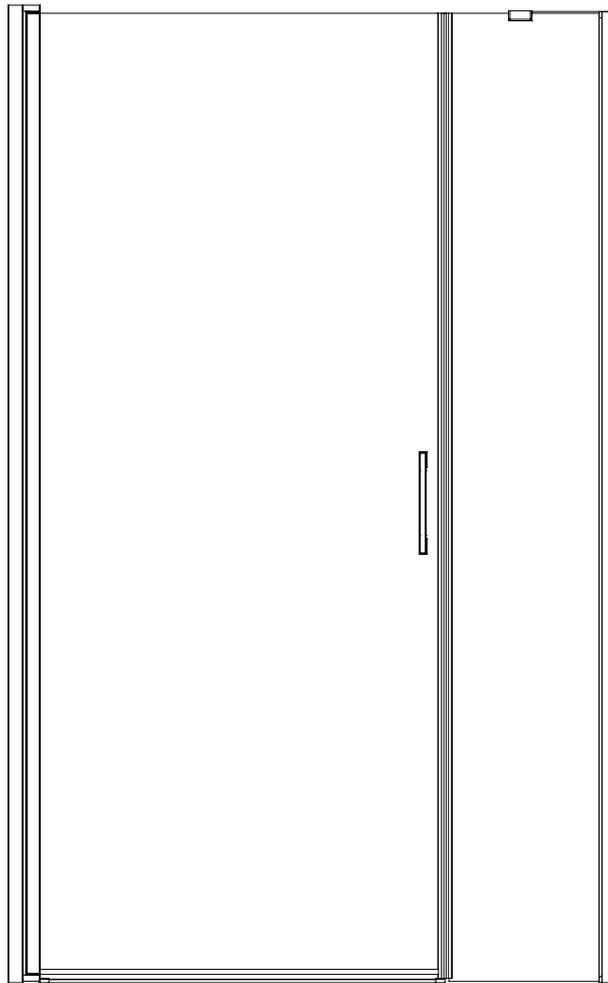

// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


M-01
x2




M-08
x1




M-02
x1



M-09
x1



M-03
x1

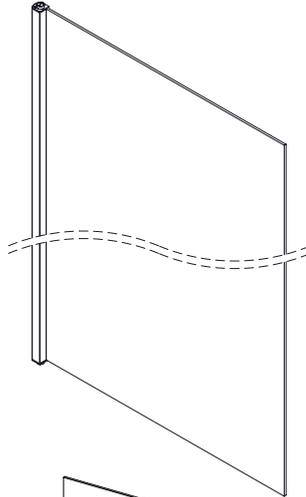

M-10
x1




M-11
x6




M-12
x2



M-04
x1

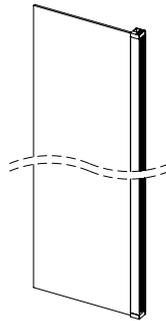


M-13
x1




M-14
x8




M-05
x2




M-15
x6




M-06
x1



M-16
x2



M-07
x2




M-17
x6




M-18
x2




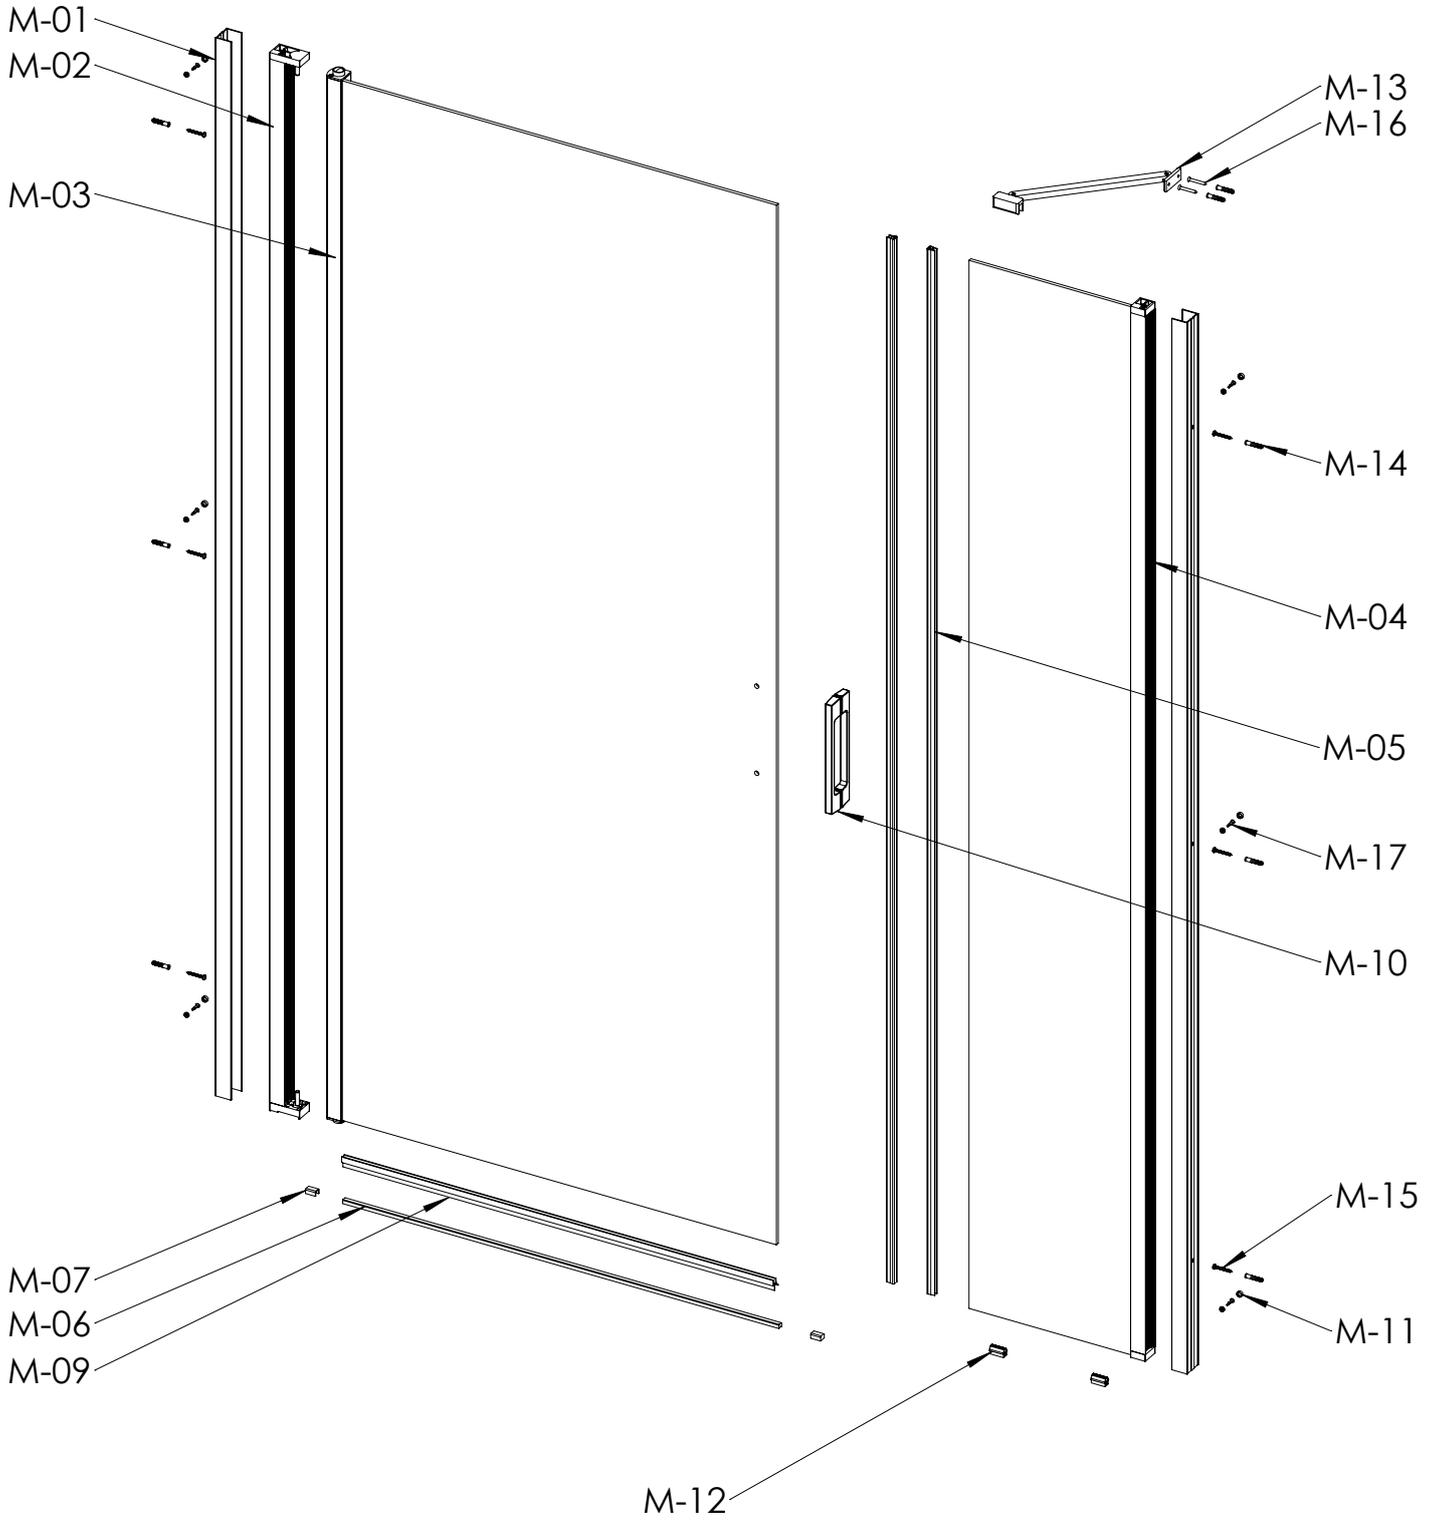


1

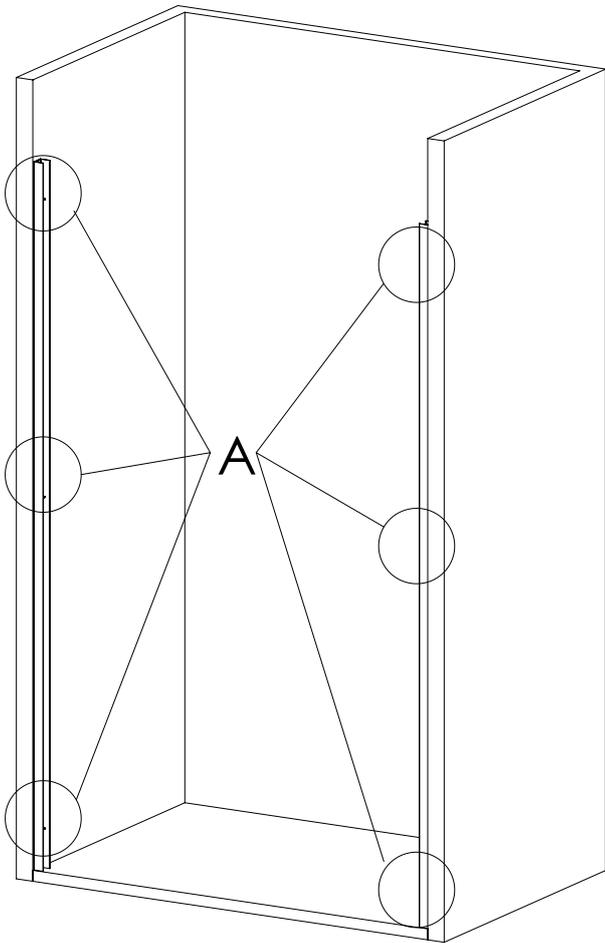


A.1

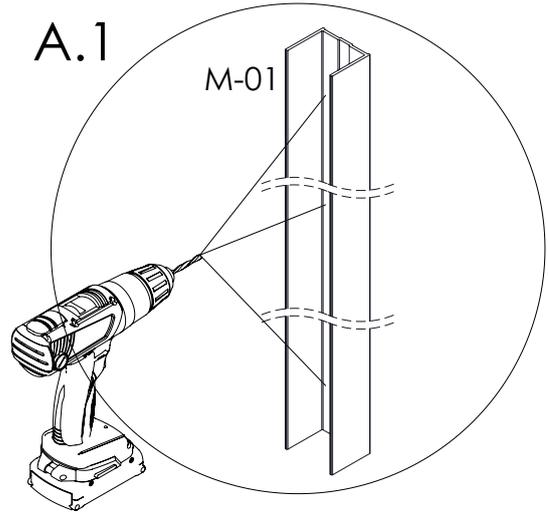





A.2

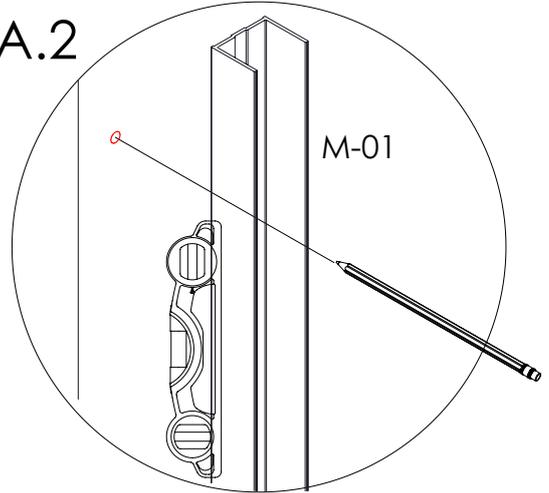





A.3

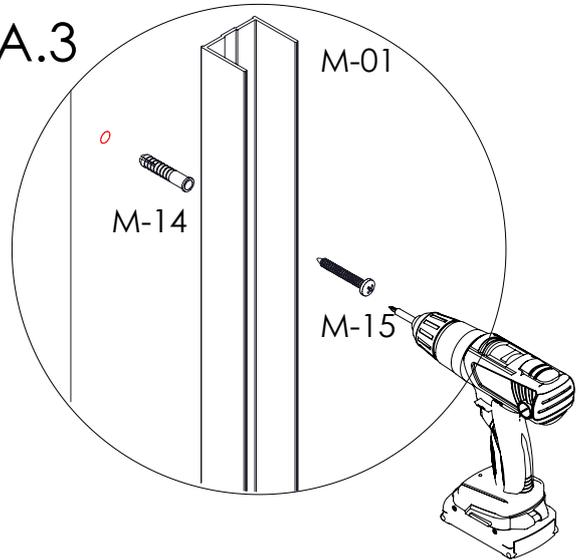

2

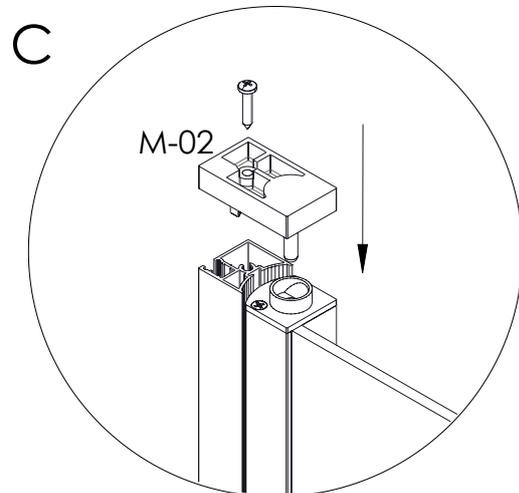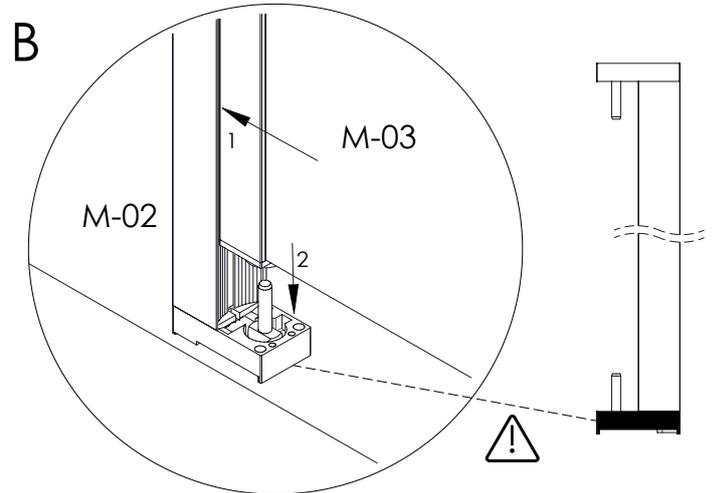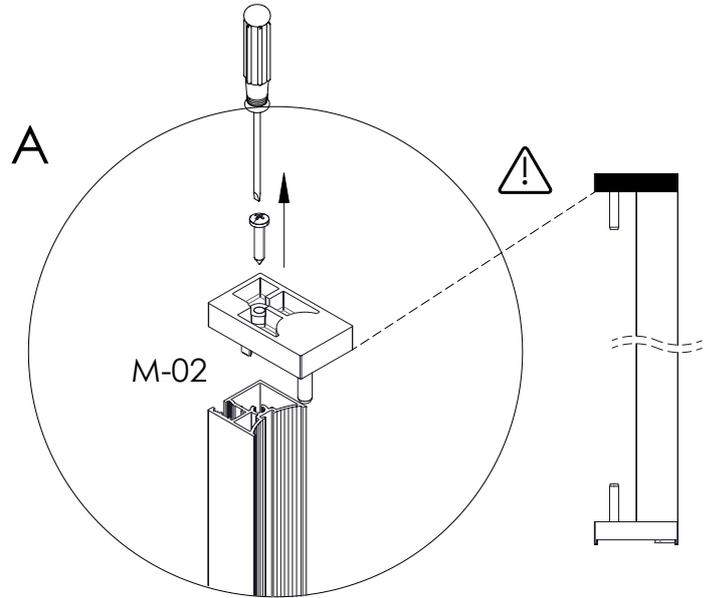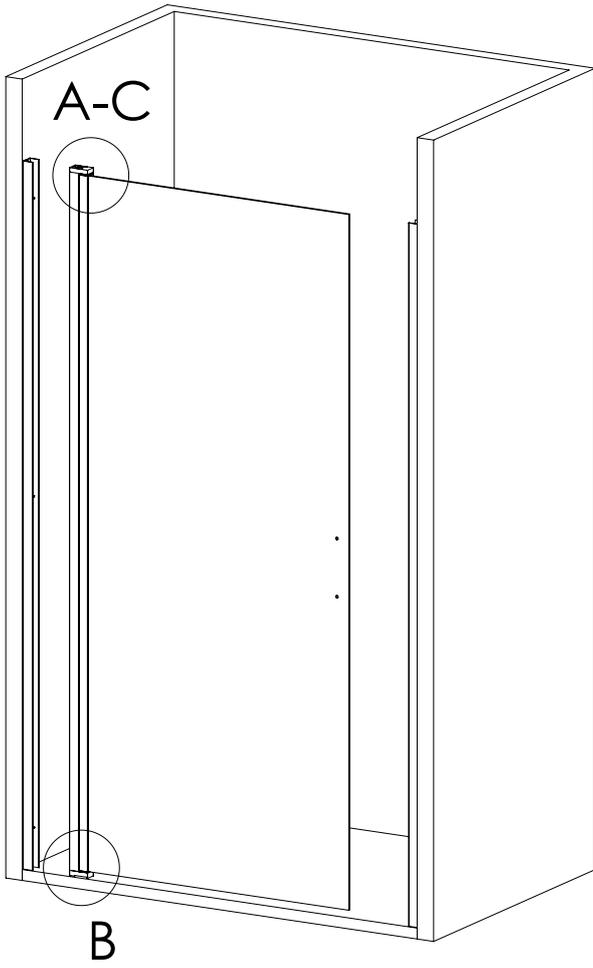


3

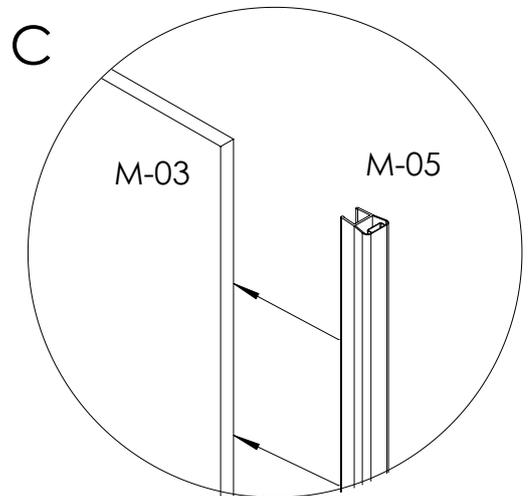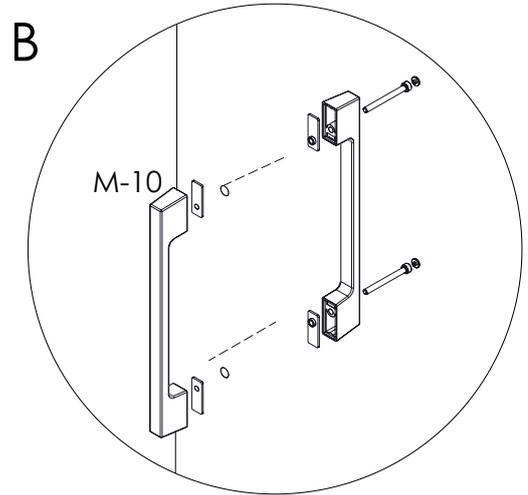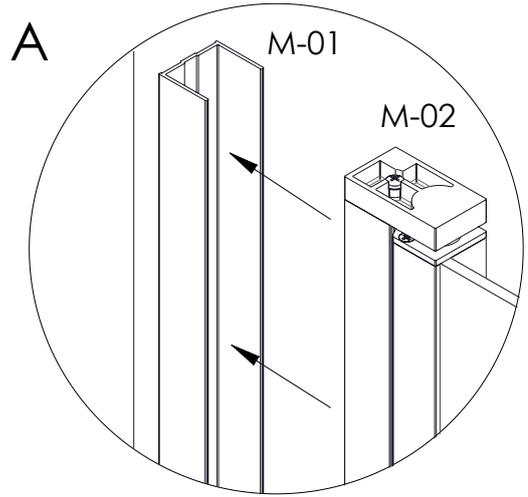
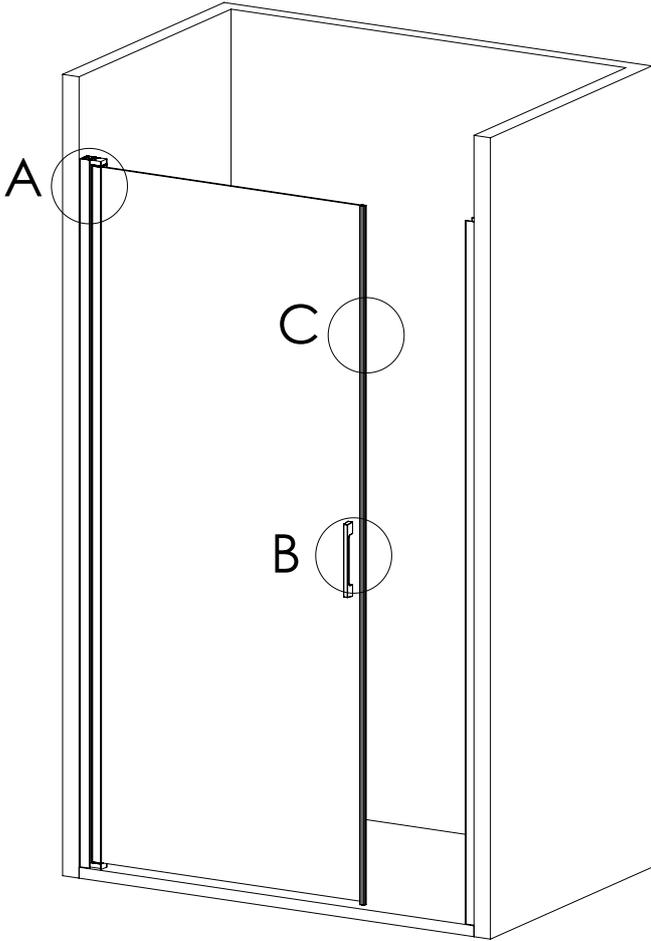


4


A.1

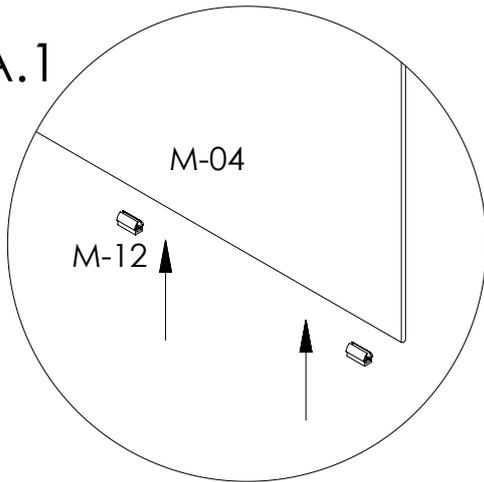


A.2

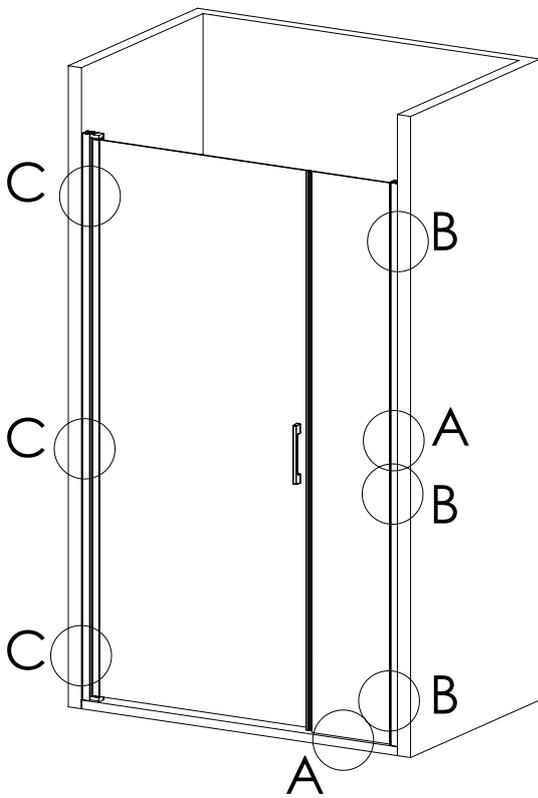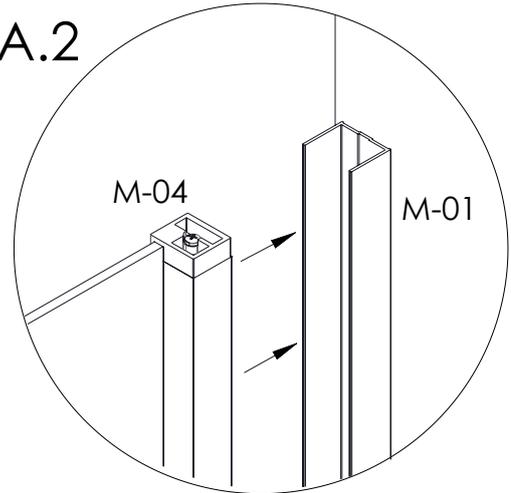


B.1

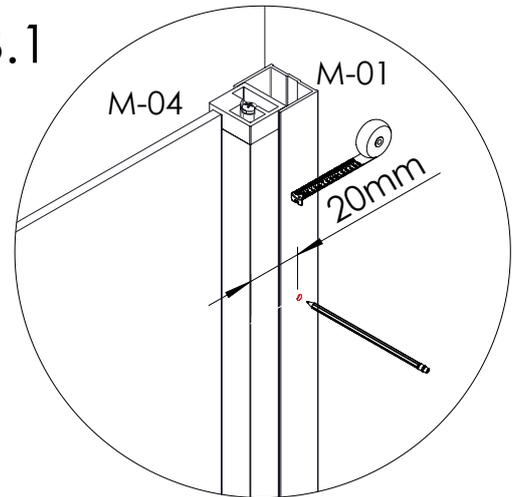




C

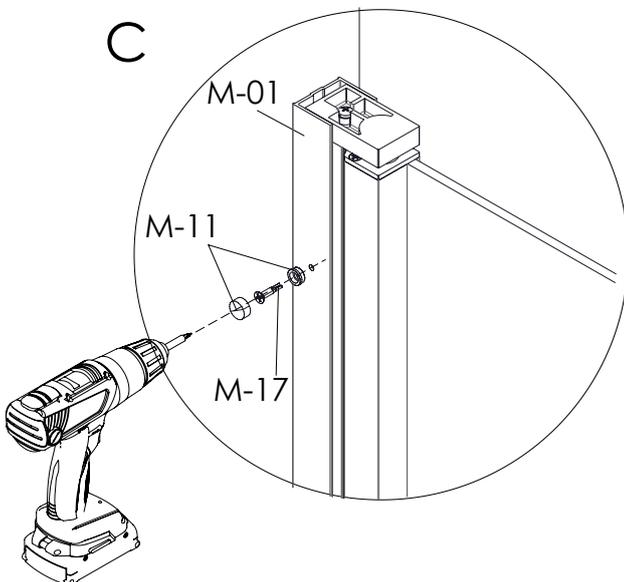







B.2

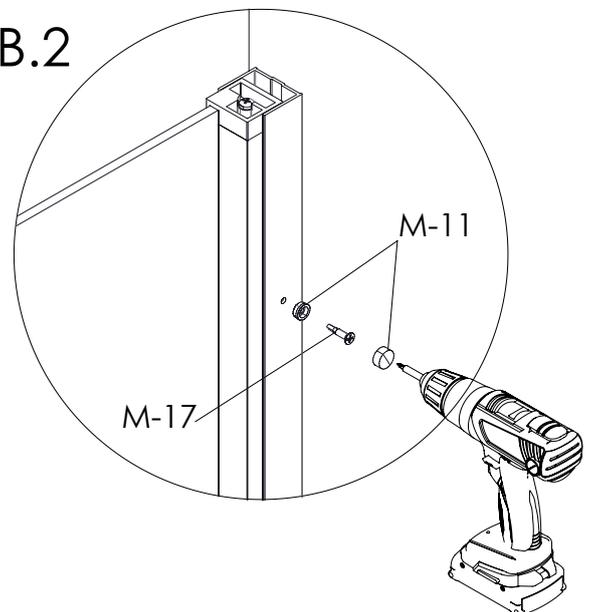





5

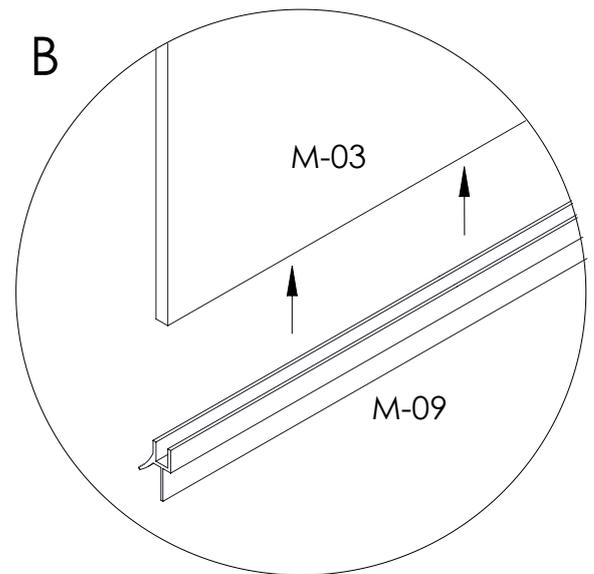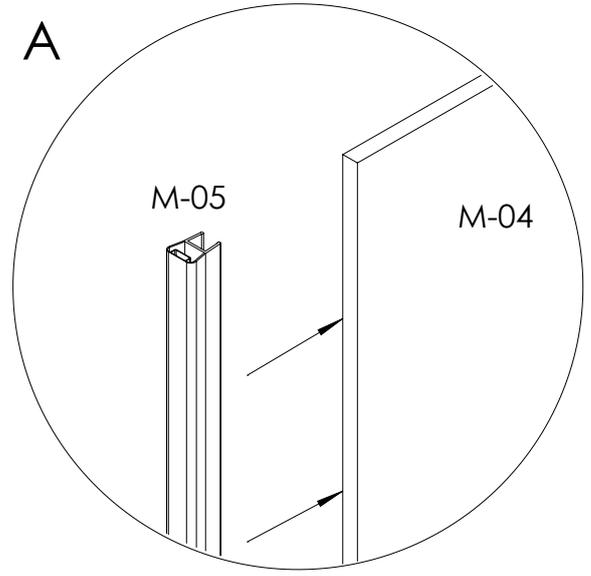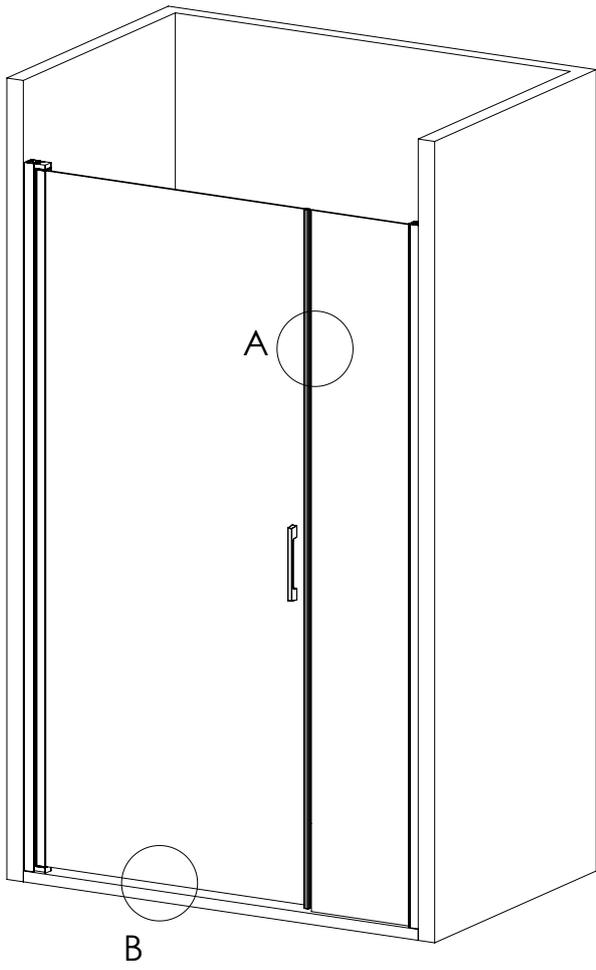

6

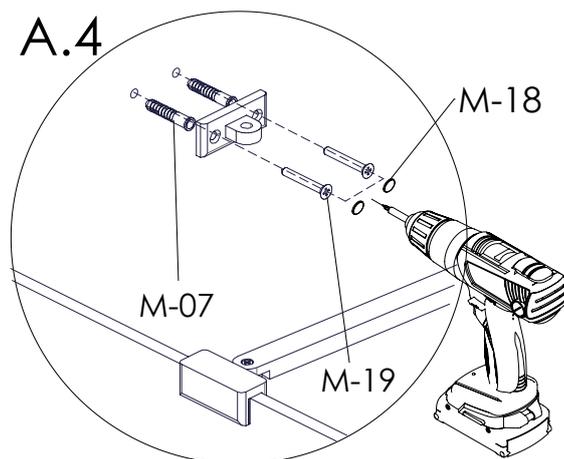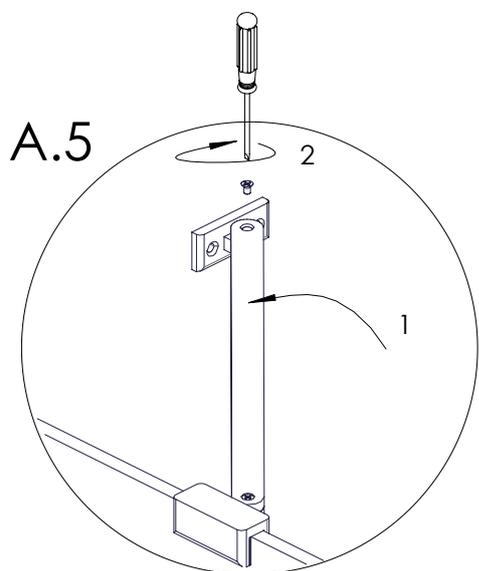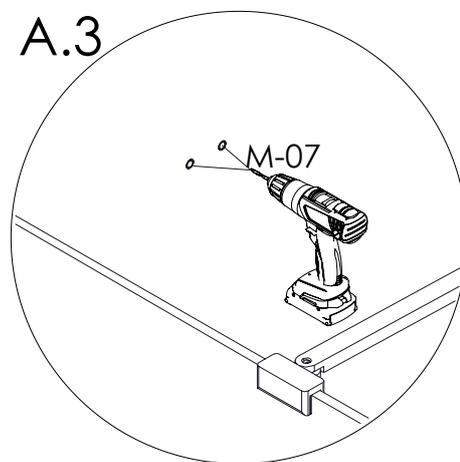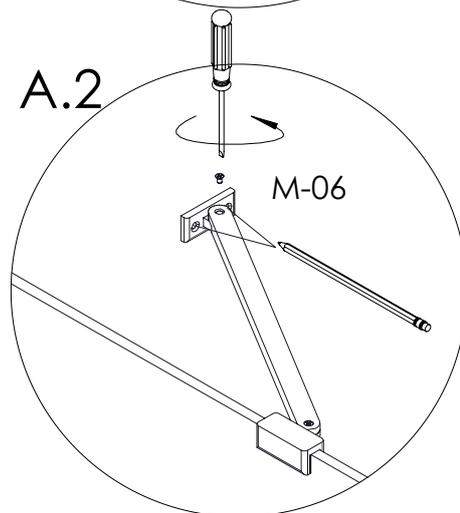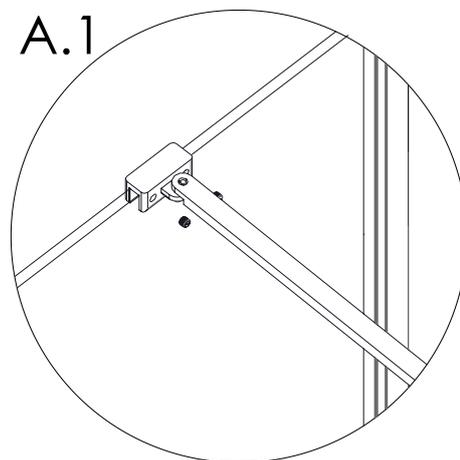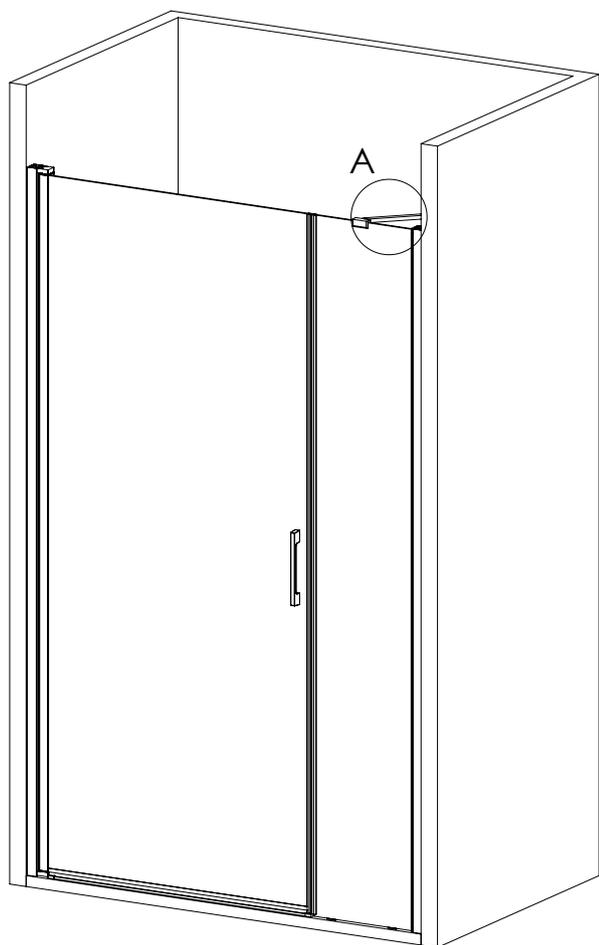

7

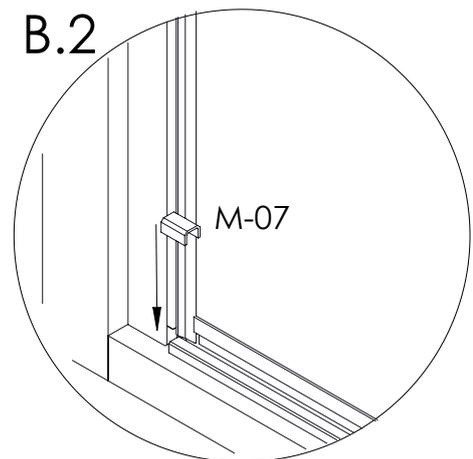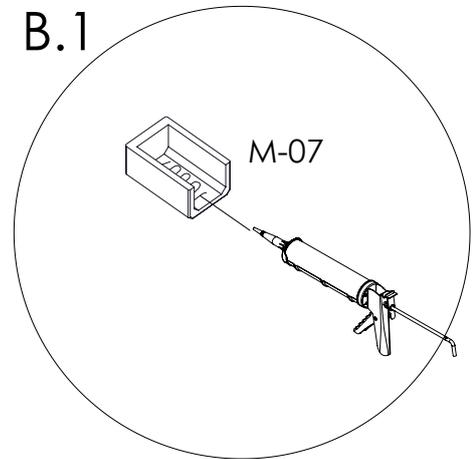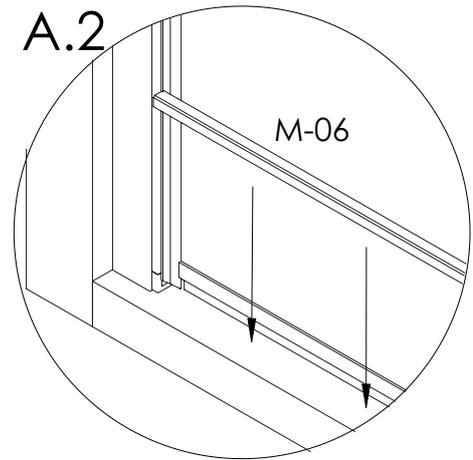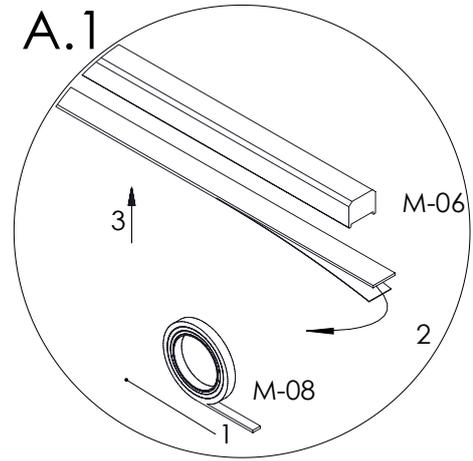

8

