
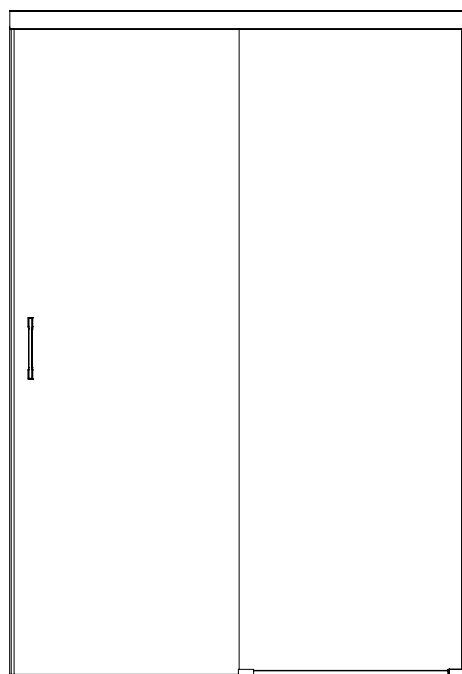



# FRO-ARI-AM-003

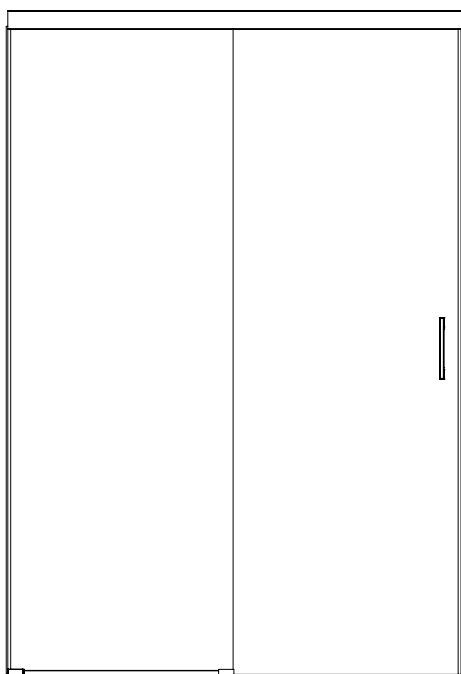


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //  
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //

---


M-01  
x1

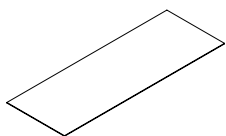


M-02  
x1

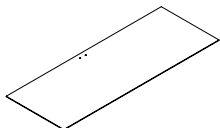


M-03  
x1

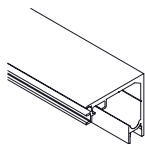


M-04  
x1

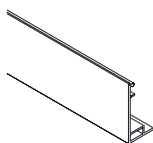


M-05  
x1




M-06  
x1




M-07  
x1




M-08  
x1

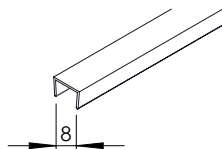


M-09  
x1

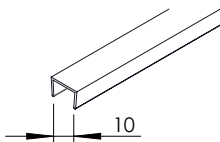

M-10  
x2

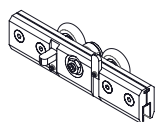

M-11  
x1




M-12  
x1



M-13  
x3




M-14  
x1




M-15  
x1




M-16  
x2




M-17  
x2




M-18  
x4




M-19  
x4




M-20  
x8




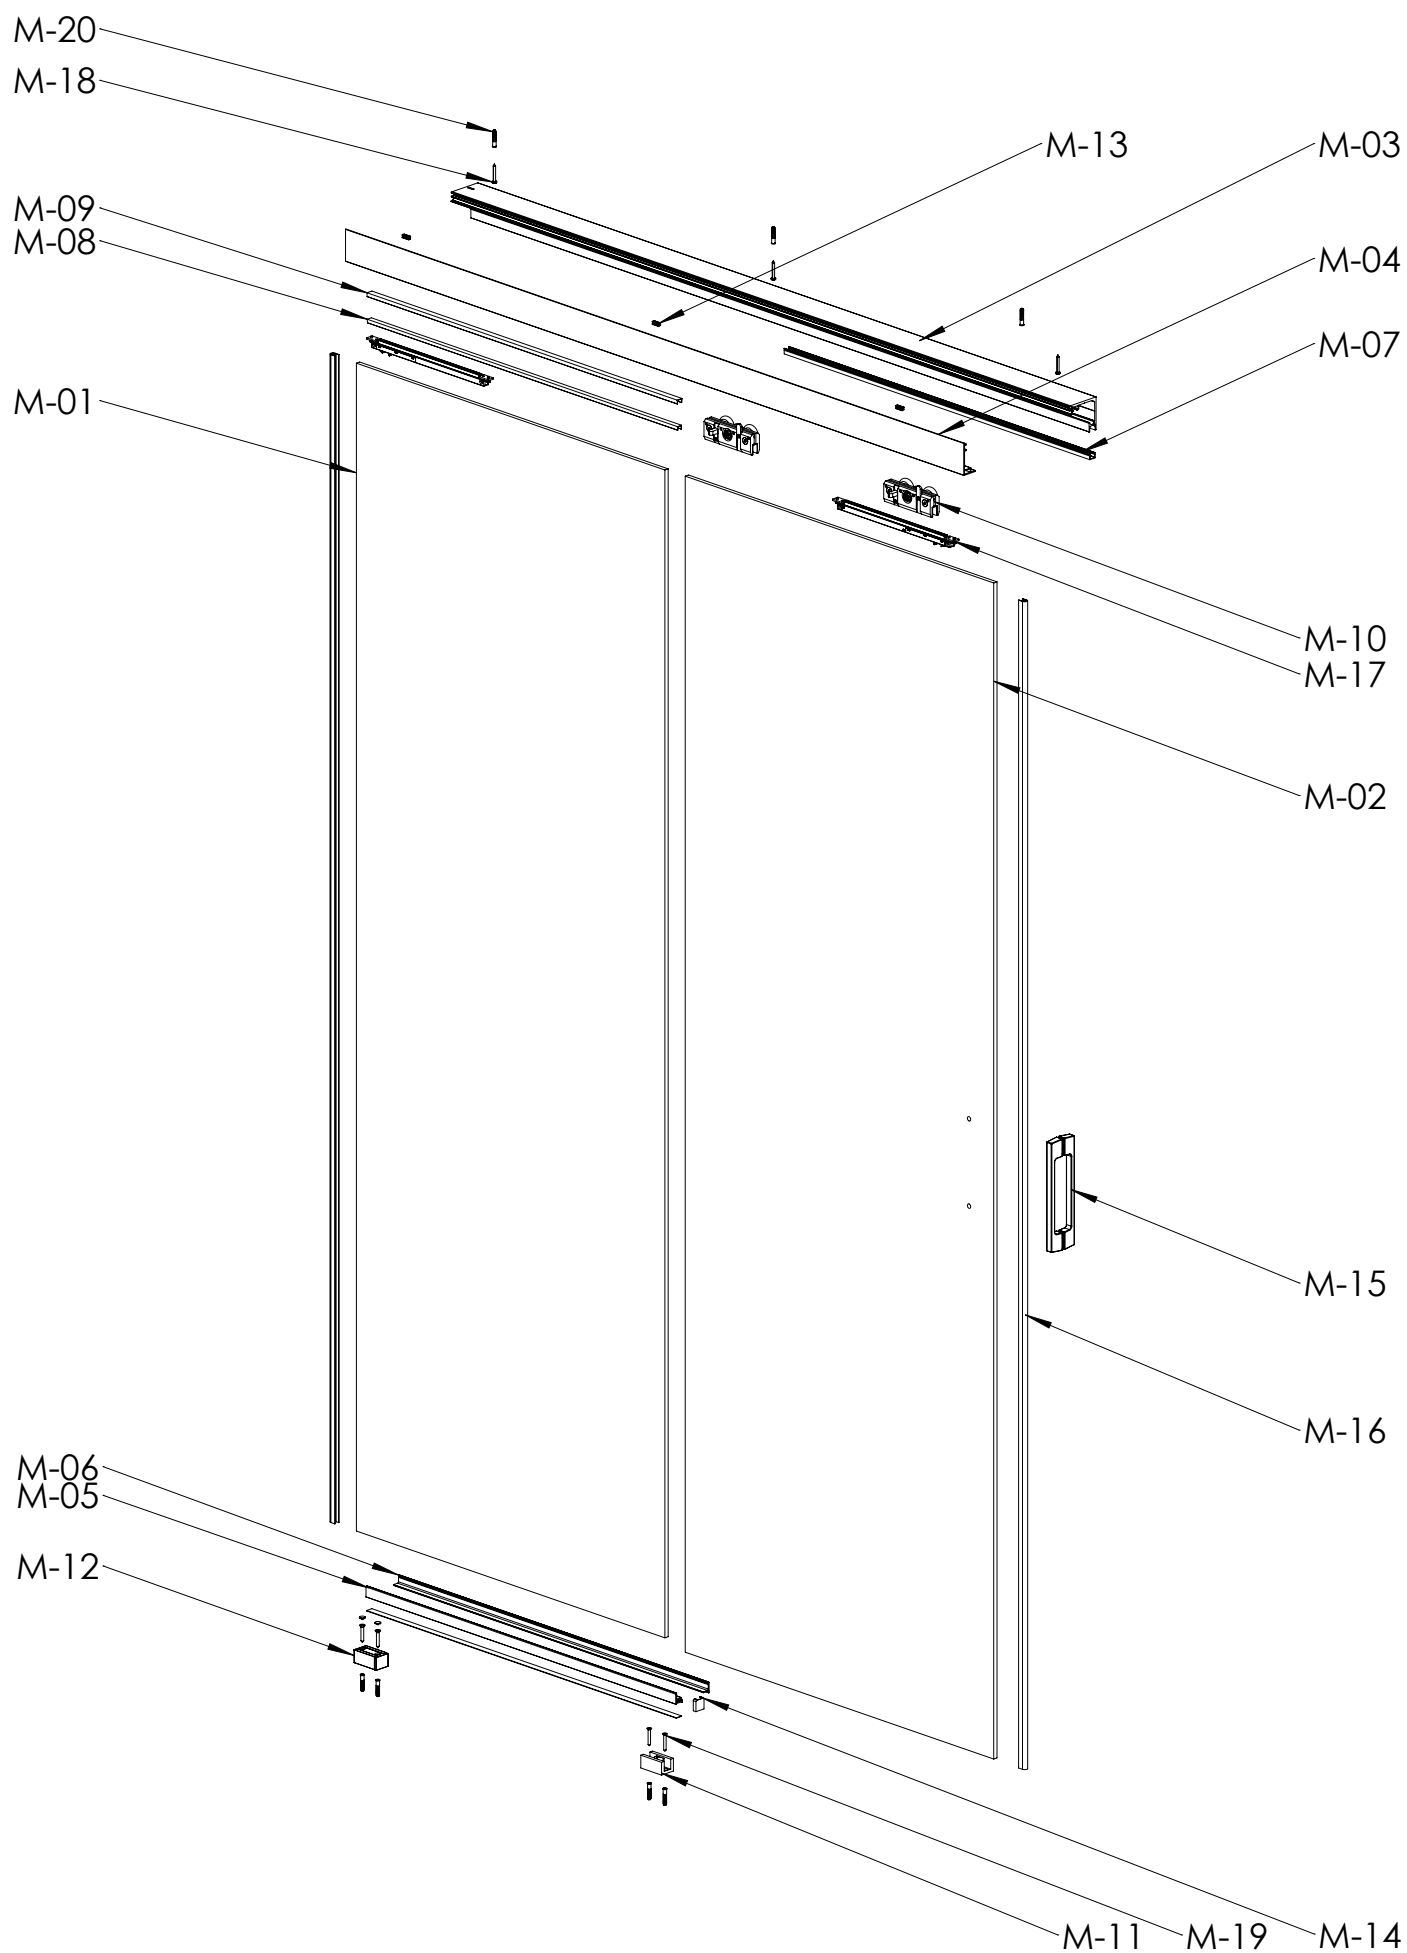


1

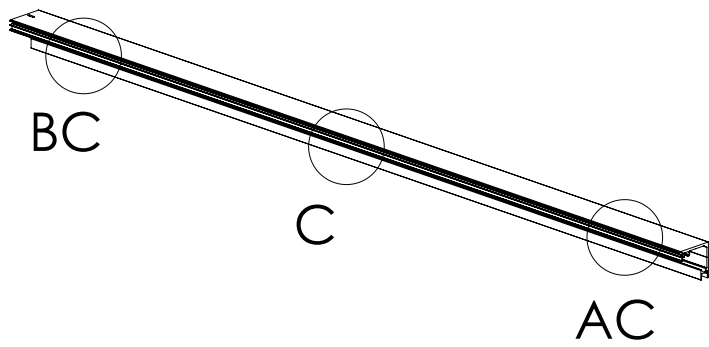


A

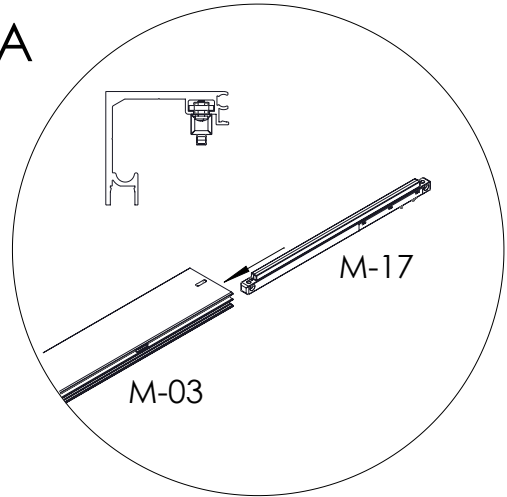


B

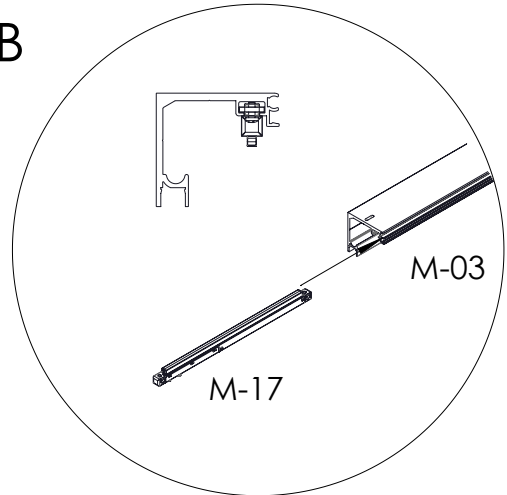



C

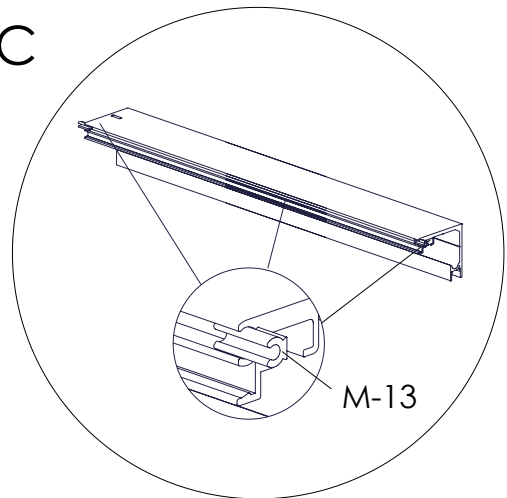


# 2

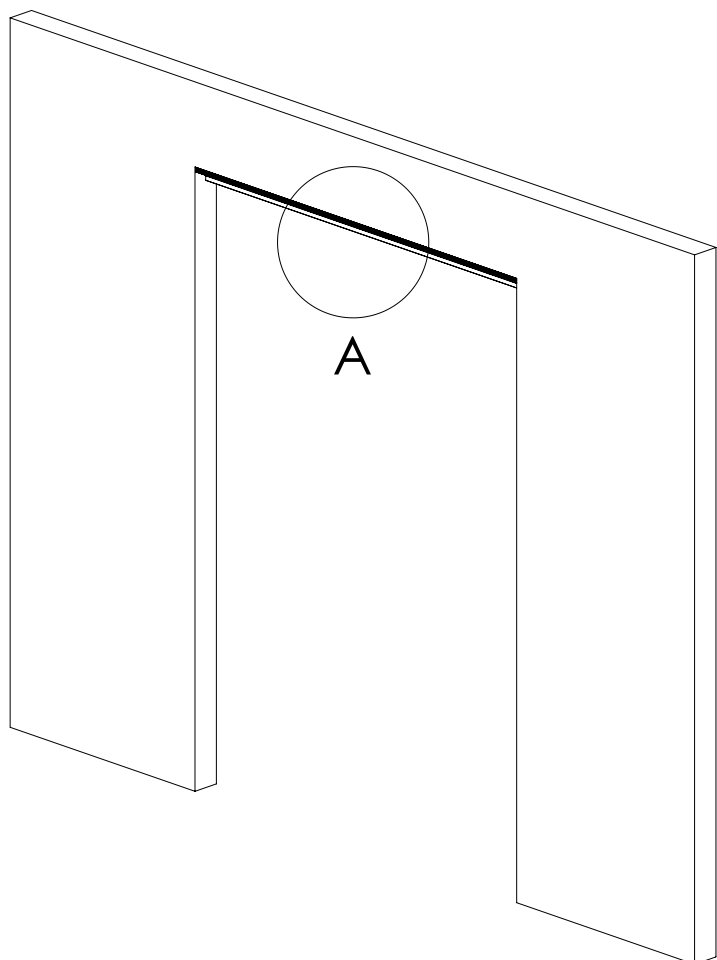


## A.1


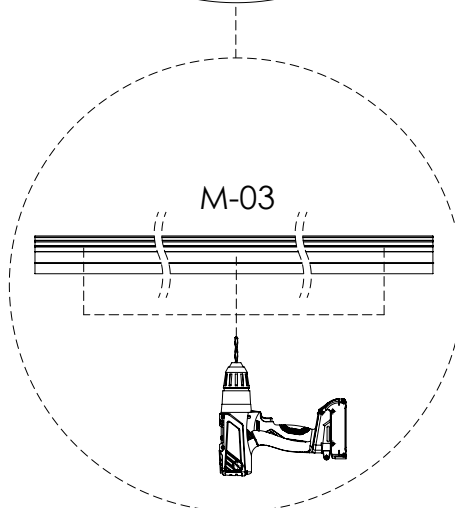
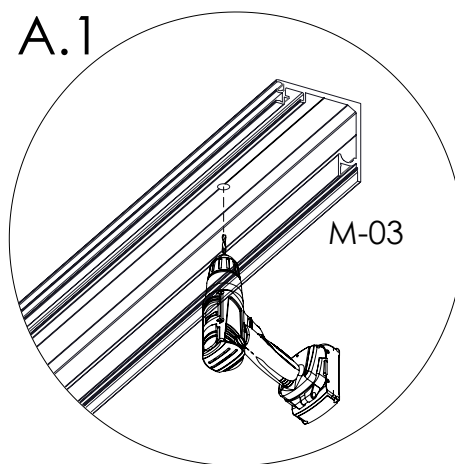


## A.2





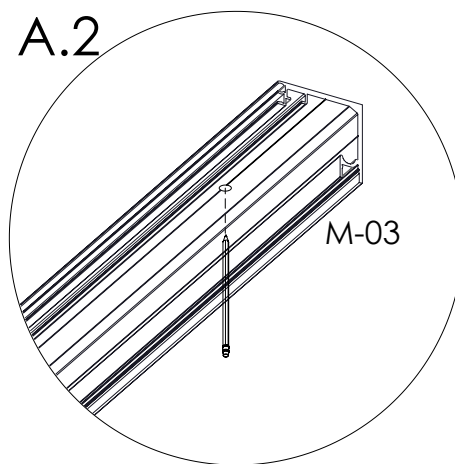


## A.3




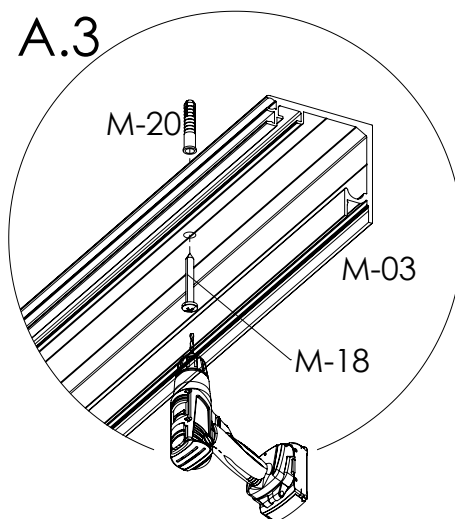


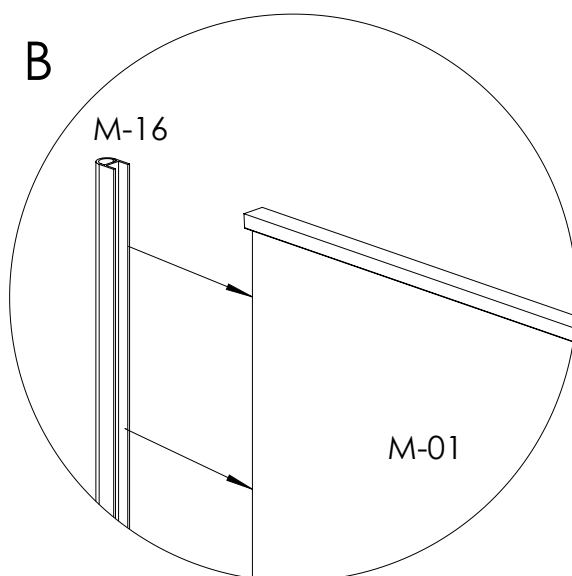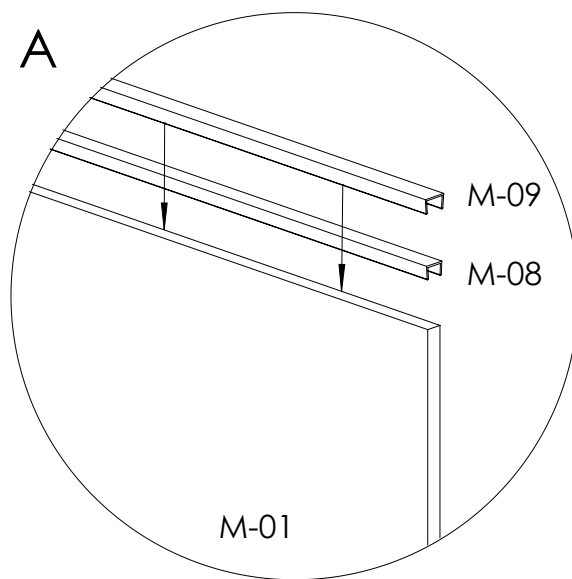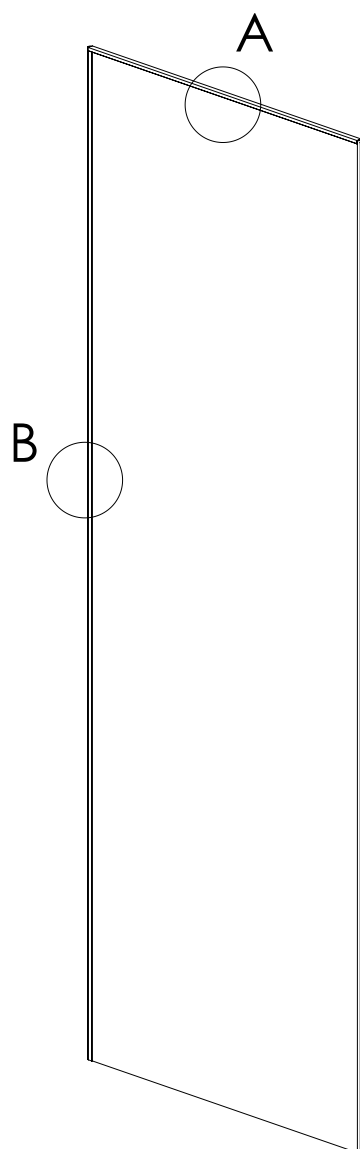

4

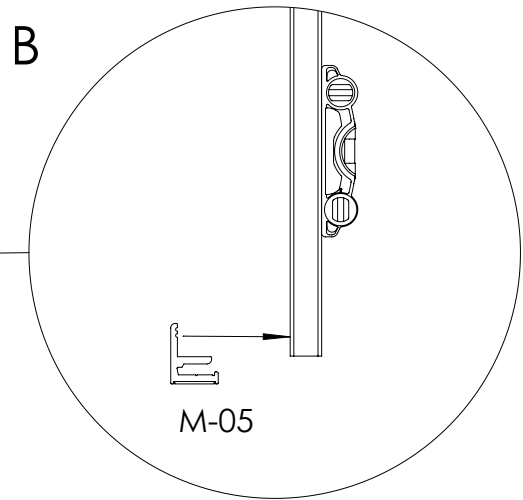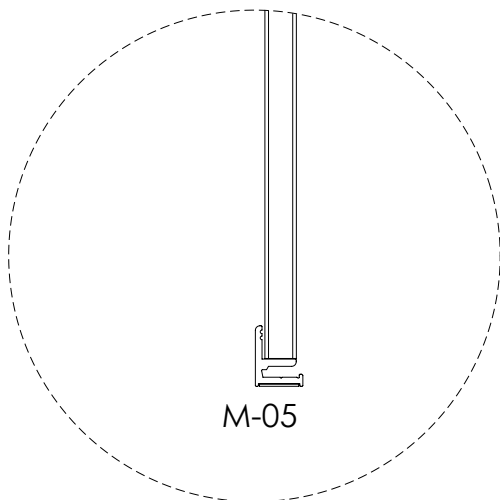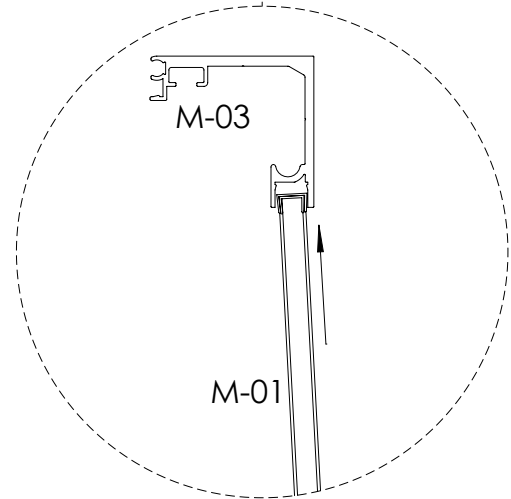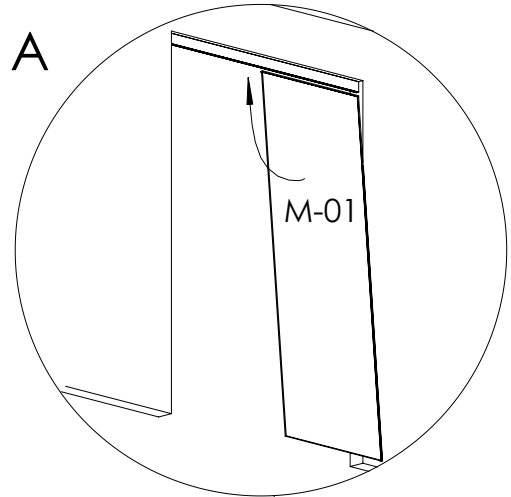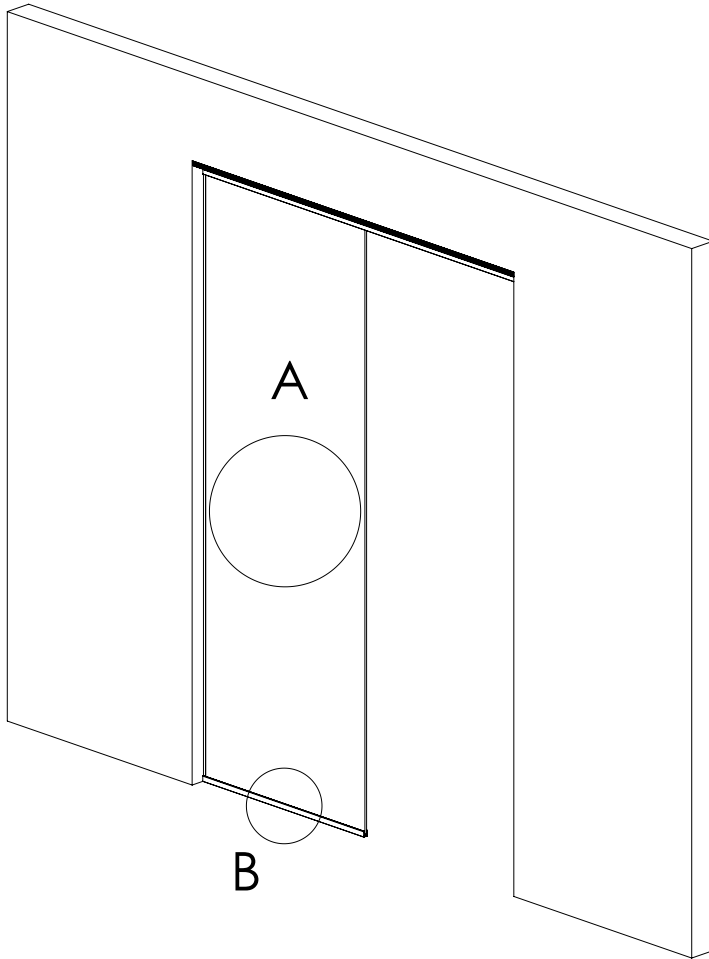


4

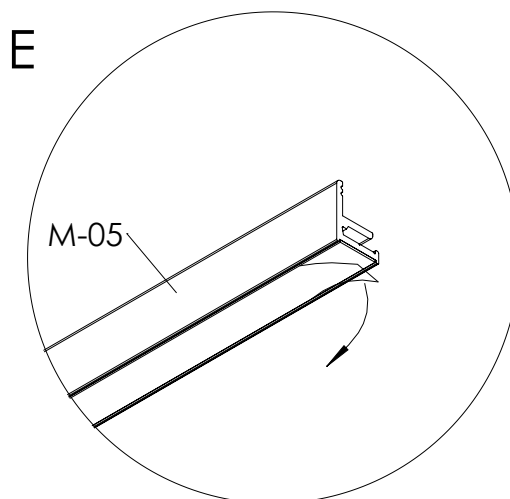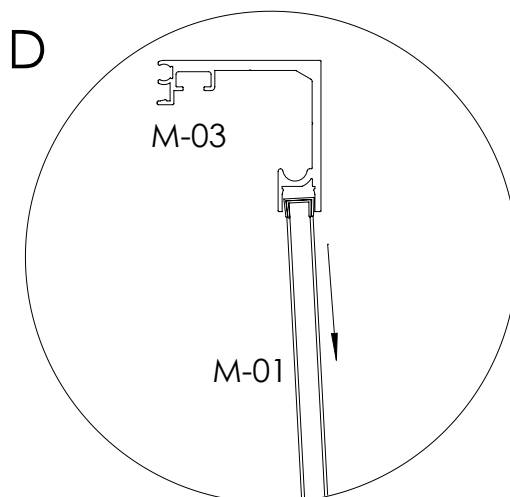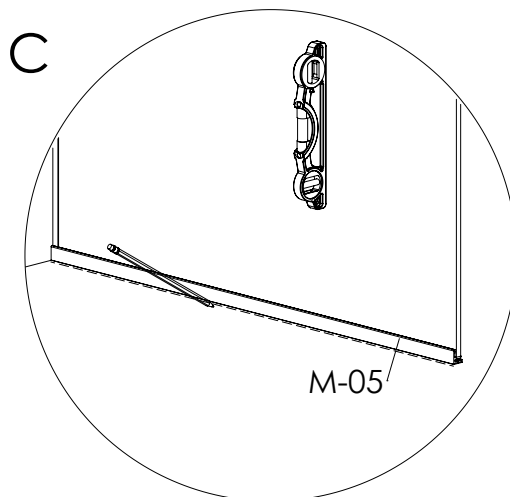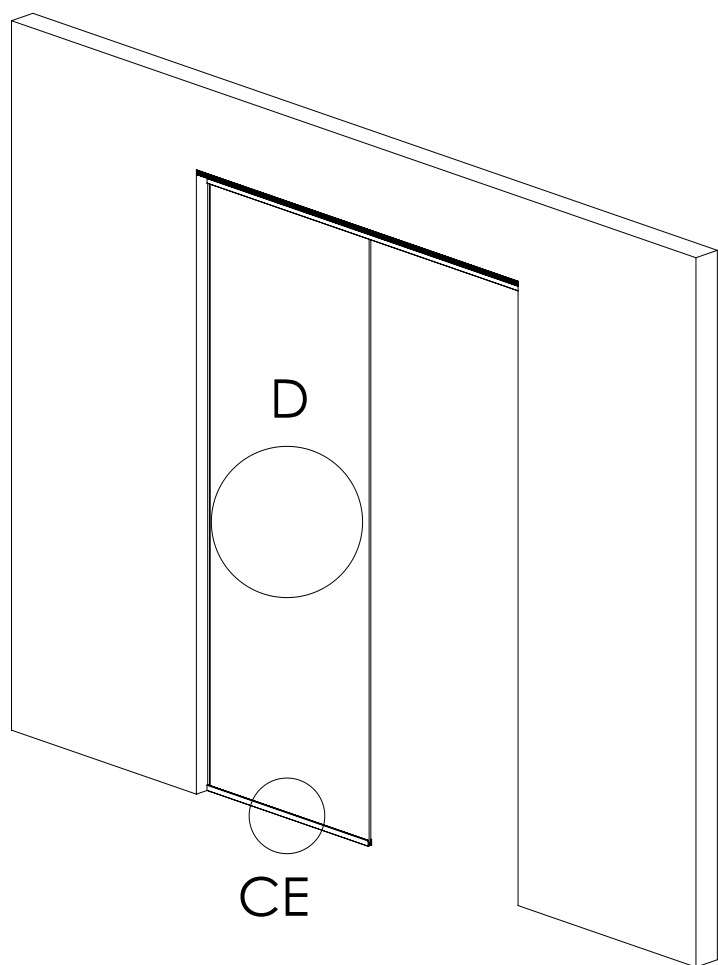





4

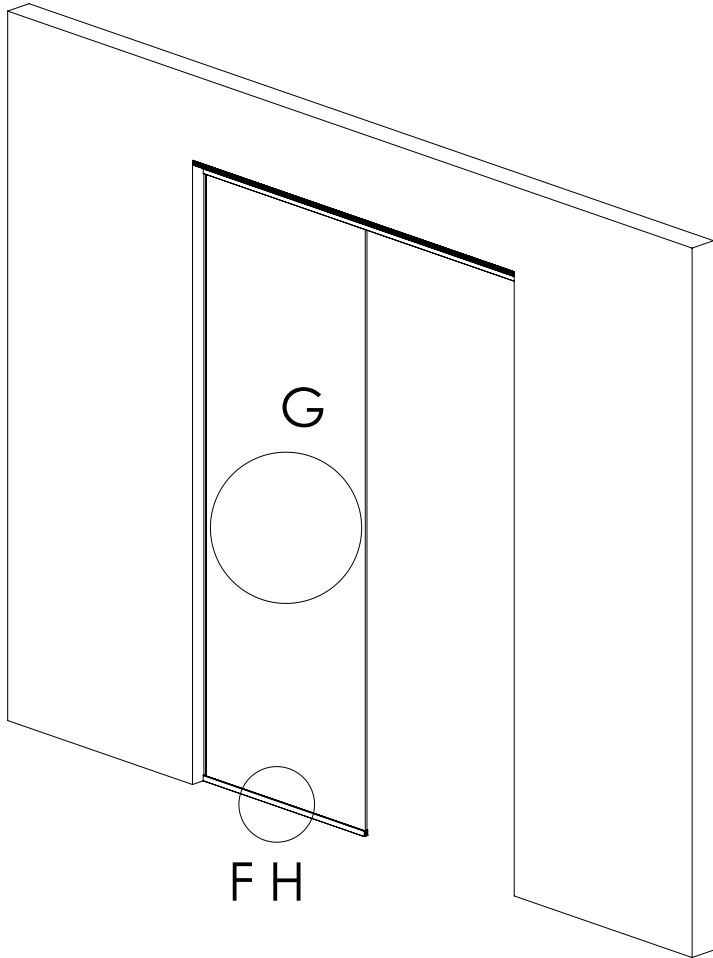


F

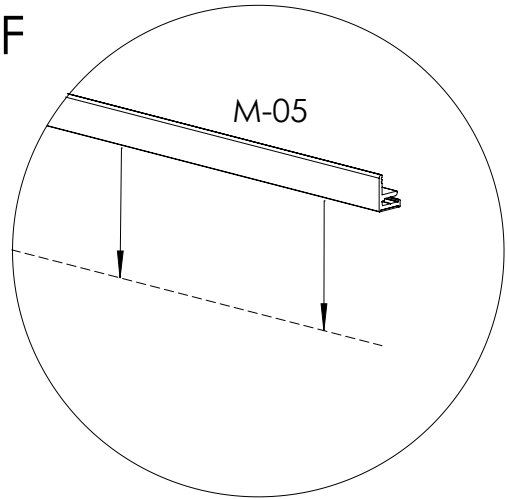





G




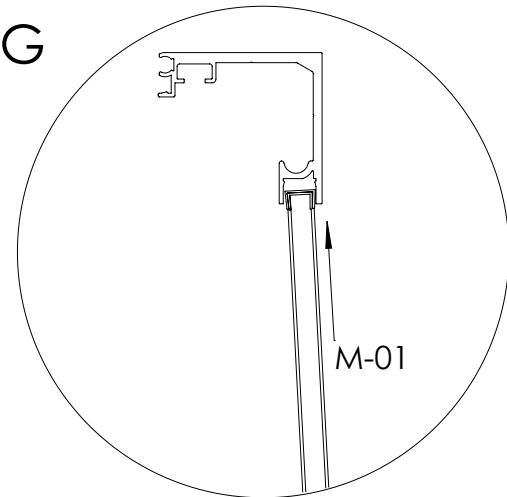







H

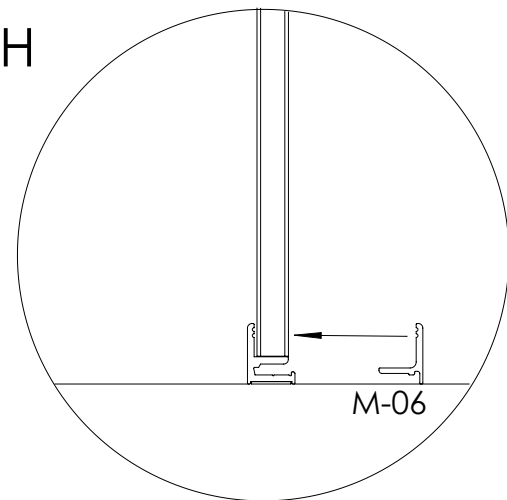


# 5

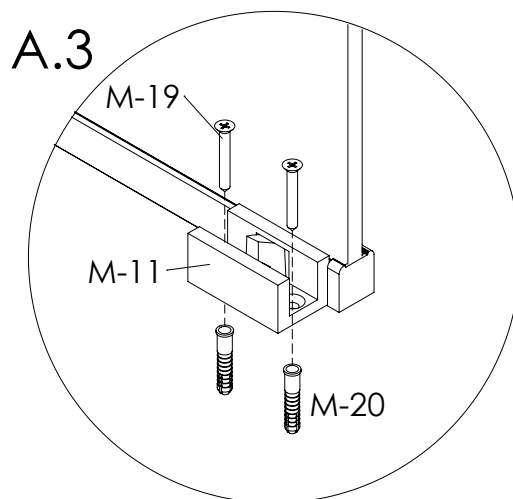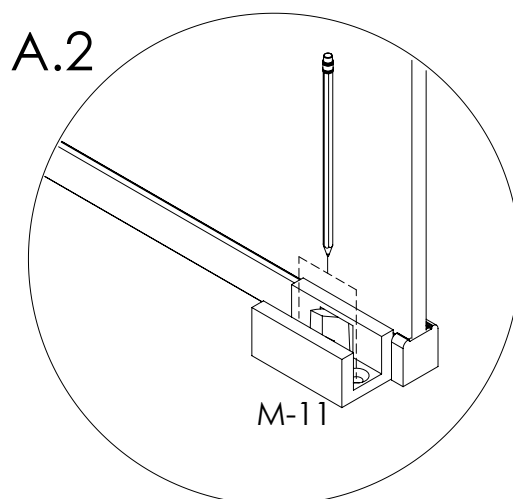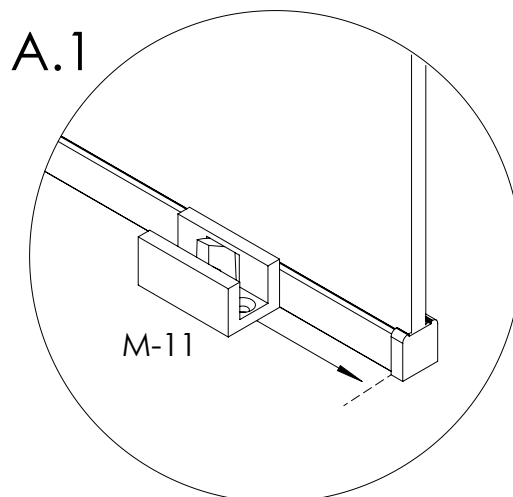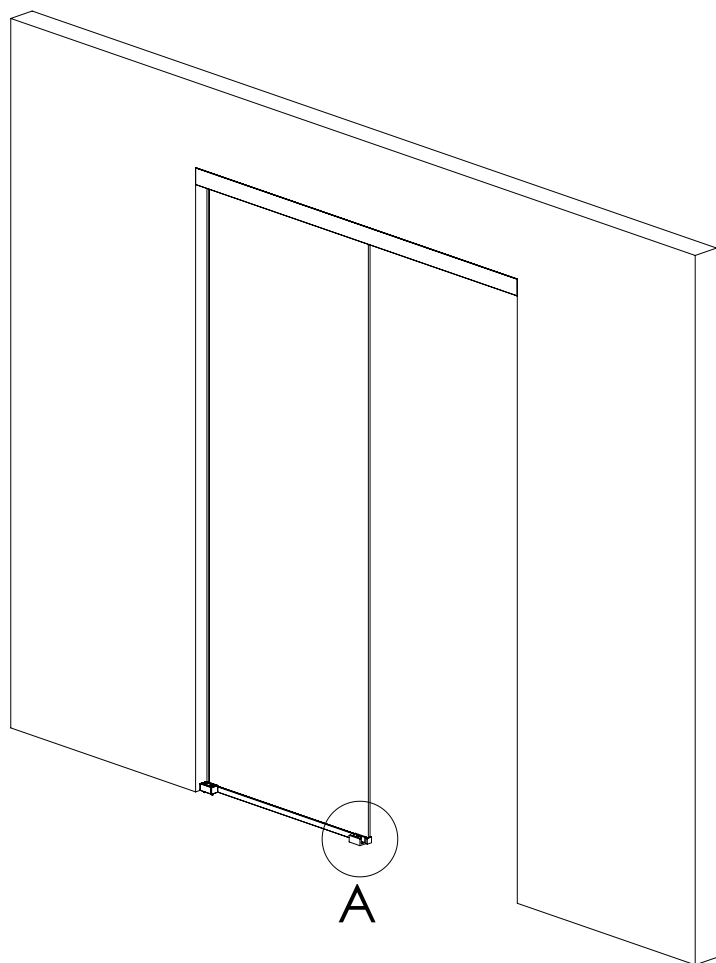


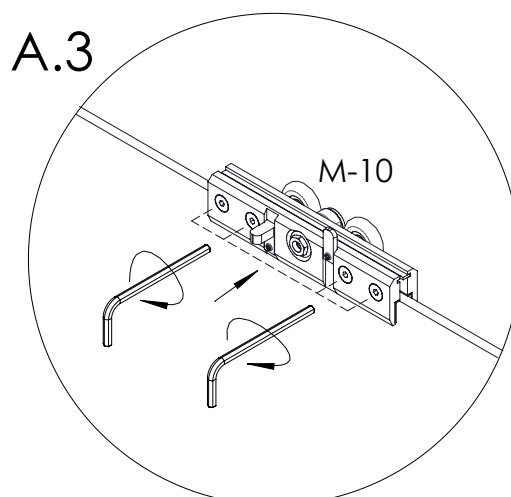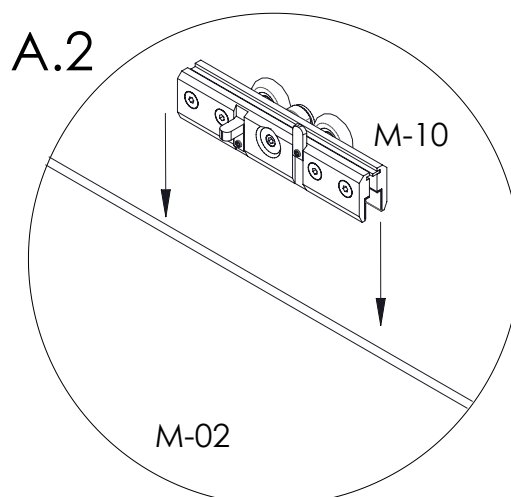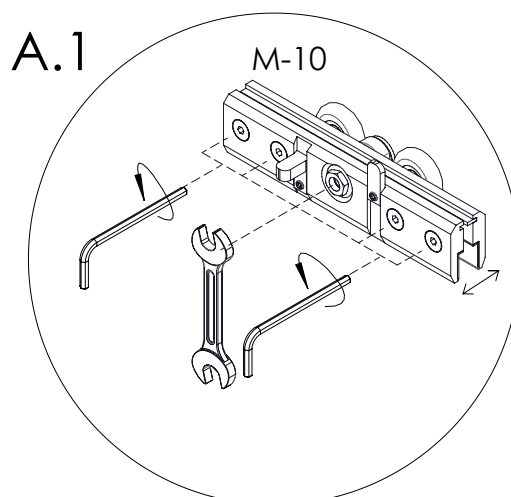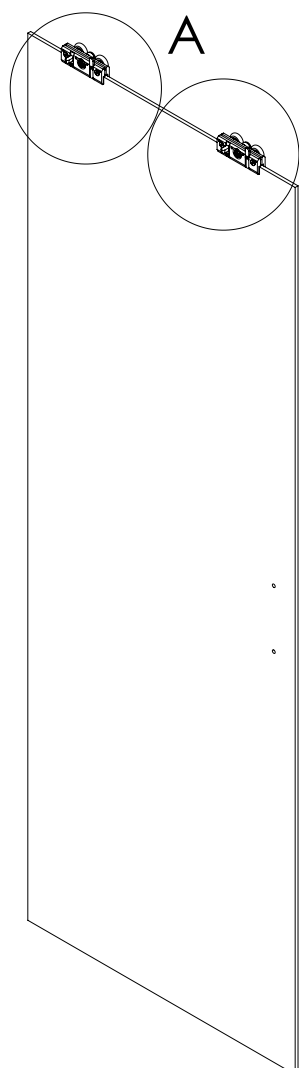

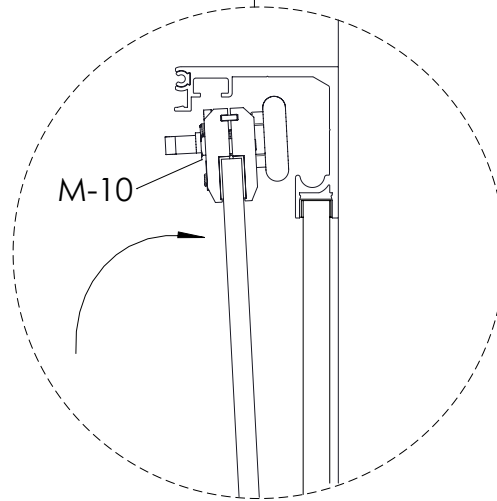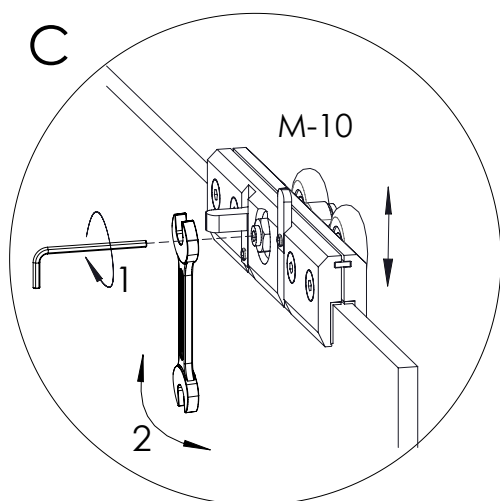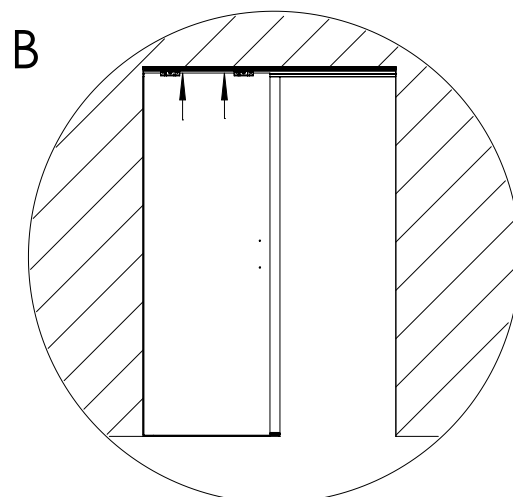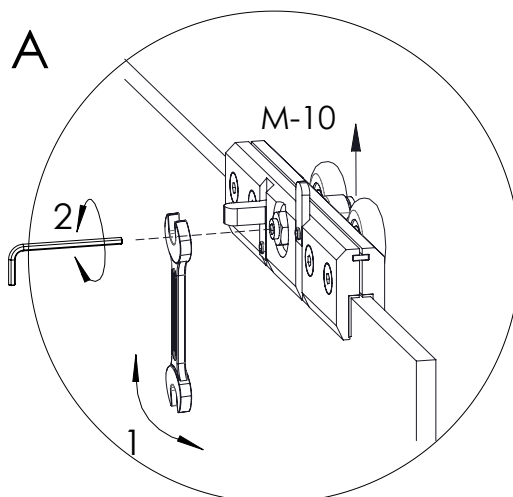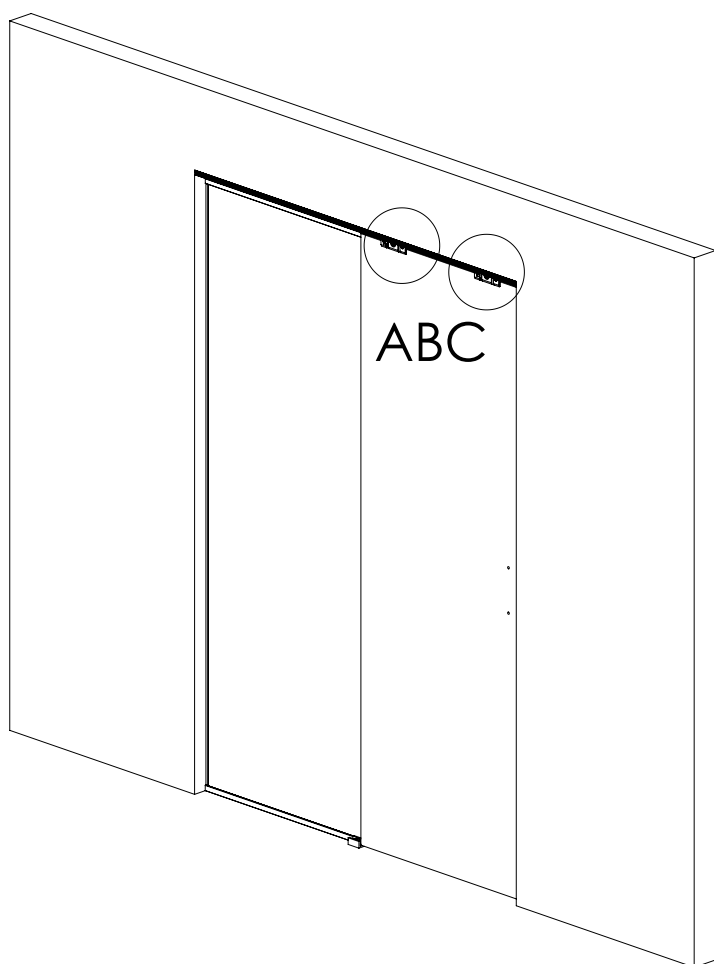


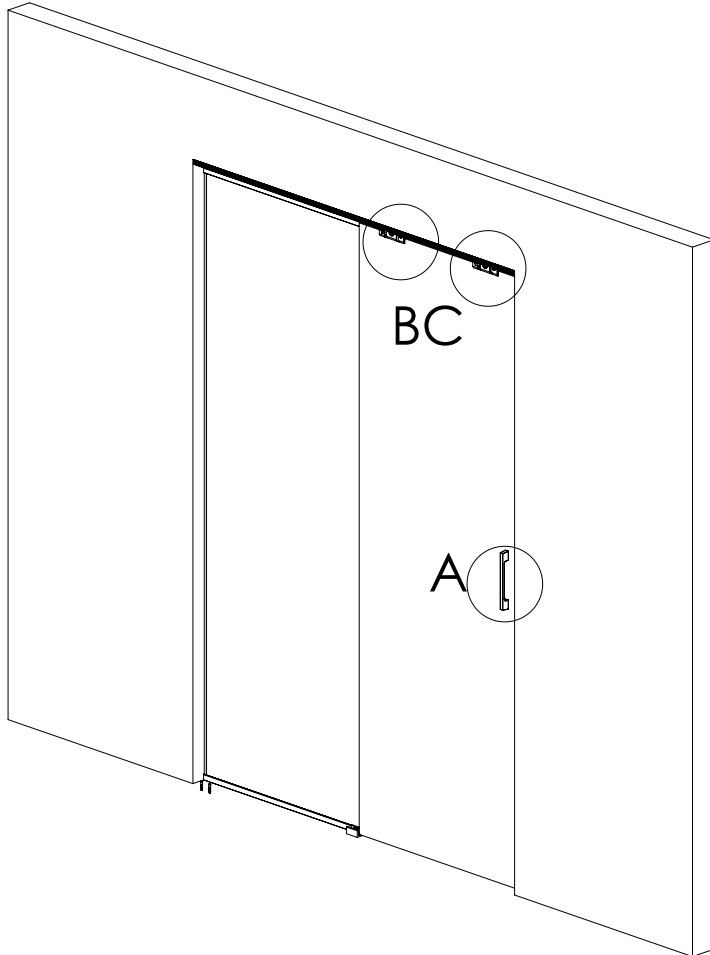


A

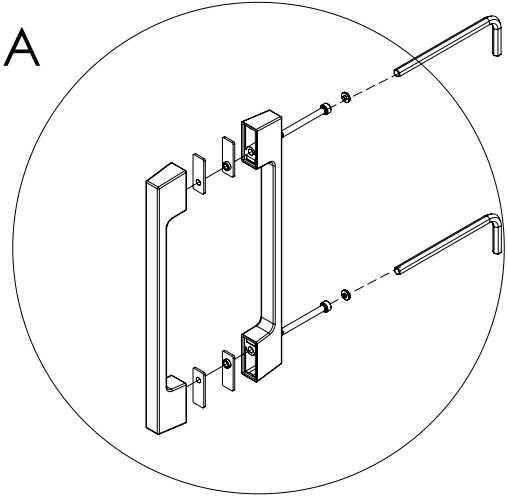


B




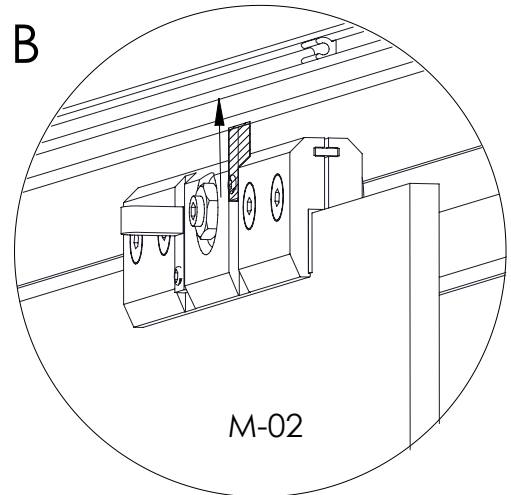


C





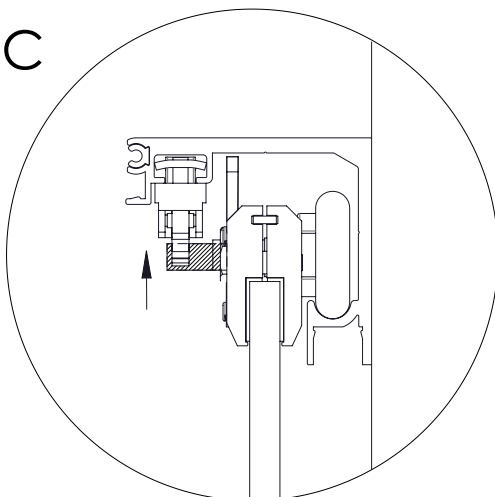


M-10

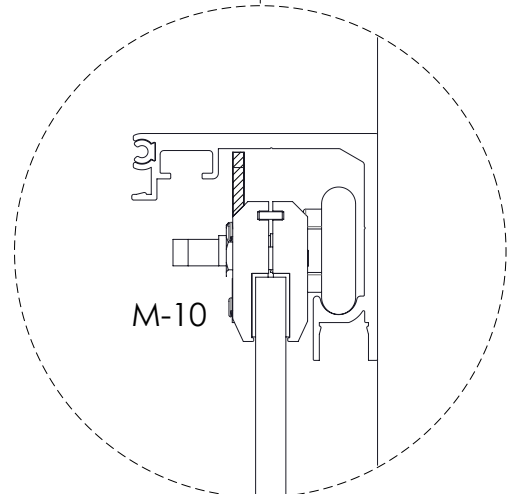


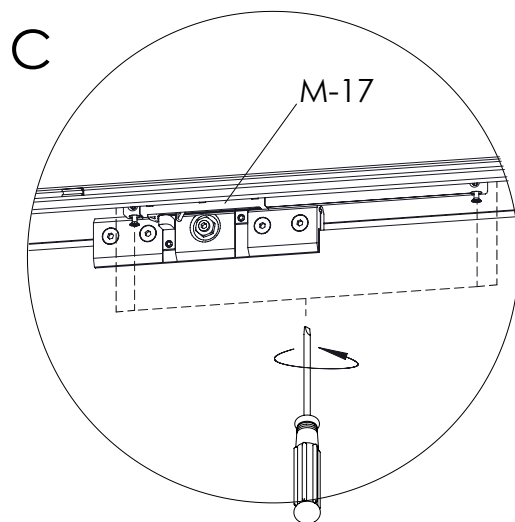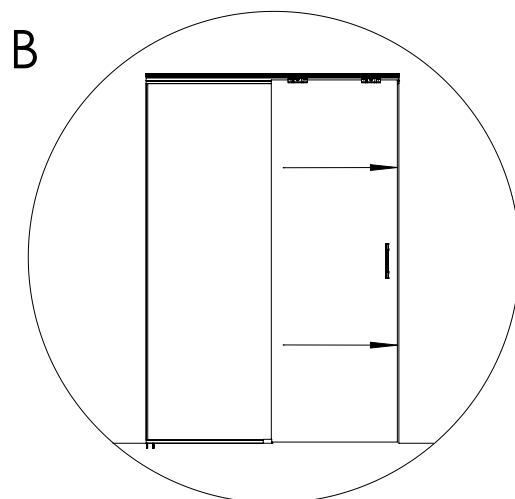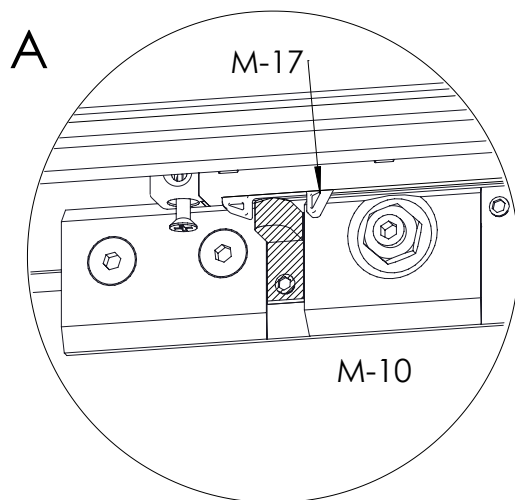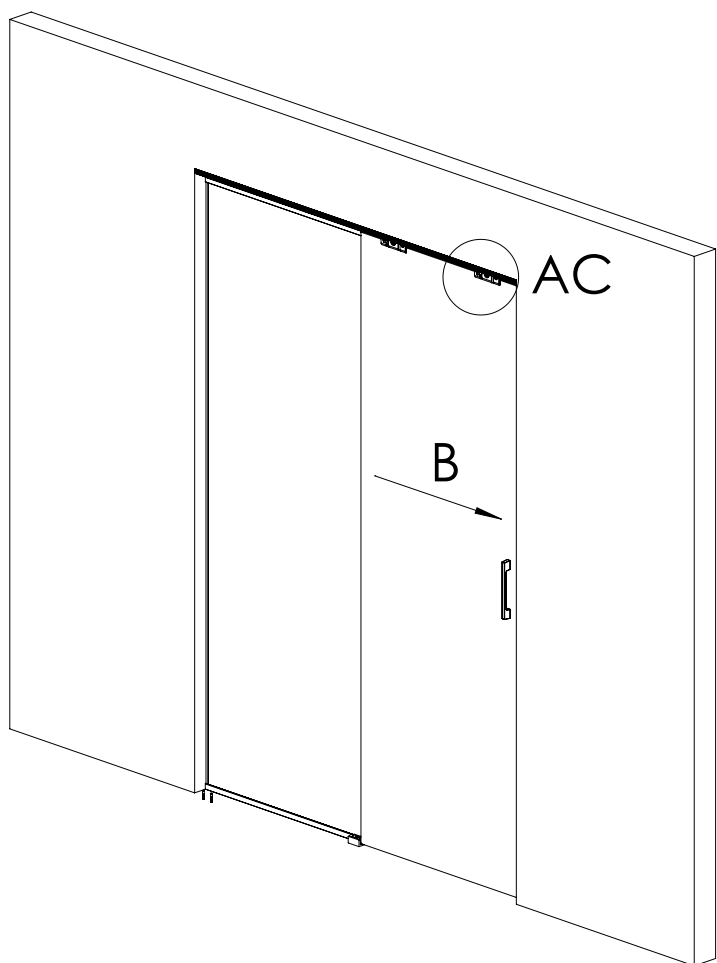


9

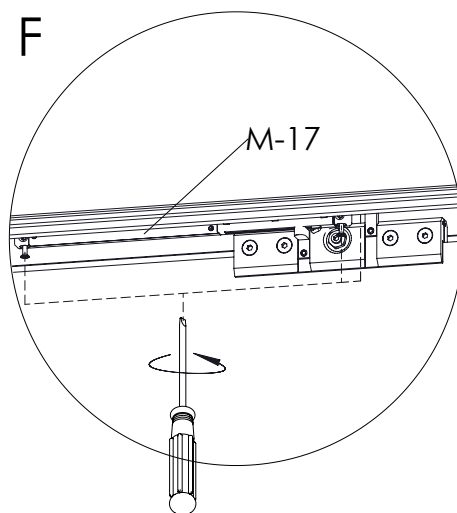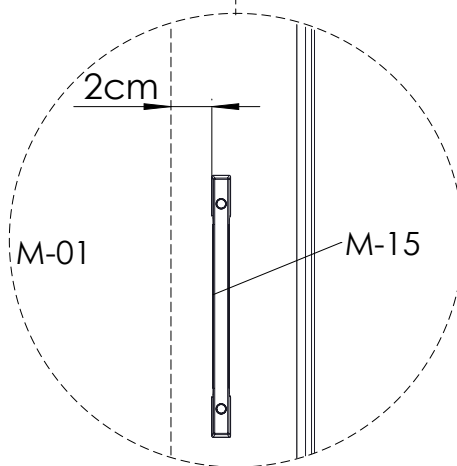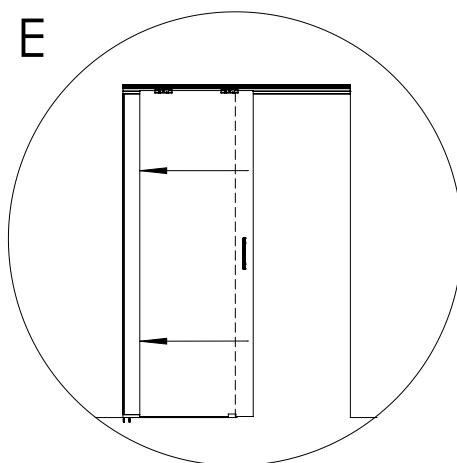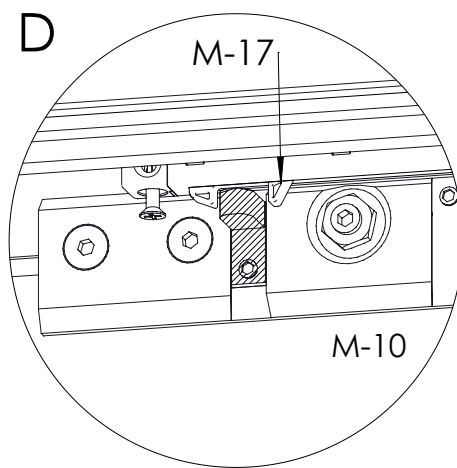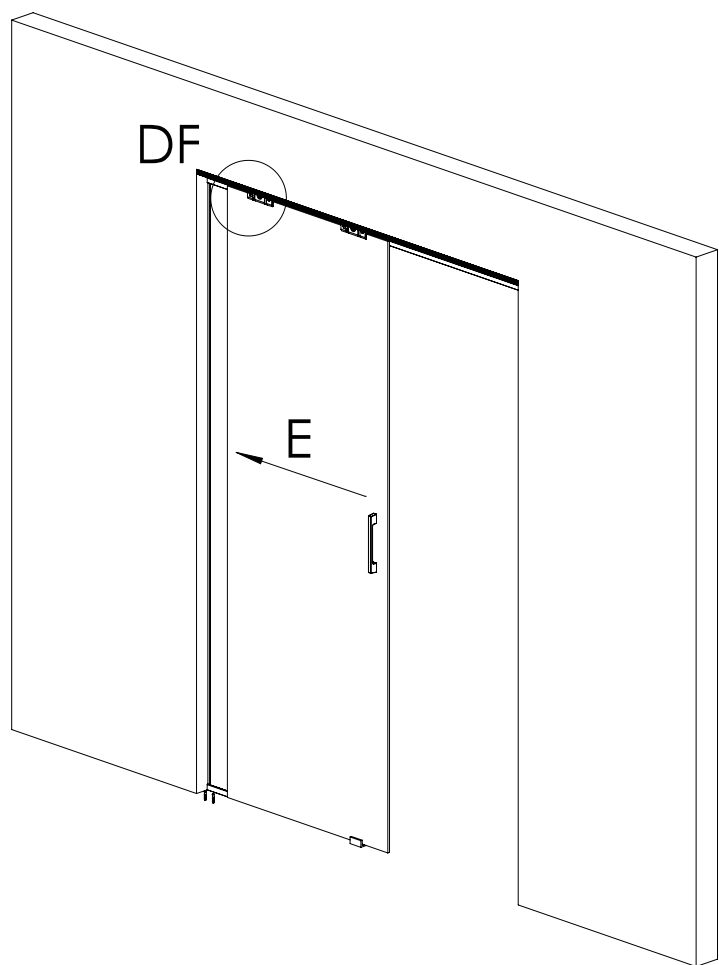

A.1

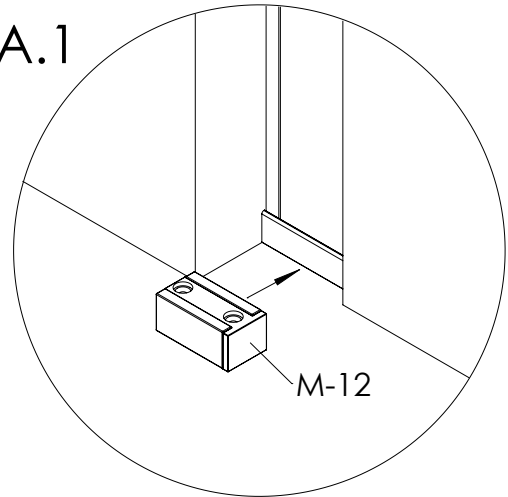

A.2

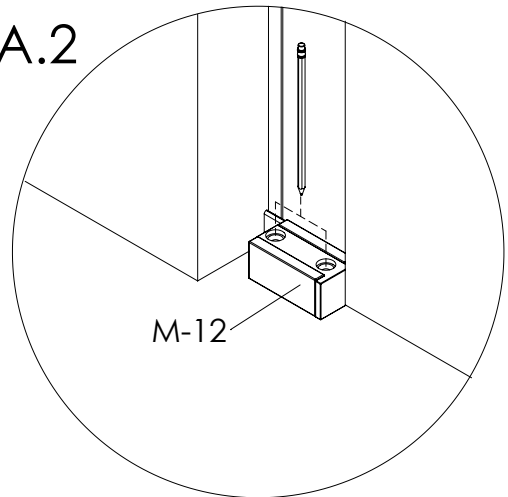

A.3

