



FRO-ARI-AM-002

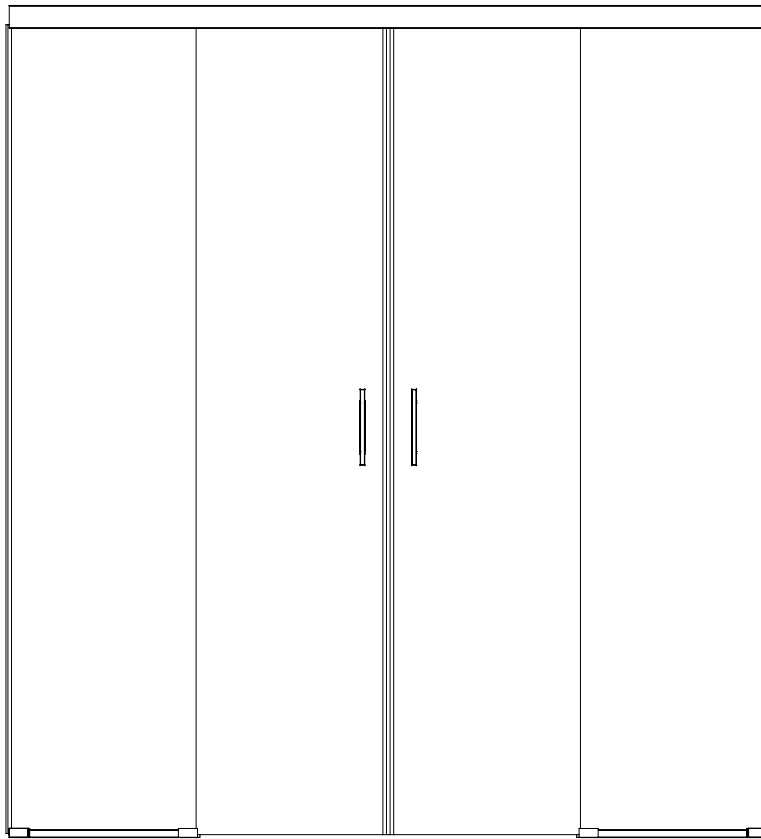


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


M-01
x2

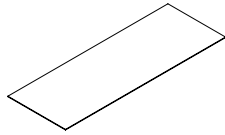


M-02
x2

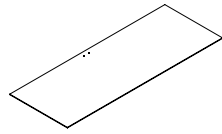


M-03
x1

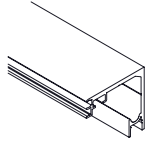


M-04
x1

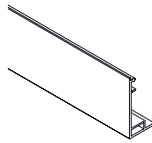


M-05
x2




M-06
x2




M-07
x2




M-08
x2

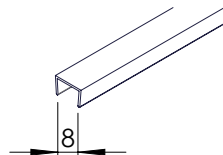


M-09
x2

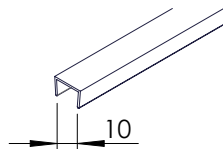


M-10
x4

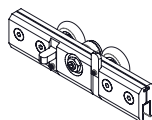

M-11
x2




M-12
x2



M-13
x3




M-14
x2




M-15
x2




M-16
x4




M-17
x4



M-18
x4




M-19
x8




M-20
x12




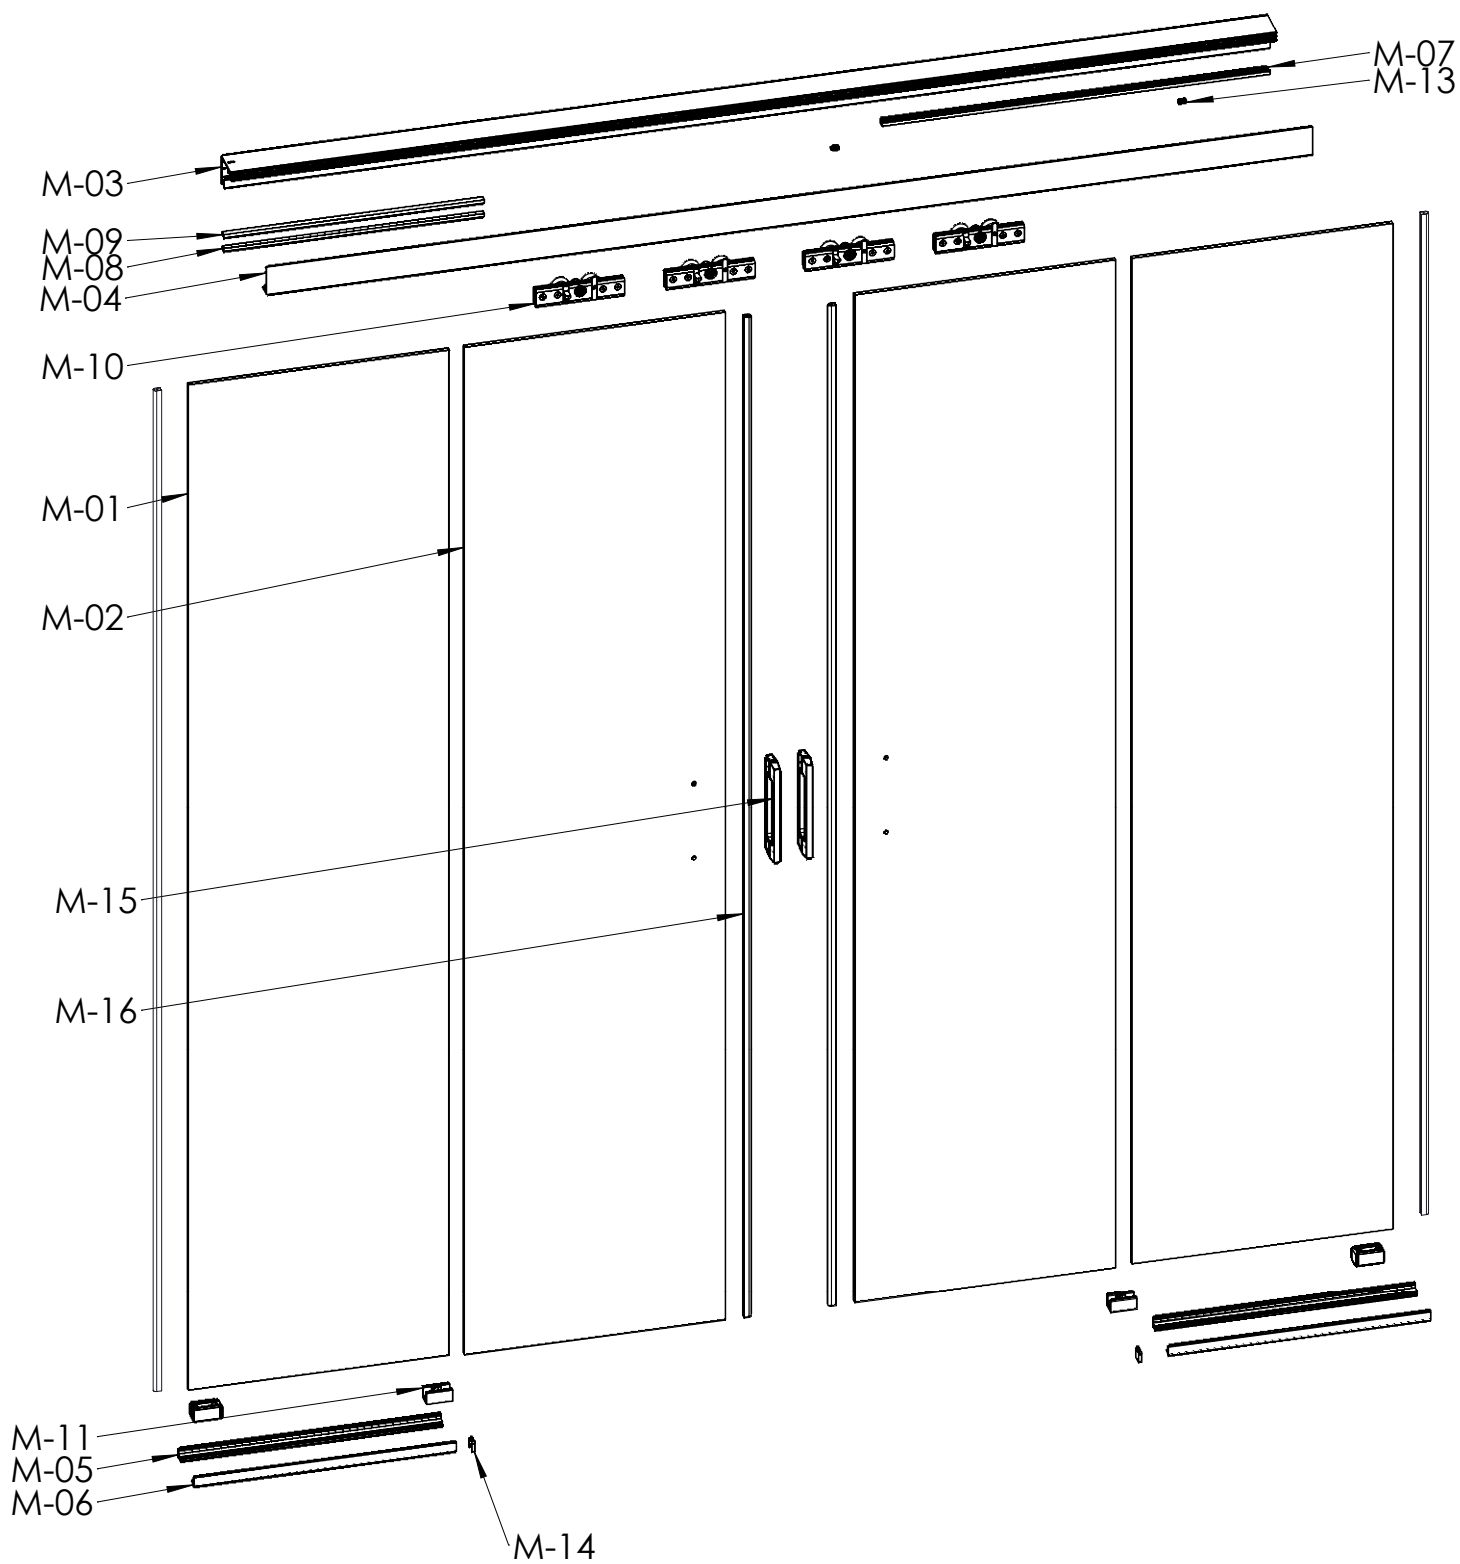


1

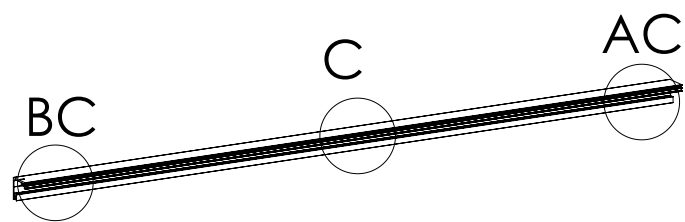


A

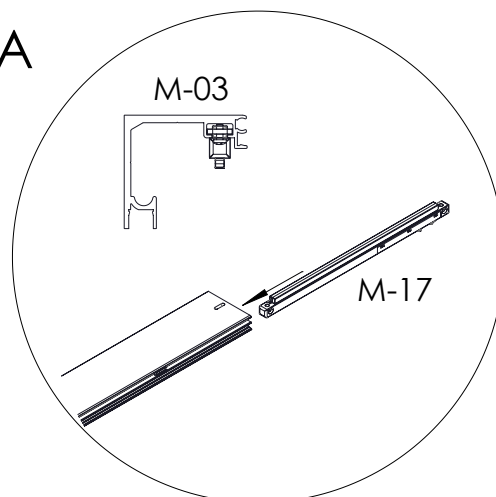


B

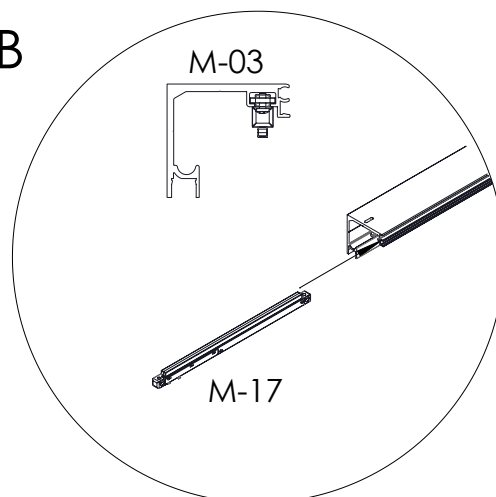



C

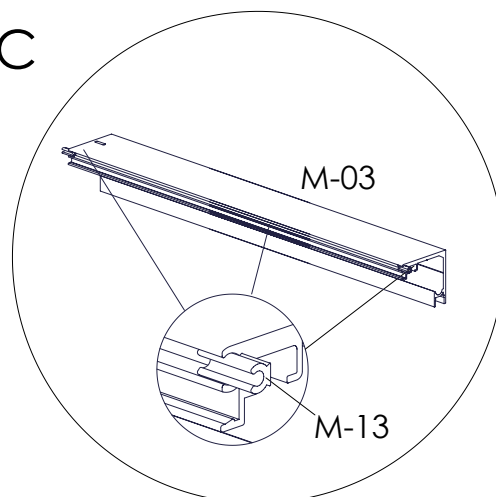


2

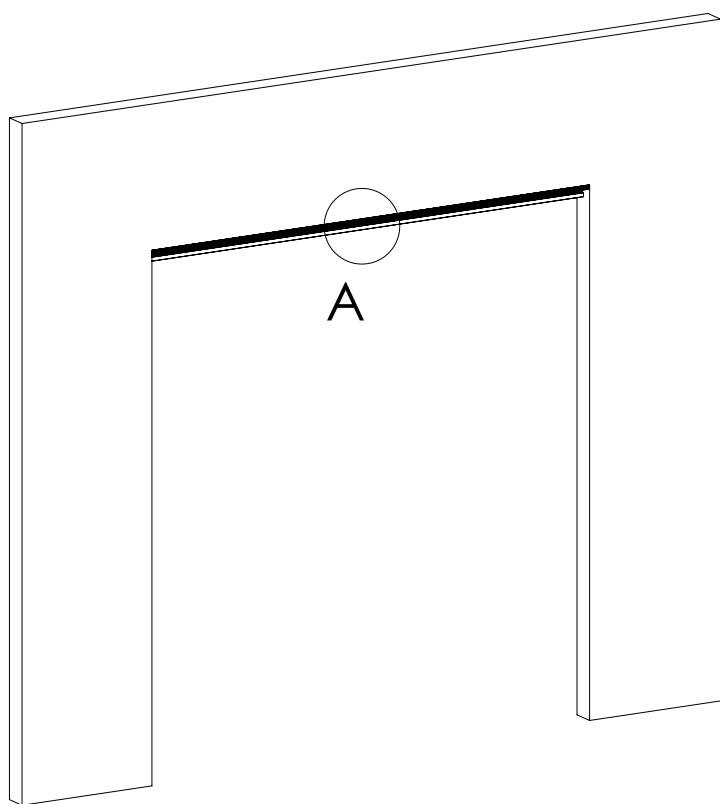


A.1


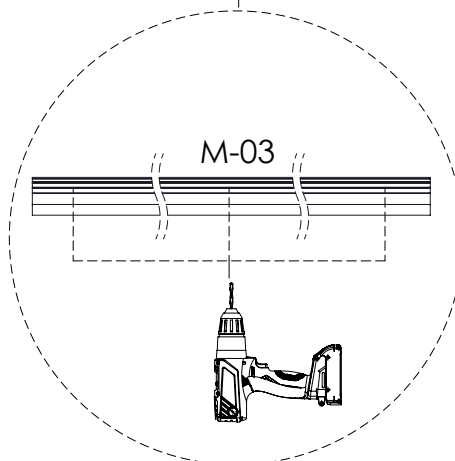
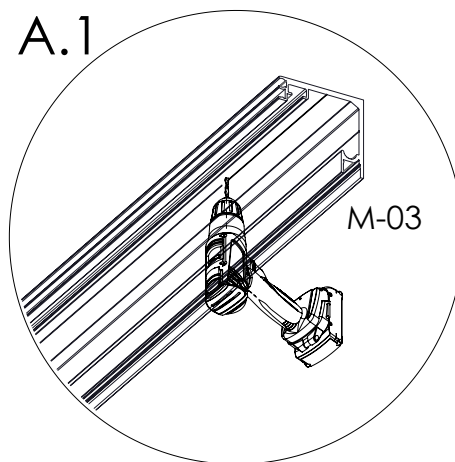







A.2




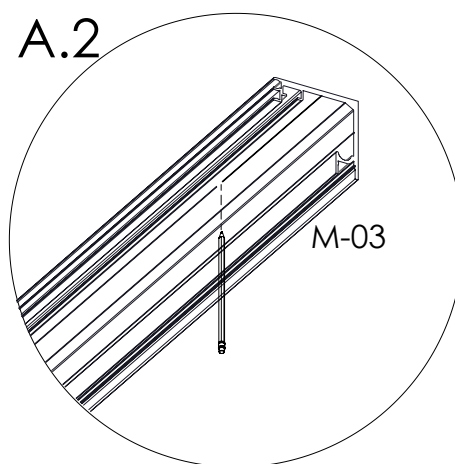



A.3

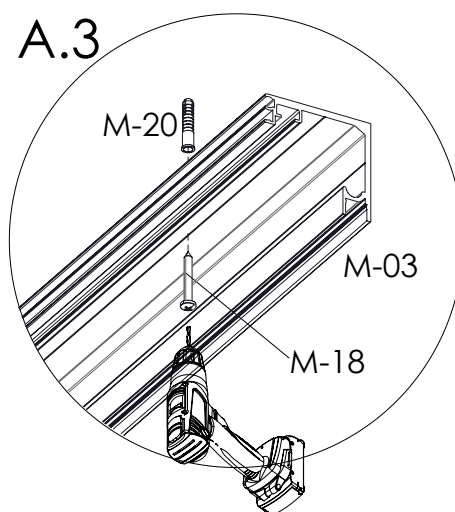

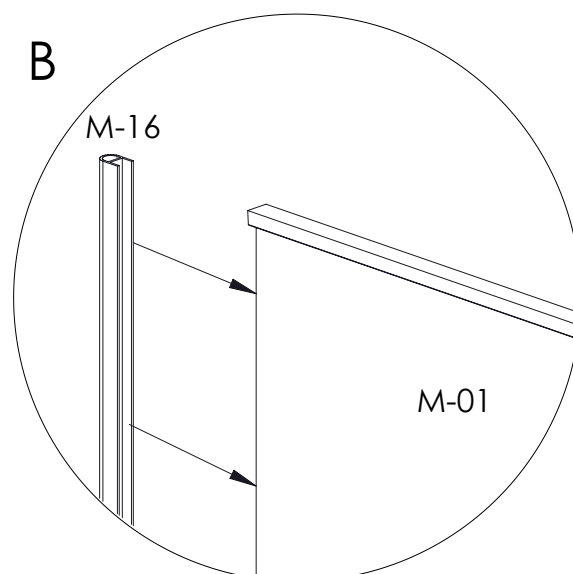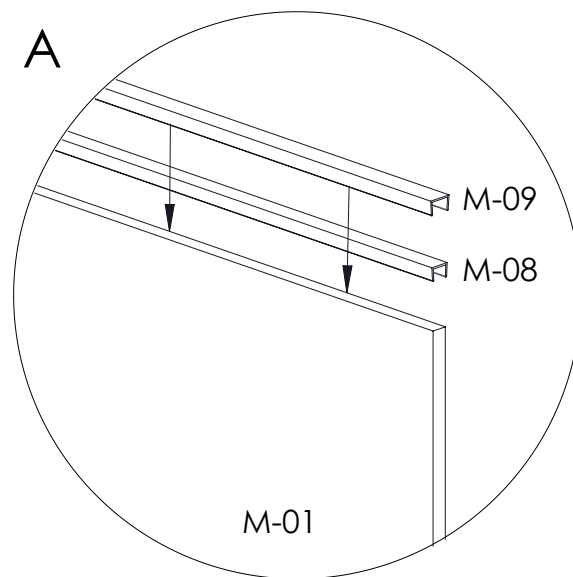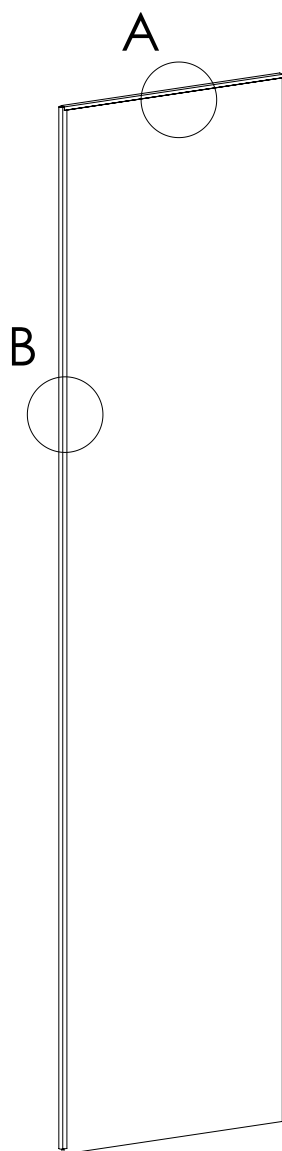


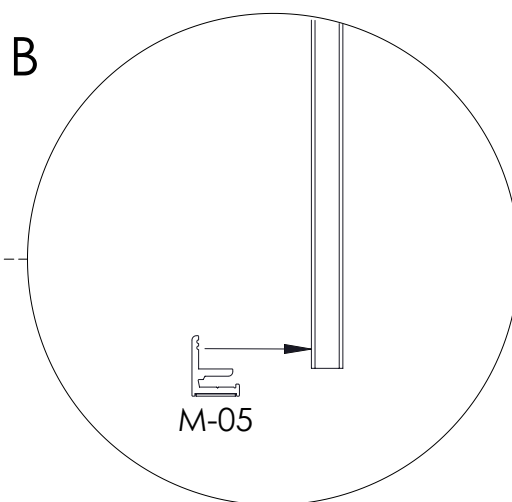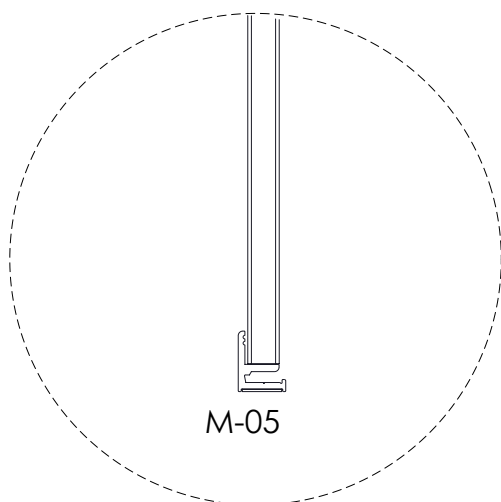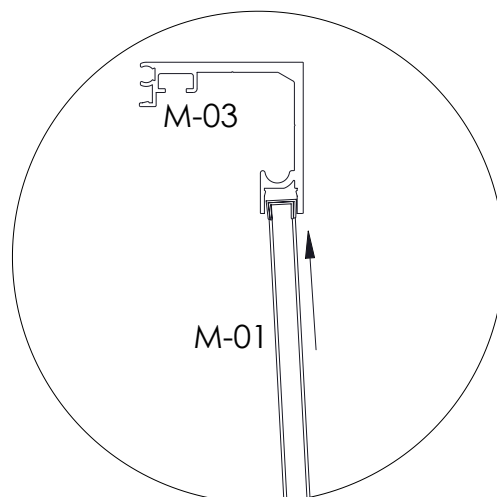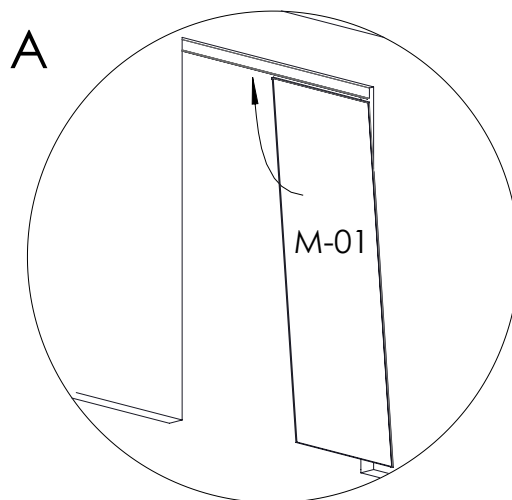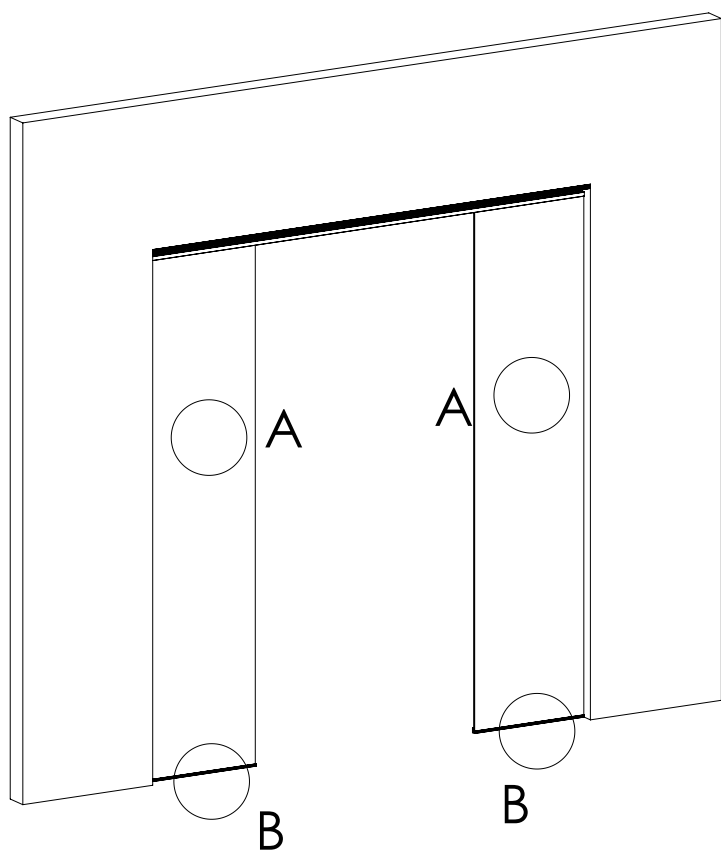

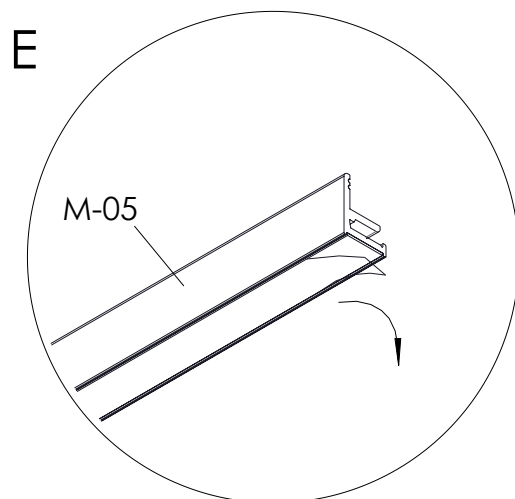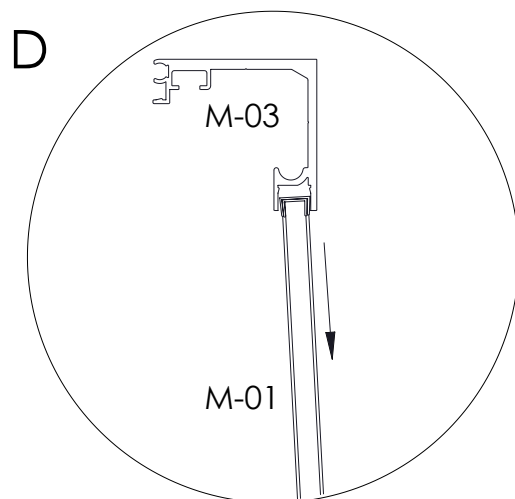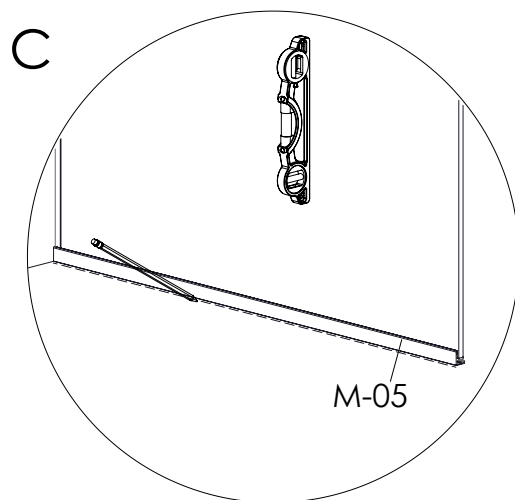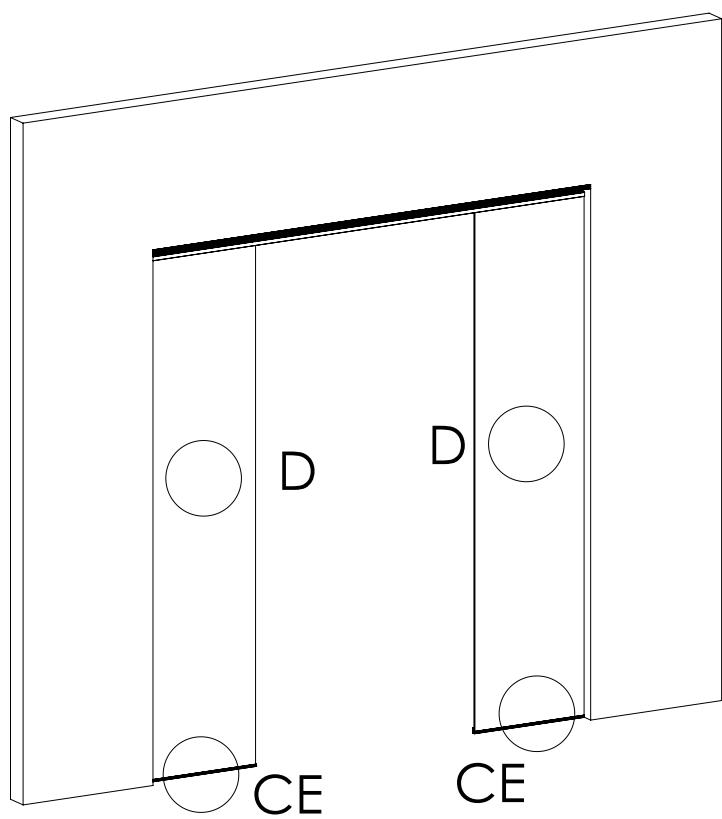


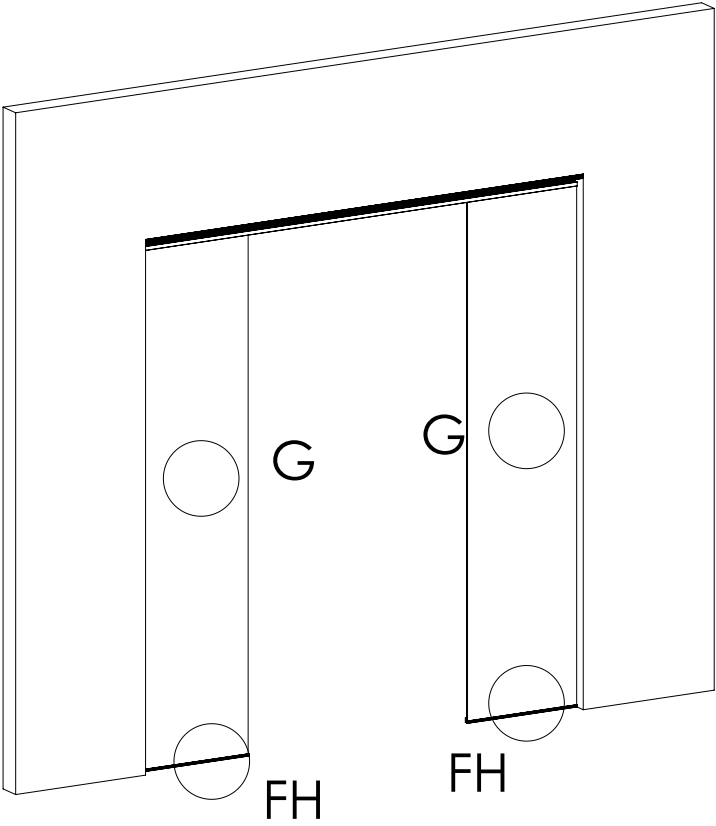


F

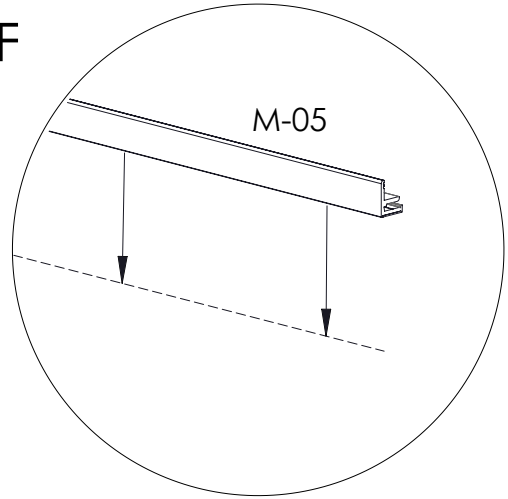





G

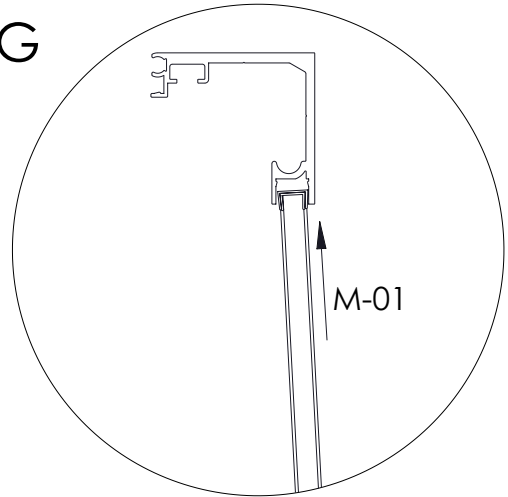


H

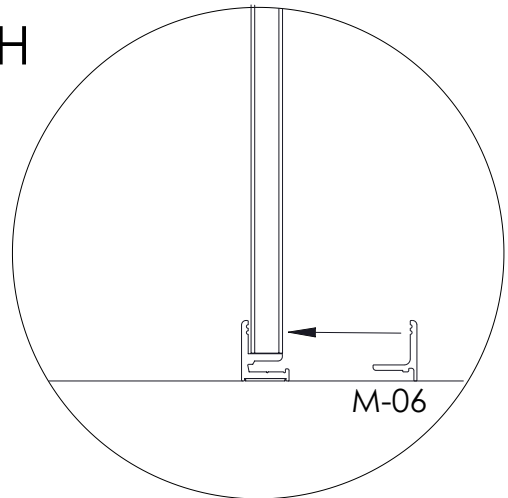


5

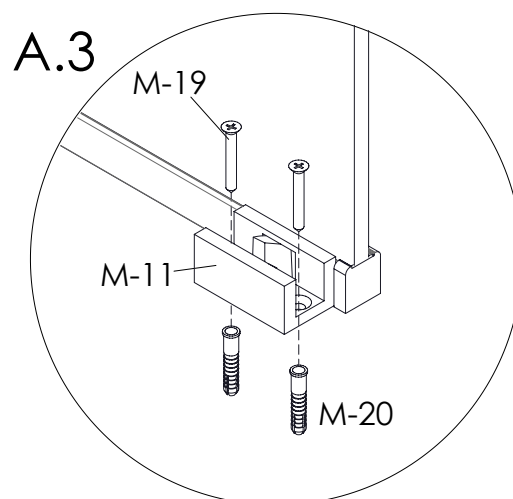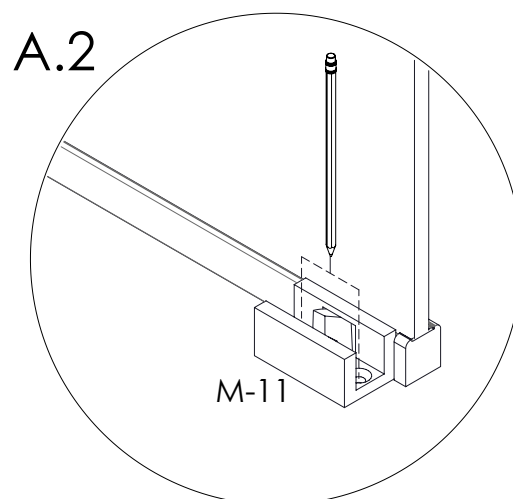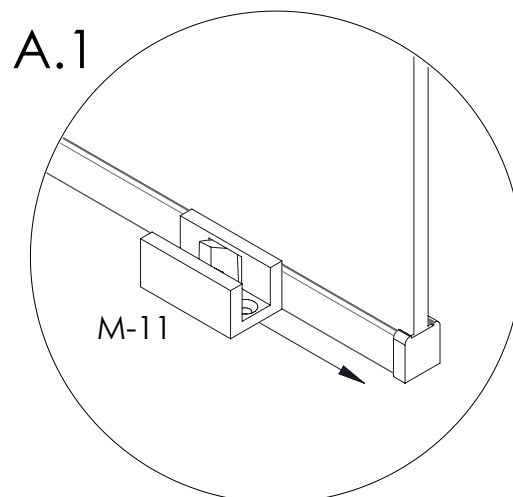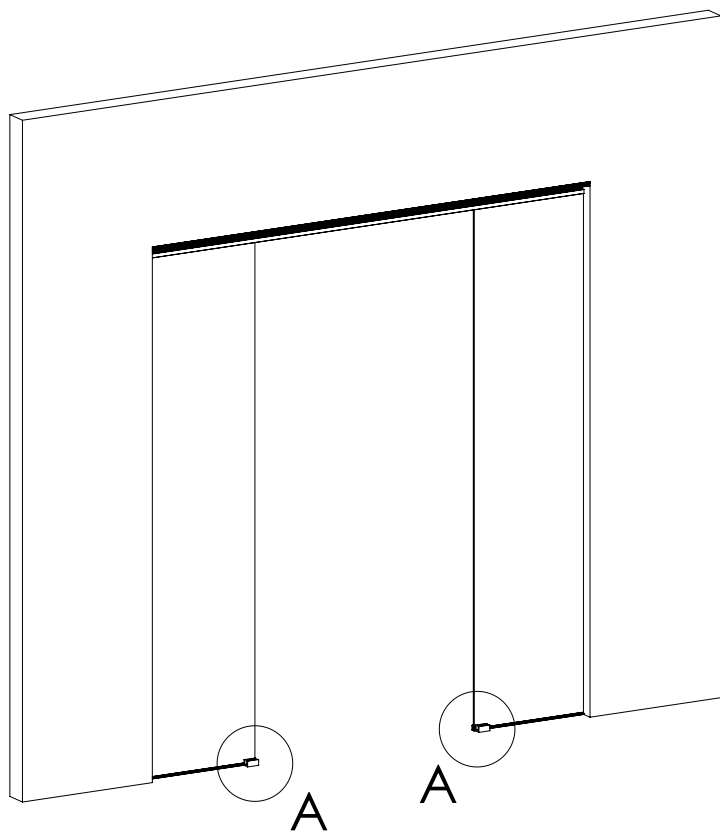


6

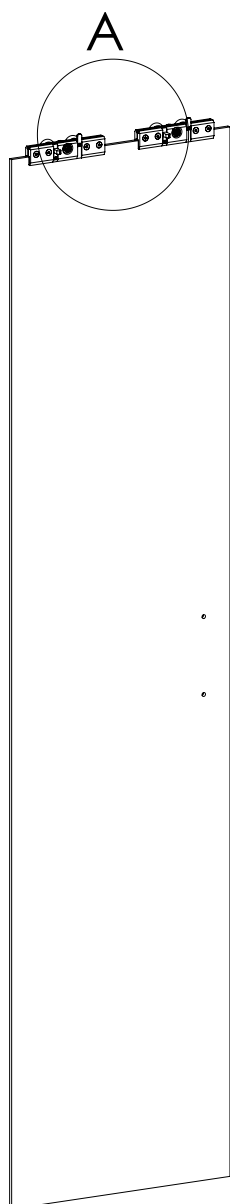


A.1

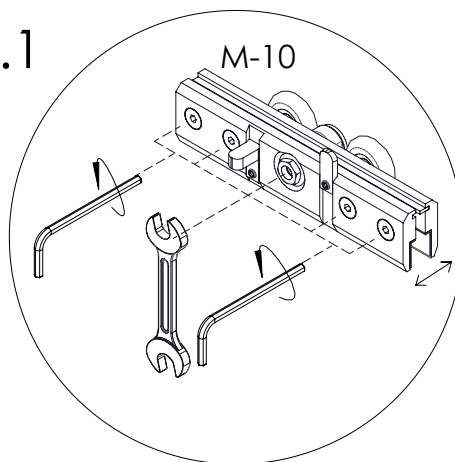

A.2

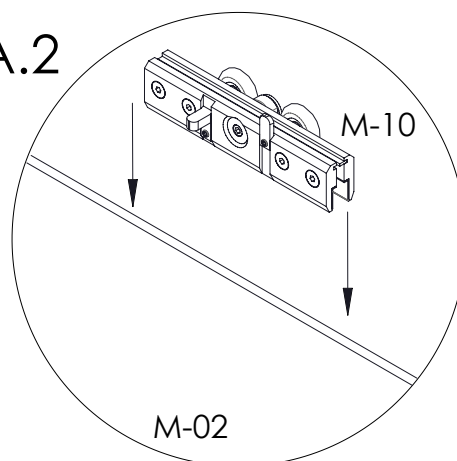

A.3

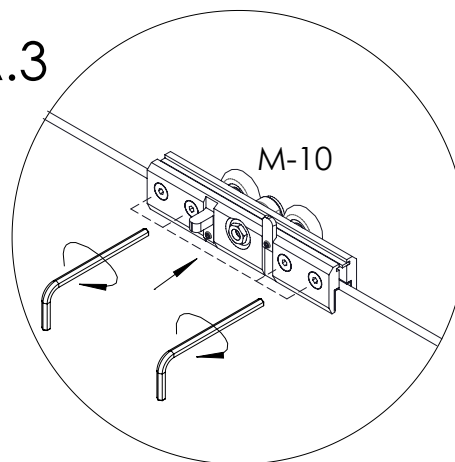

7

