

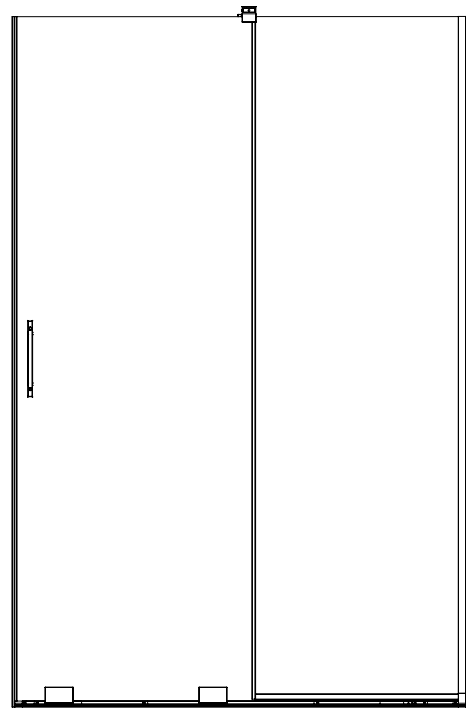


FRO-PER-AM-003

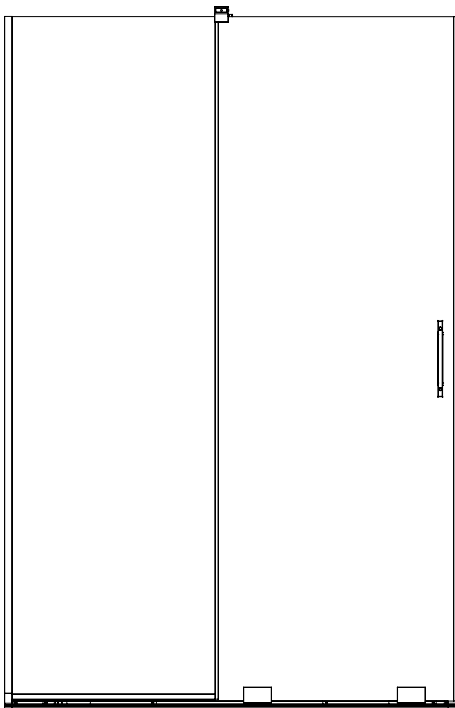


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


M-01
x1

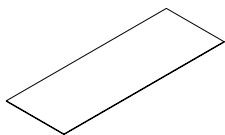


M-11
x1




M-21
x3




M-02
x1

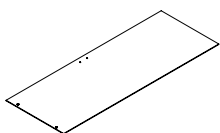


M-12
x1

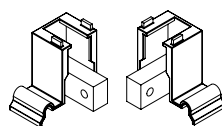

M-22
x1




M-03
x1




M-13
x1




M-04
x1




M-14
x1




M-05
x1



M-15
x2

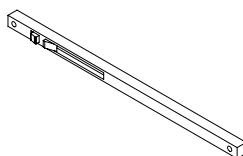

M-06
x1




M-16
x1



M-07
x1




M-17
x1




M-08
x1



M-18
x1




M-09
x1



M-19
x1




M-10
x1








M-20
x4




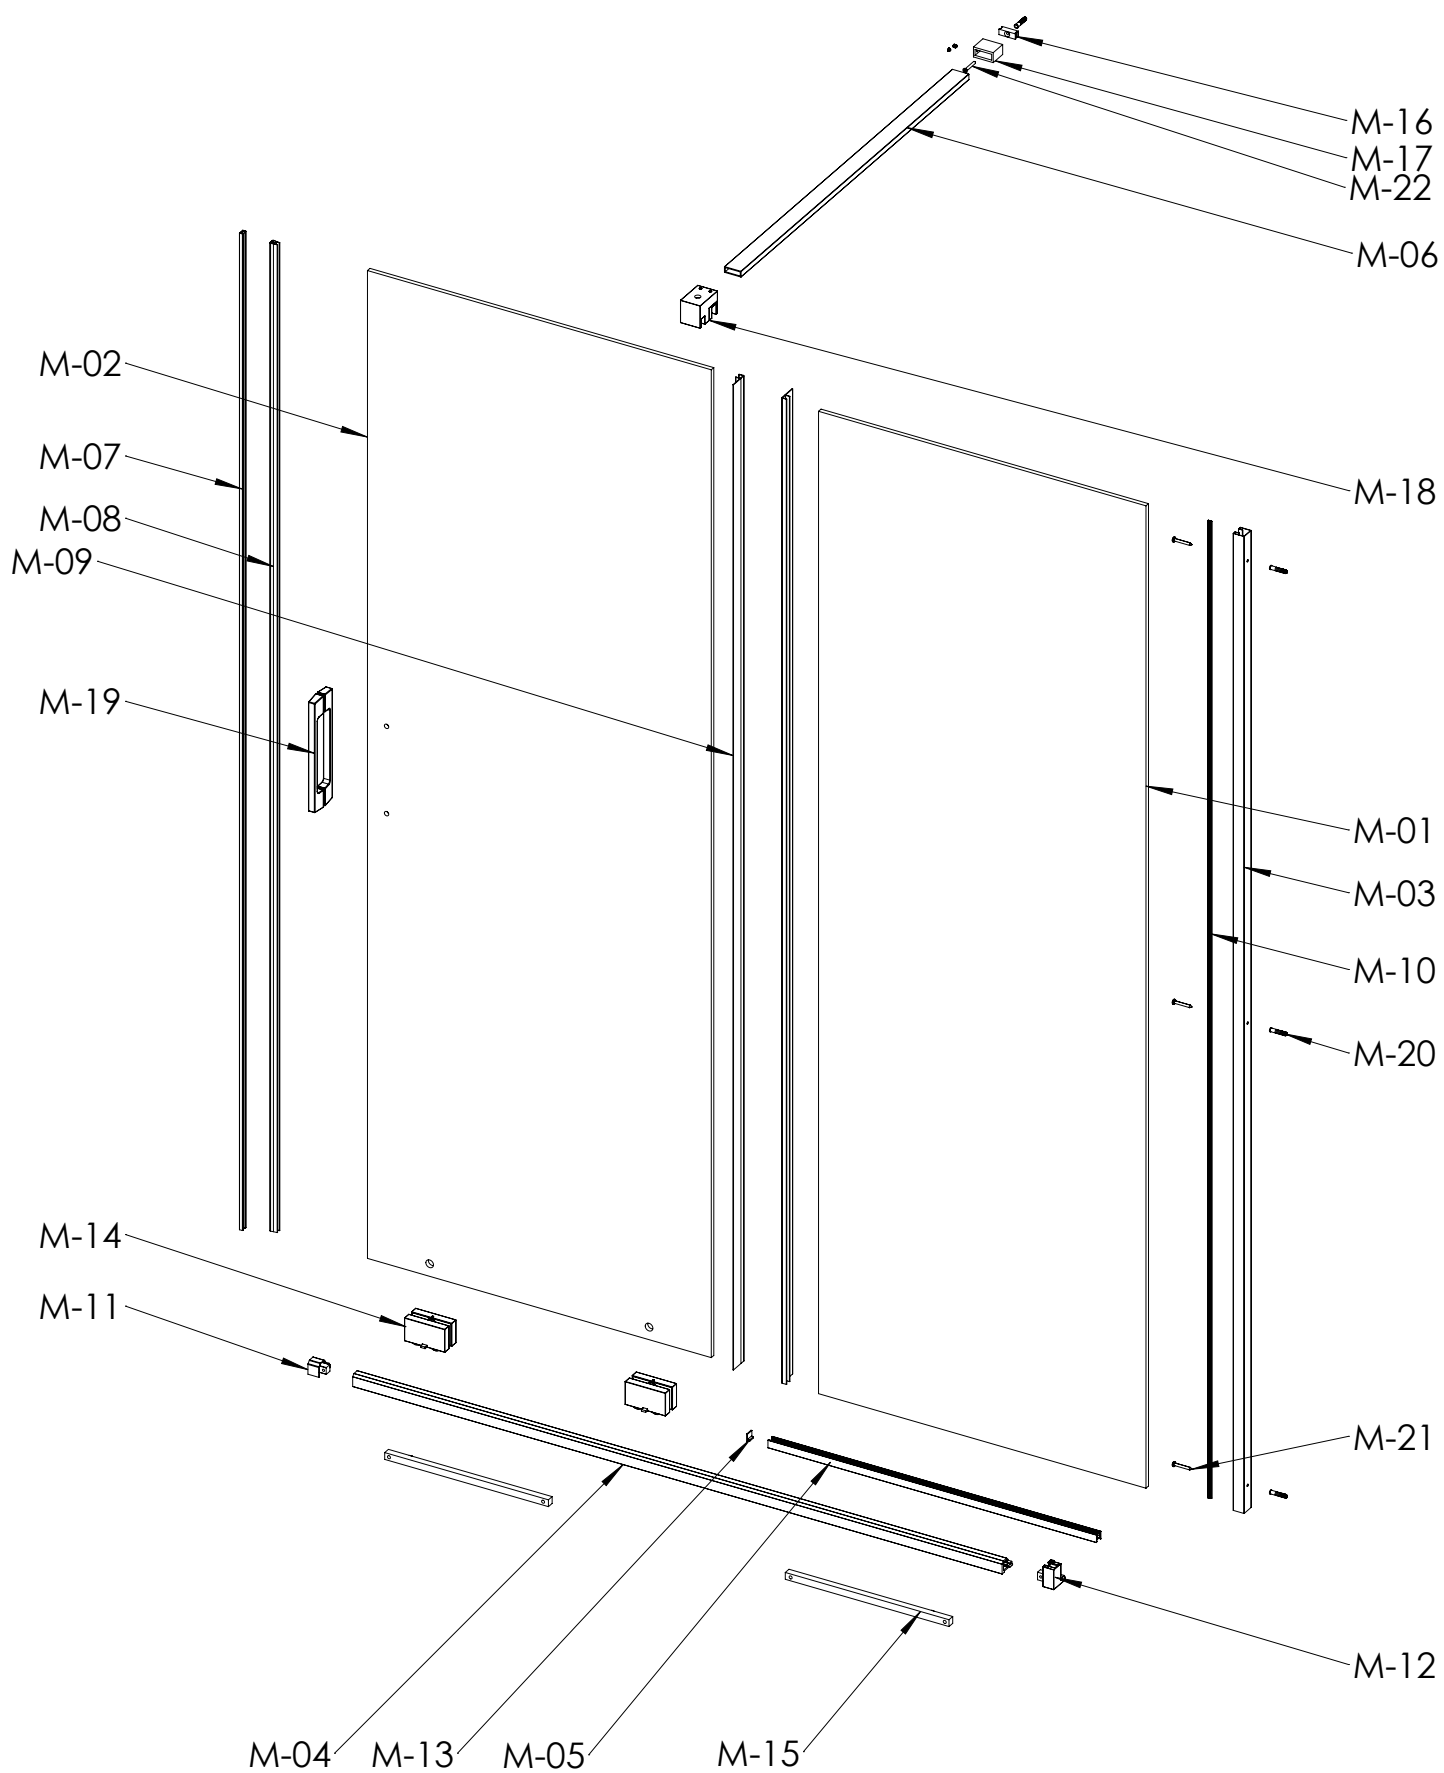


1

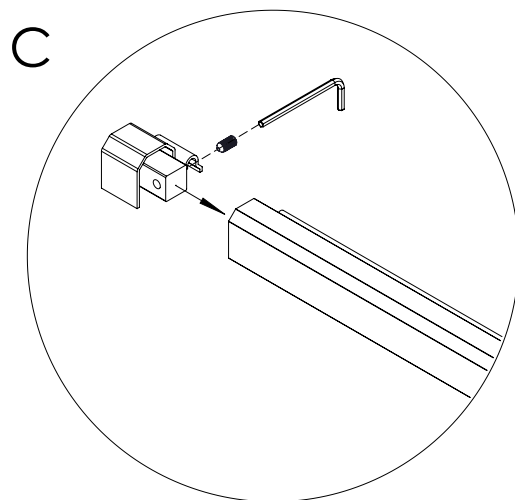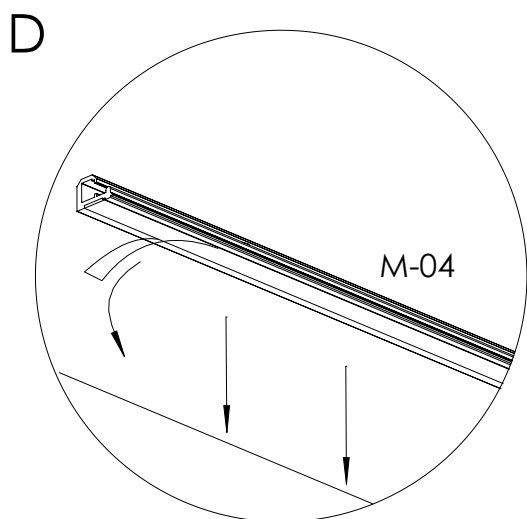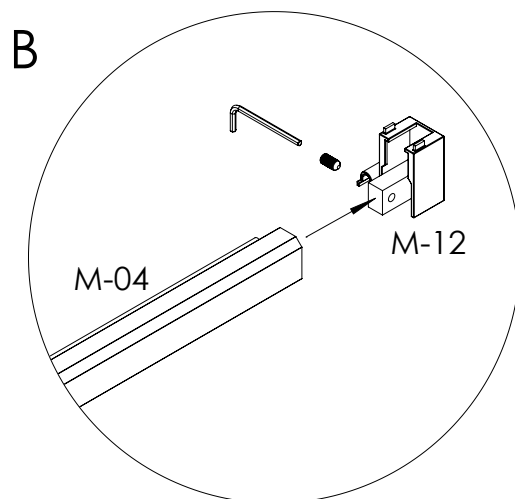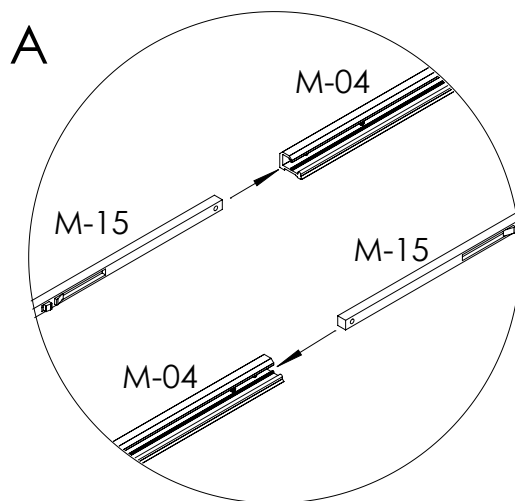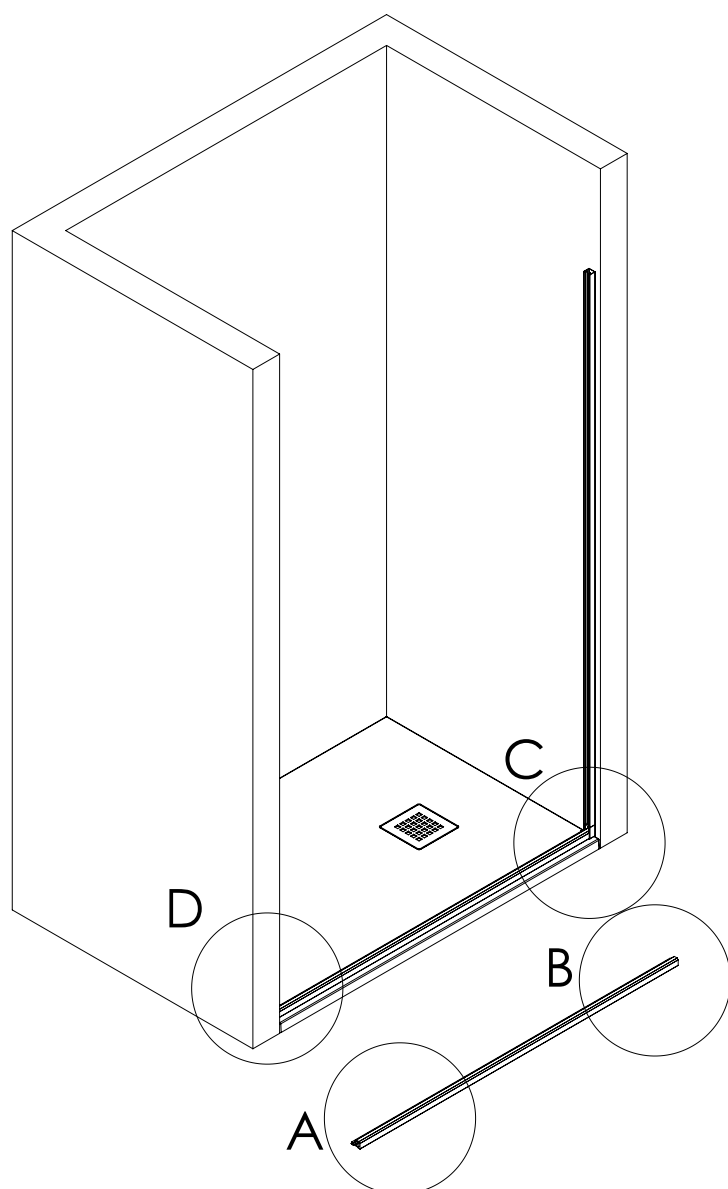


2

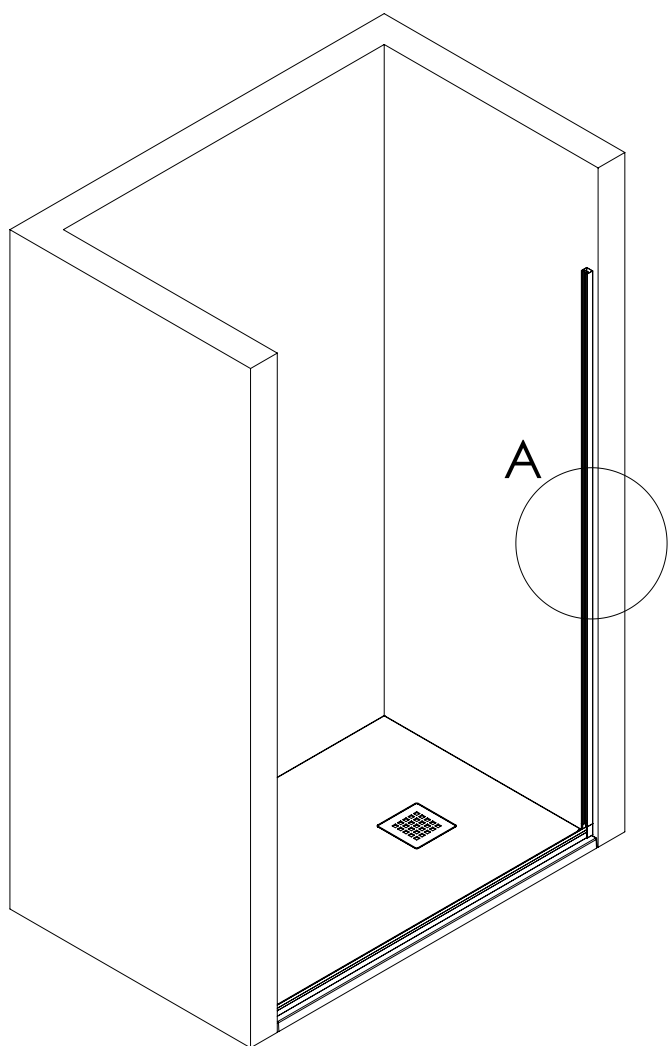


A.1

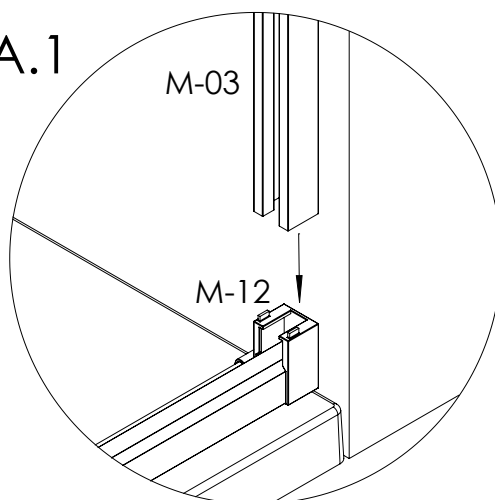


A.2

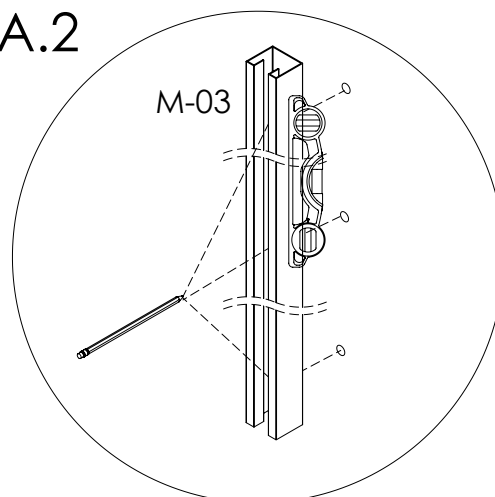


A.3

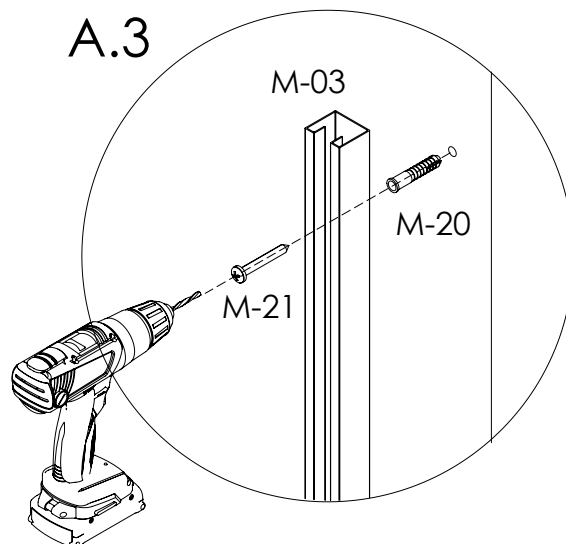


3

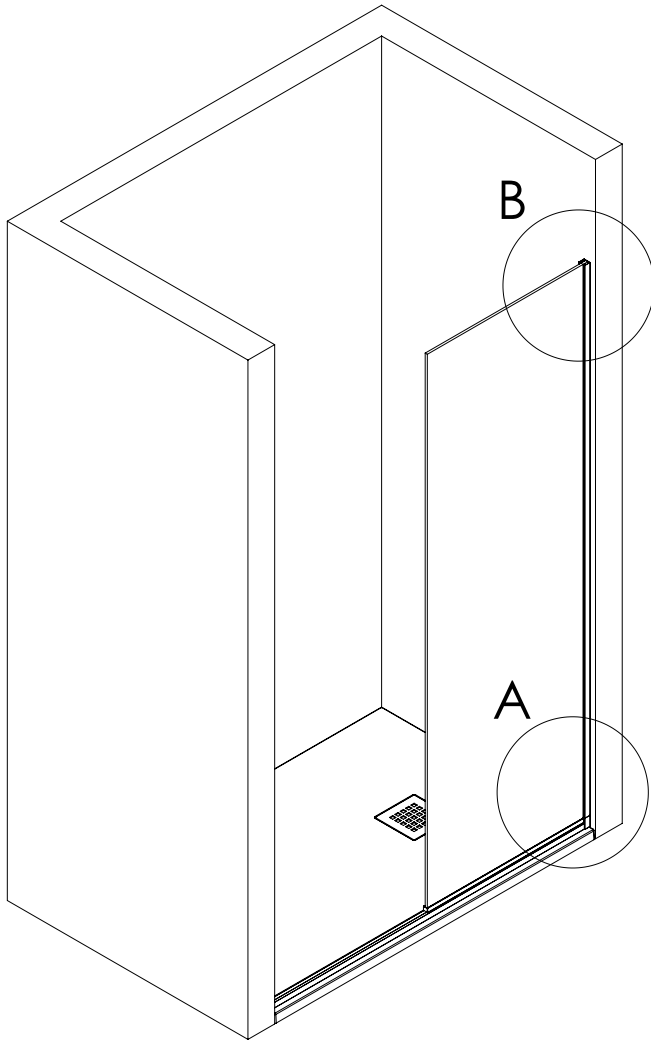


A.1

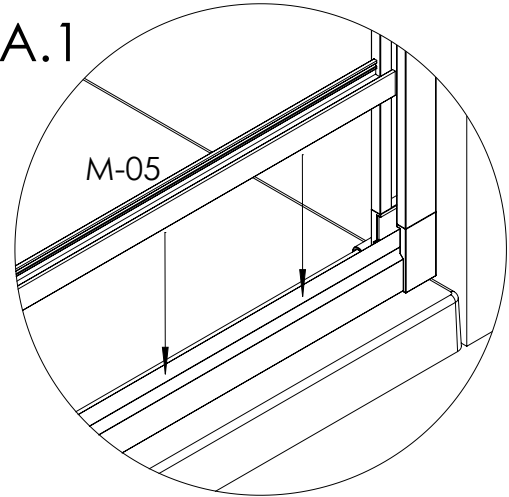

A.2

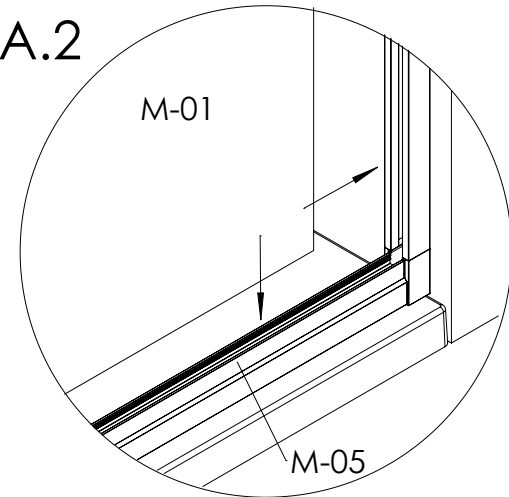


B


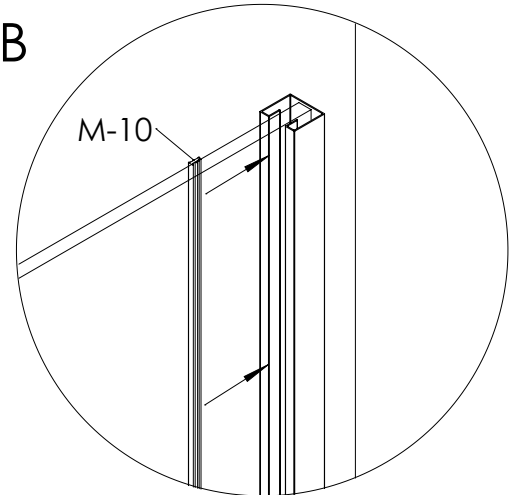


4


A.1

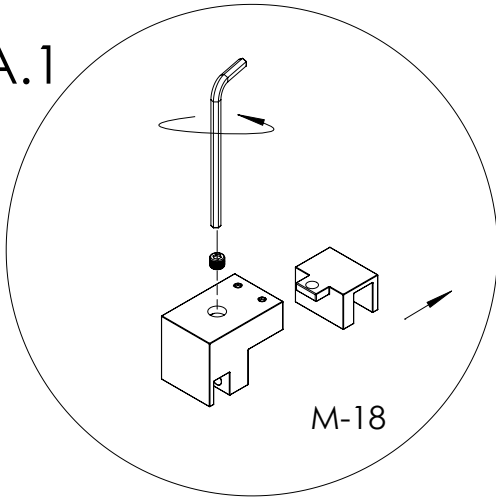


A.2

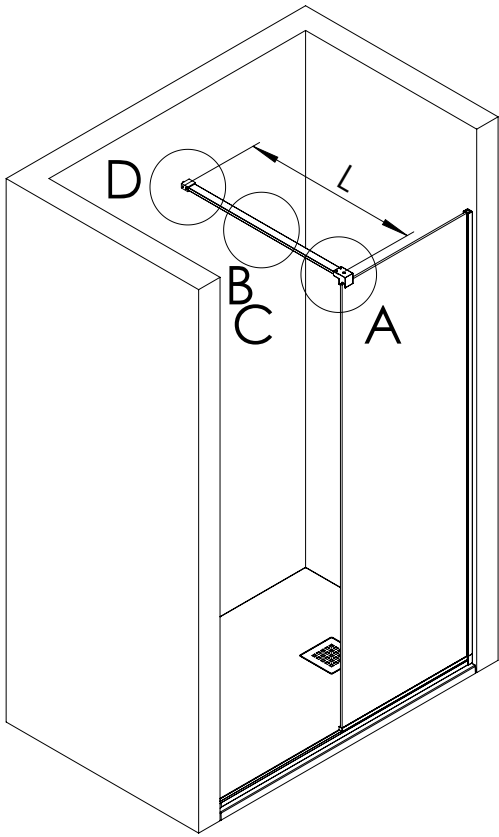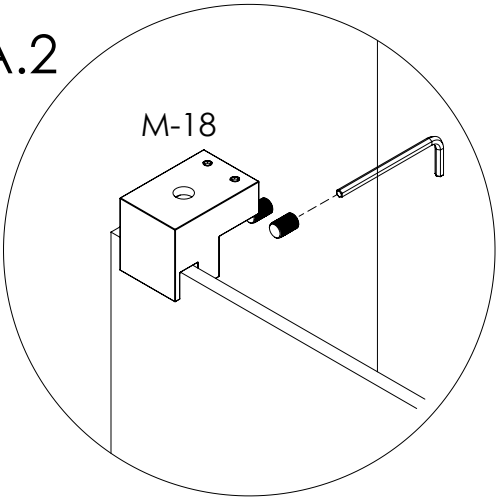


B

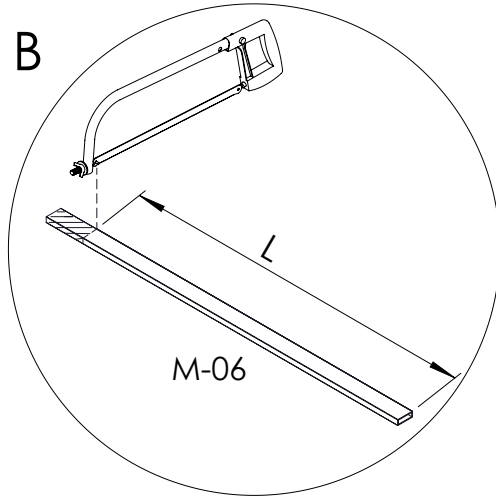


D

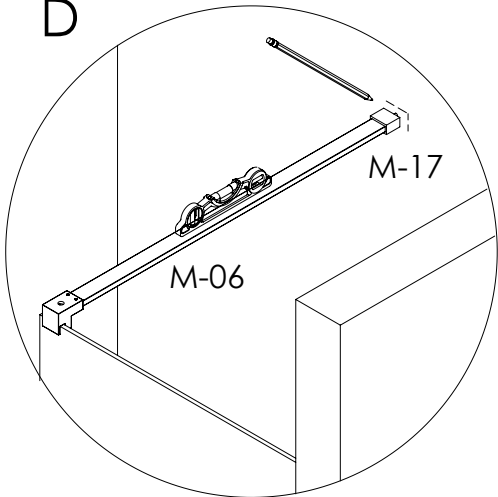


C

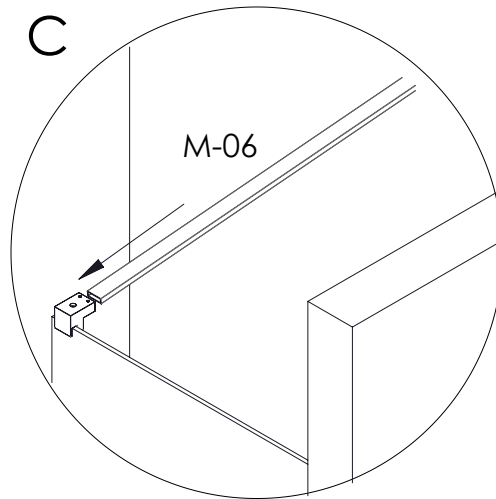


4

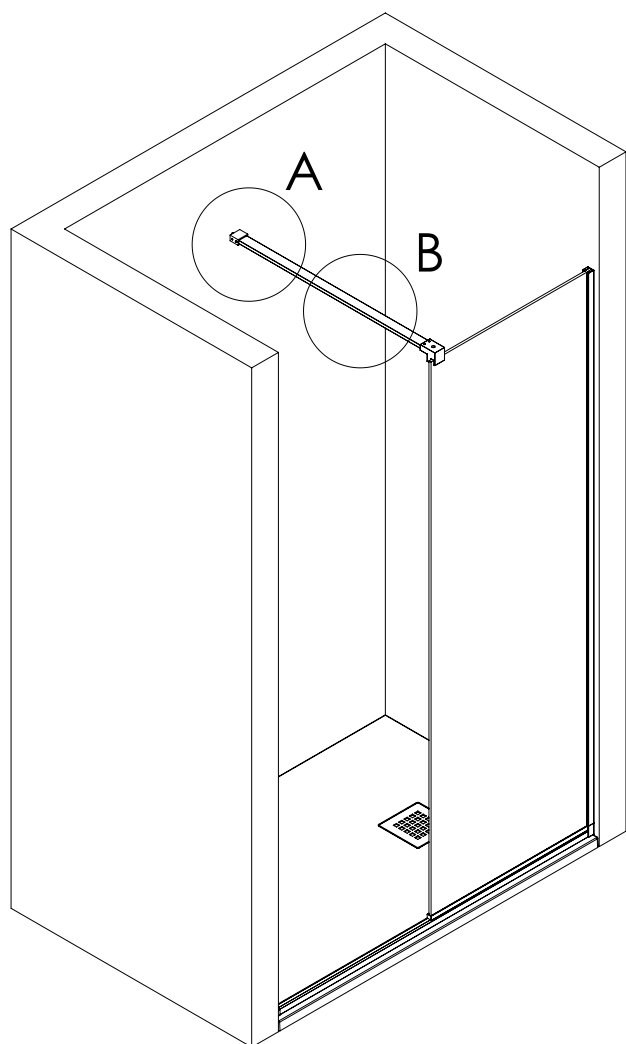


A.1

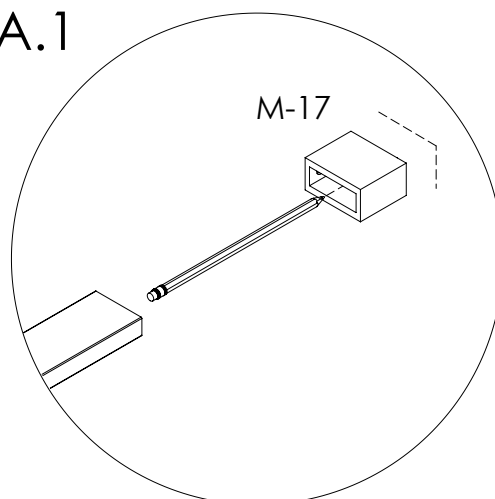


A.2

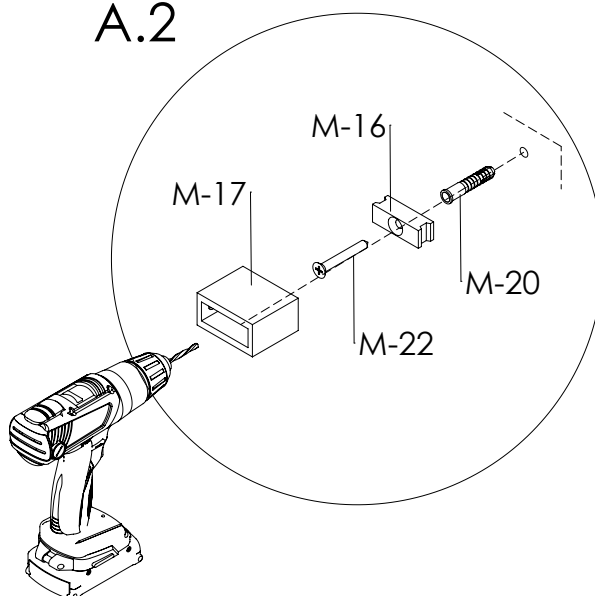


B

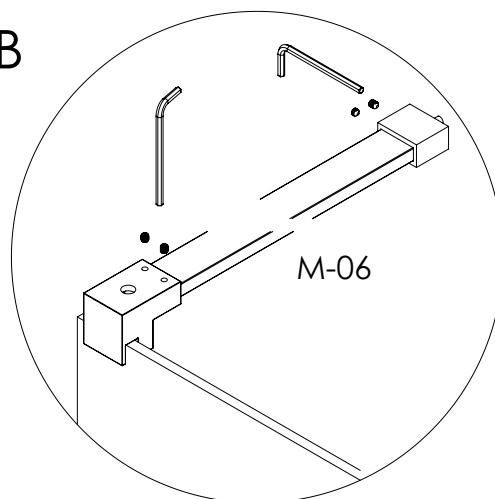


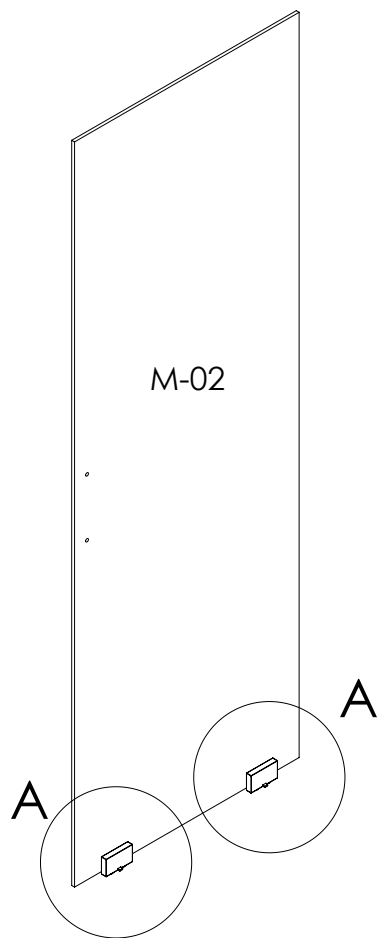





A.1

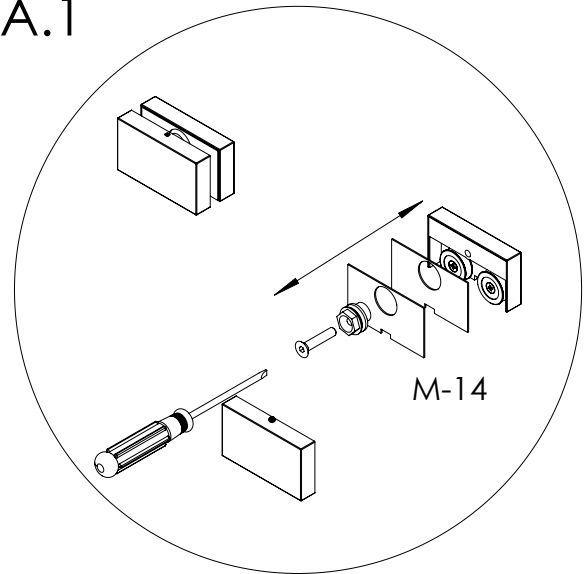

A.2

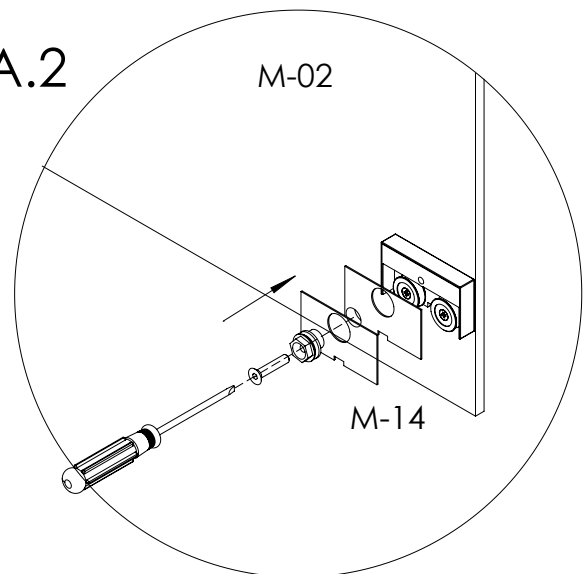

6

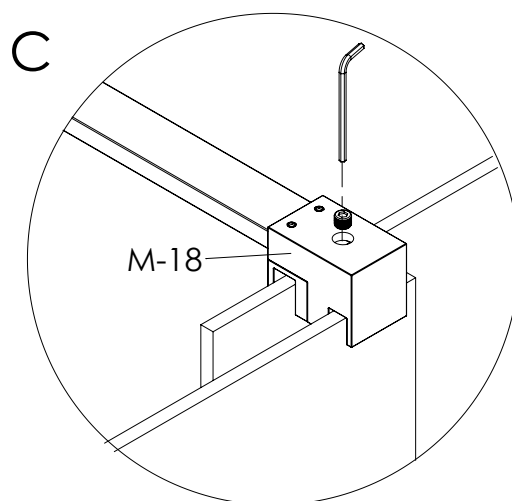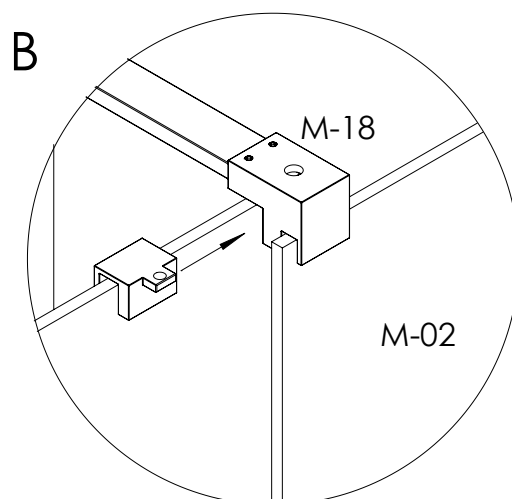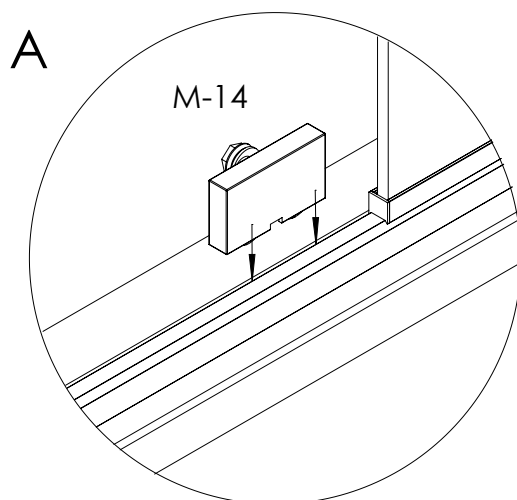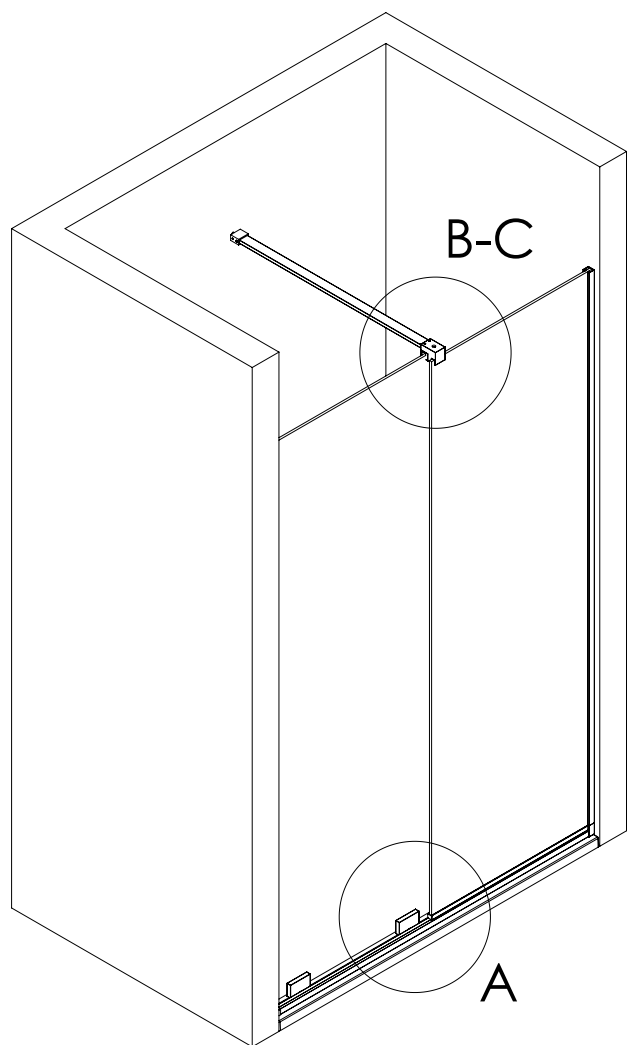

7

