



FRO-SAG-AM-001

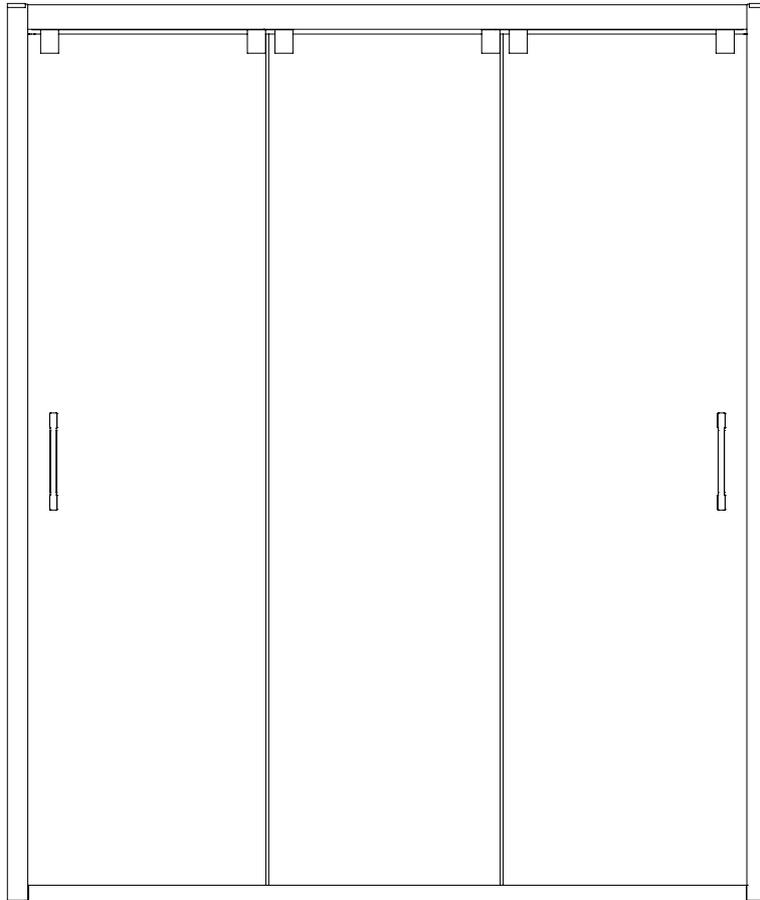

// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSEURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //

M-01
x1



M-09
x2



M-02
x1




M-10
x4




M-03
x1




M-11
x2




M-04
x1

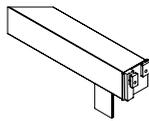


M-12
x2

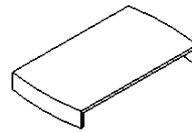


M-05
x1

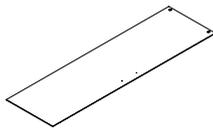

M-13
x2




M-06
x1

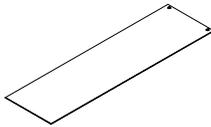

M-14
x6



M-07
x1

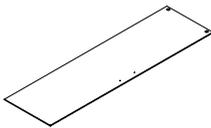


M-15
x4



AUTORROSACANTE 3.5 x 16

M-08
x2





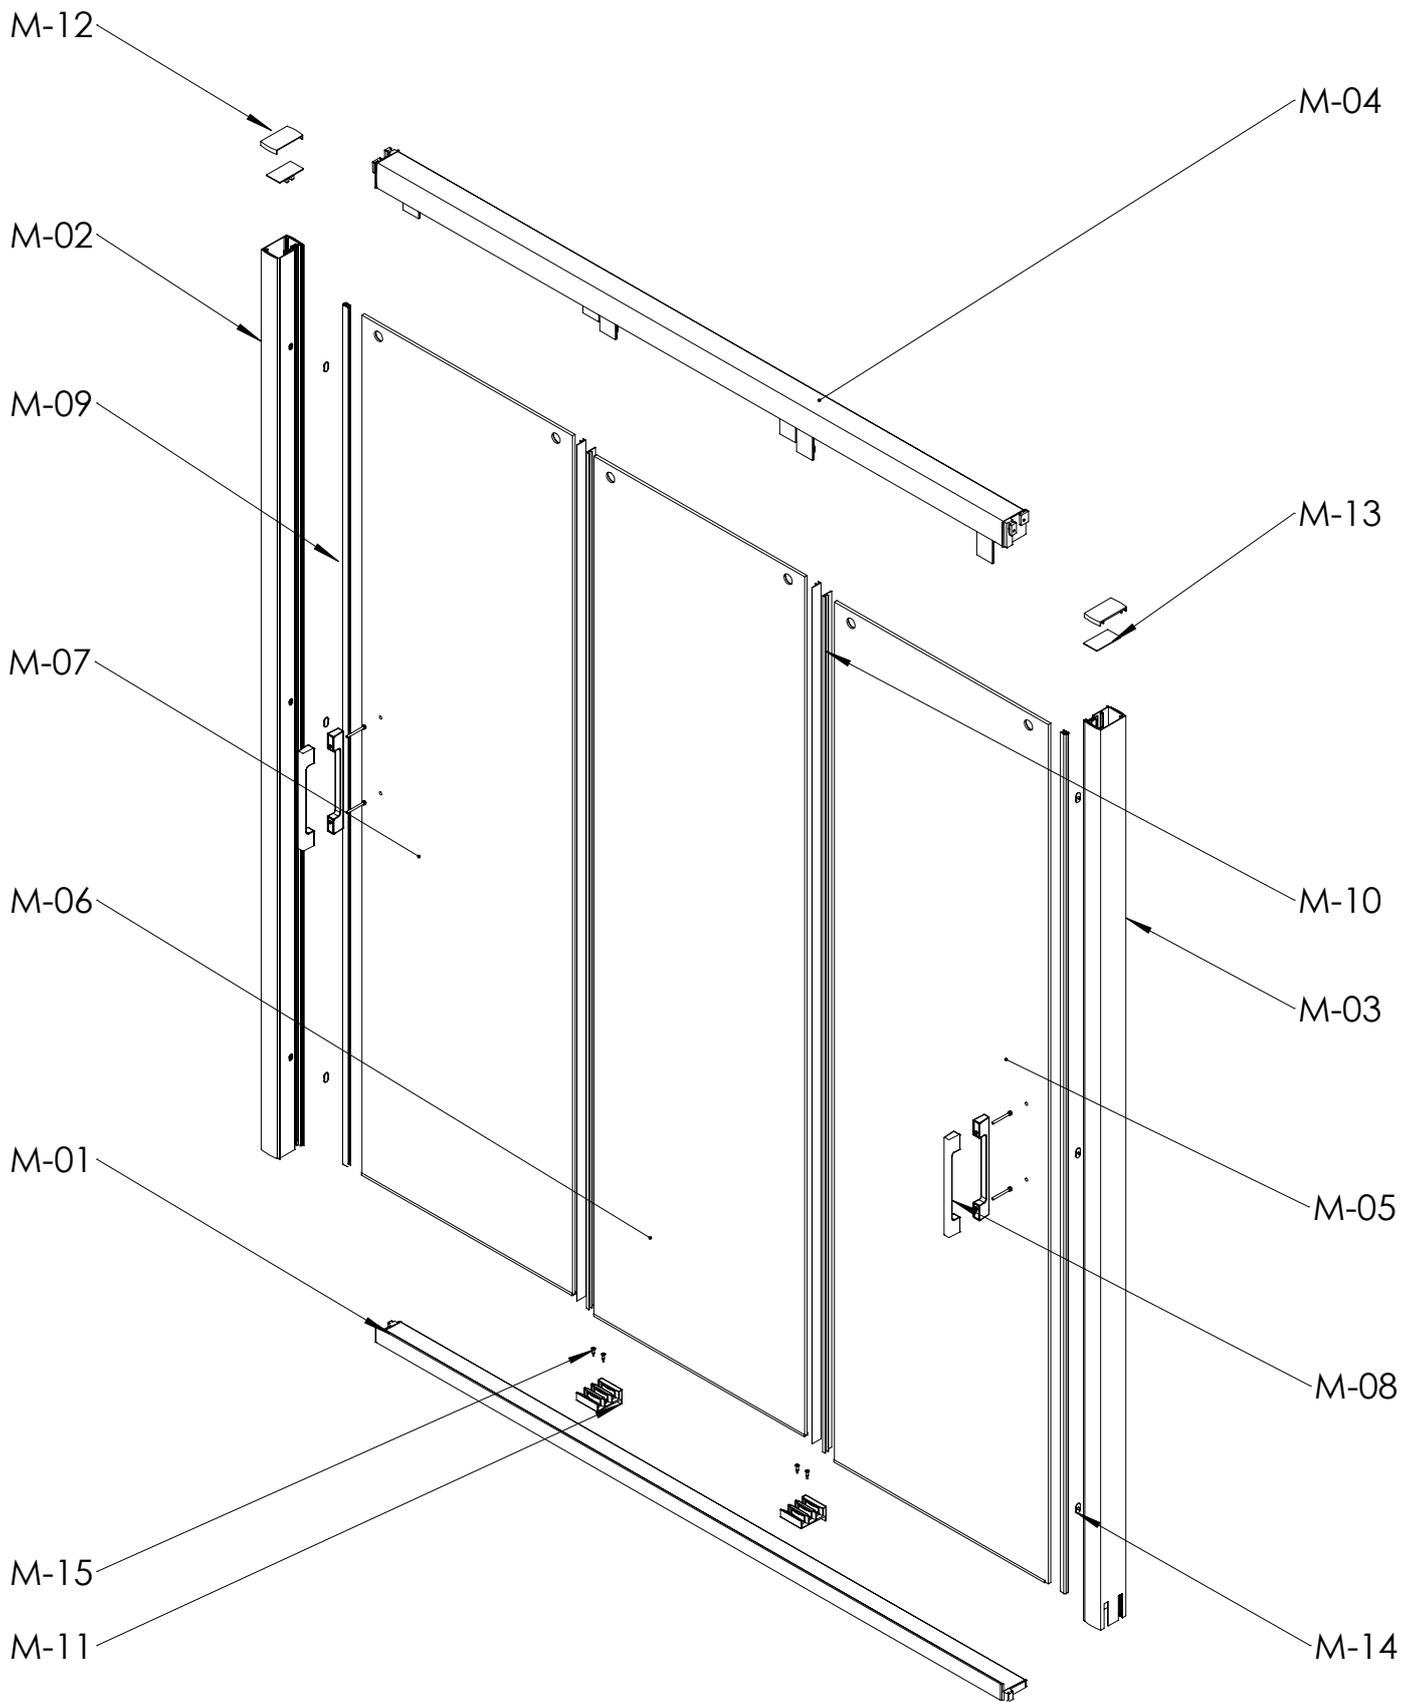

1

A


M-01

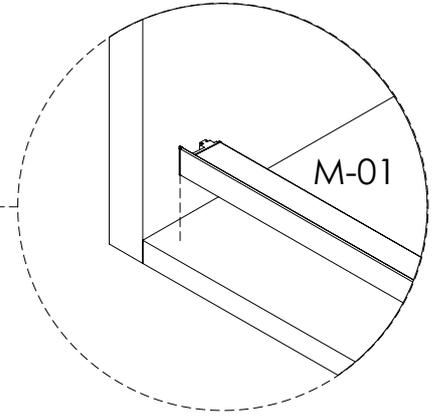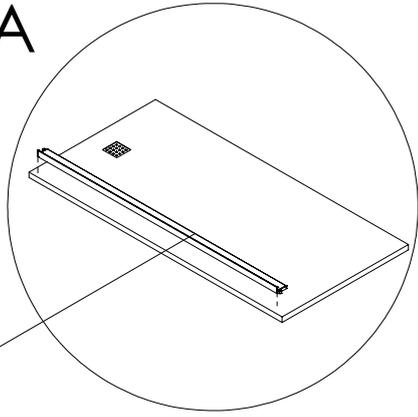

B.1

M-02


M-01

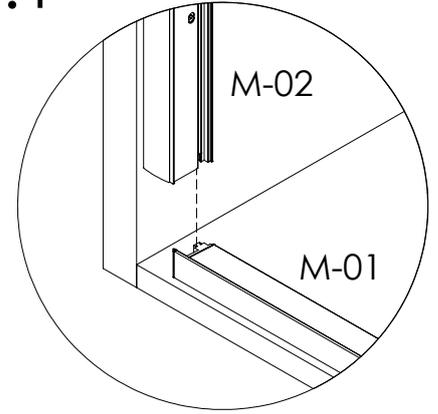

B.2

M-03




M-01

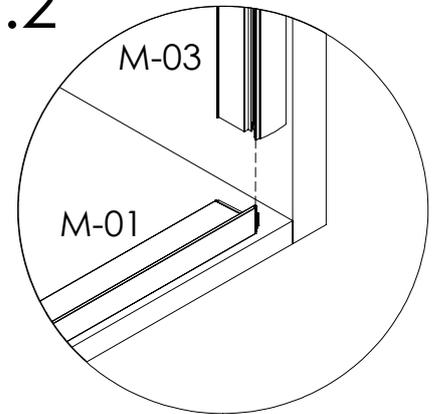

B.3



M-02/03

M-01

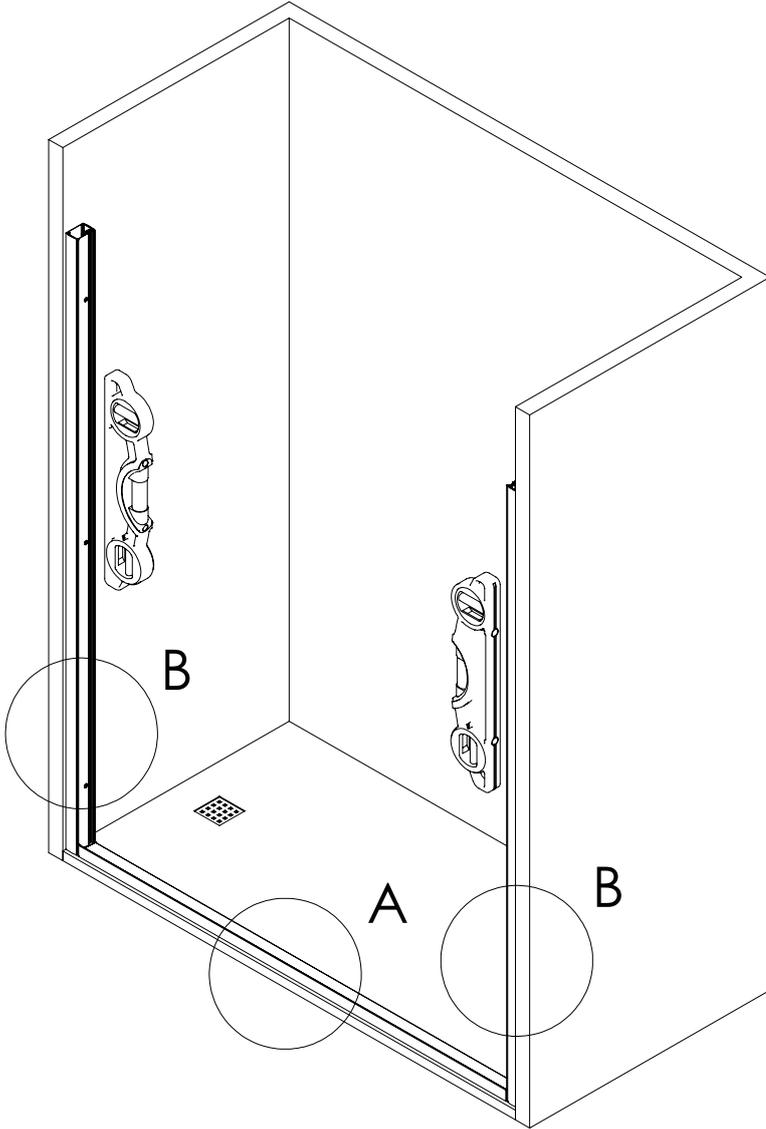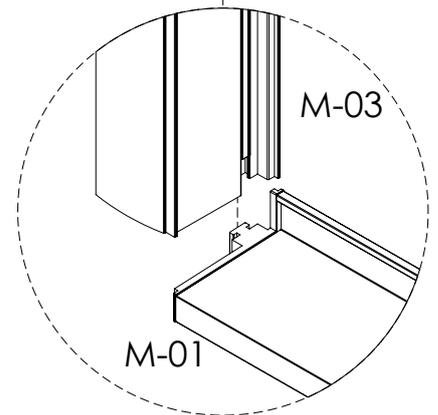
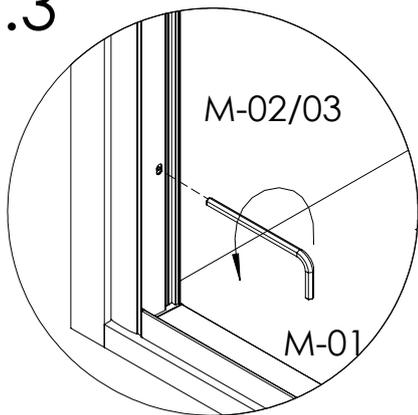


2

A.1

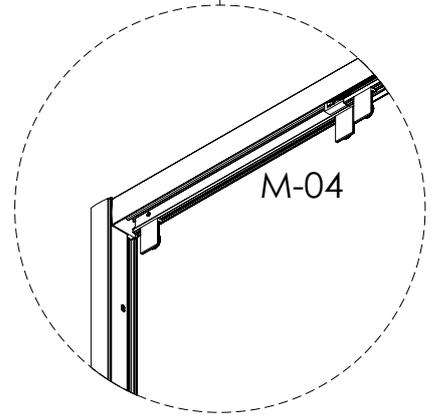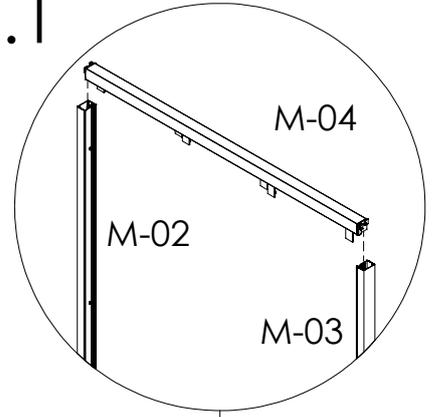


A.2

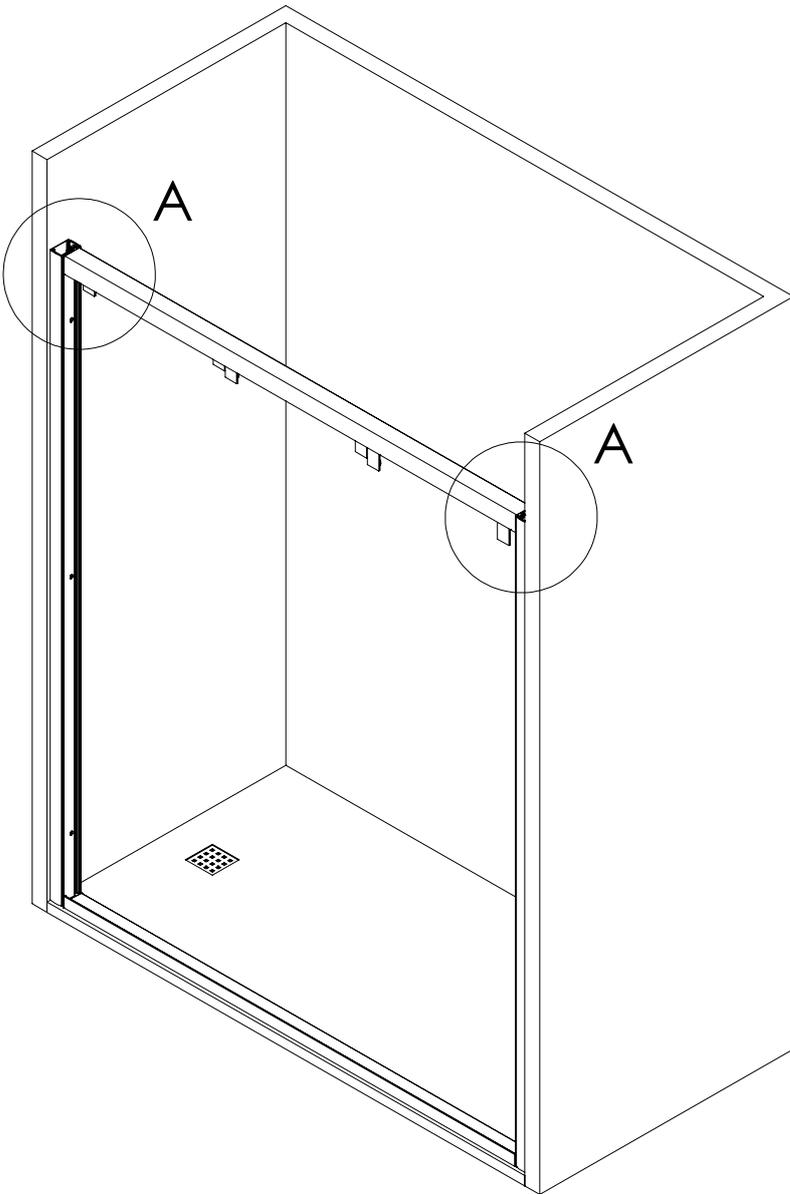
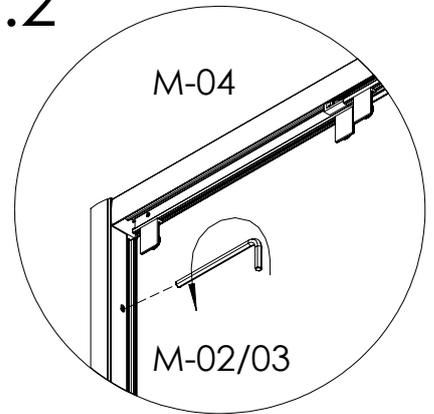


3


A.1

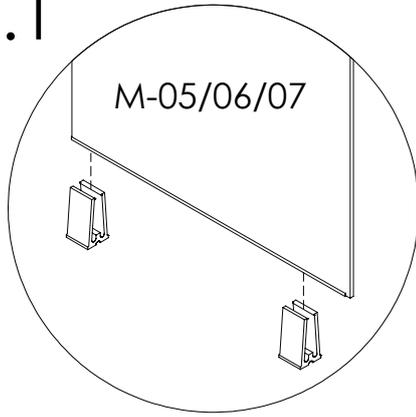


A.2

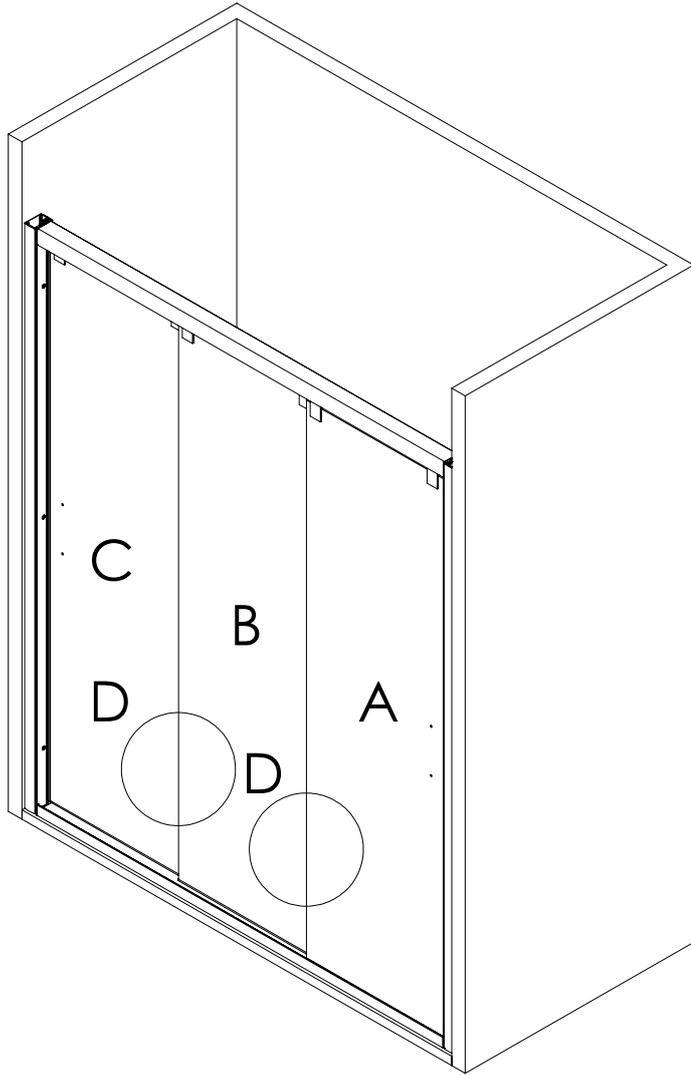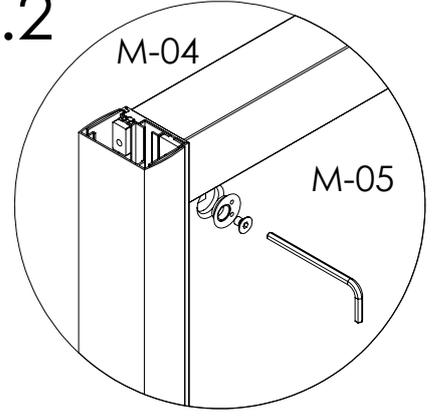


B

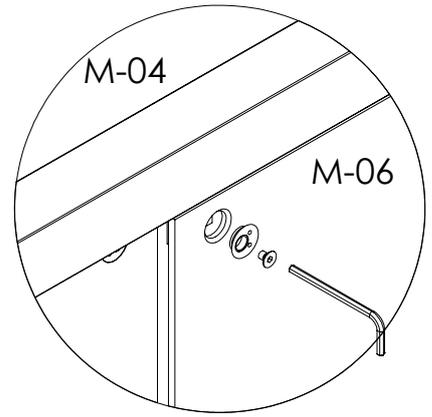


C

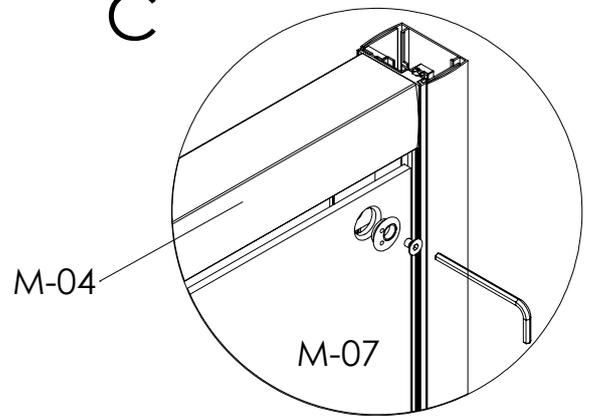







D.2

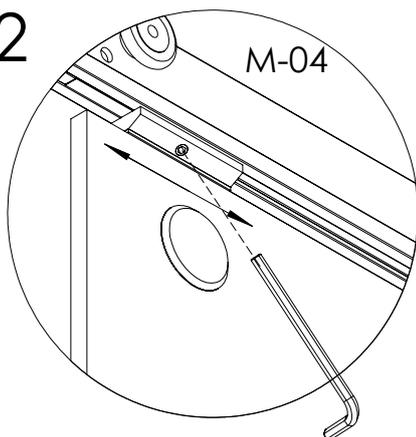





D.1

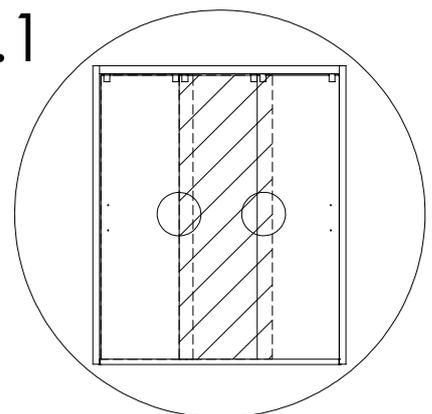





4

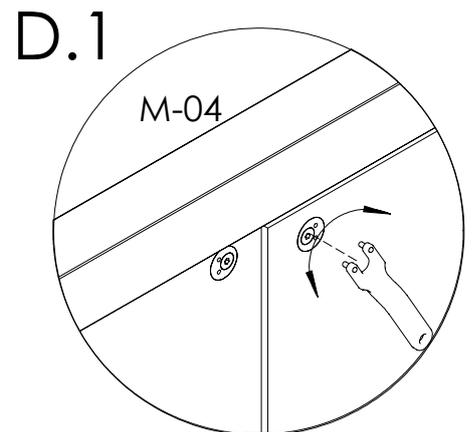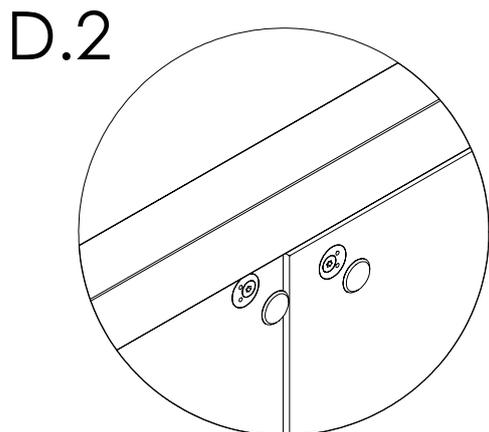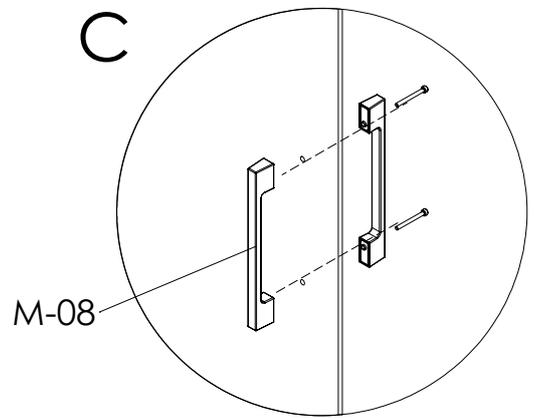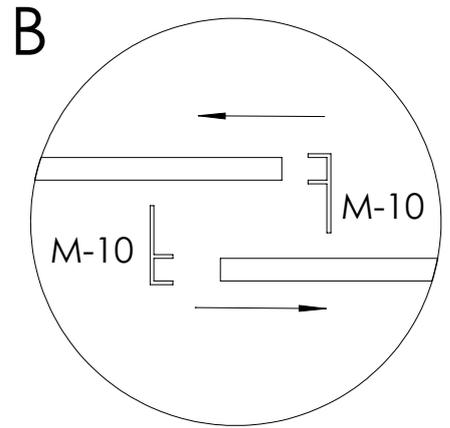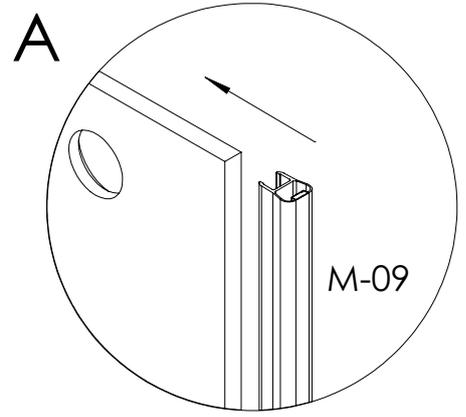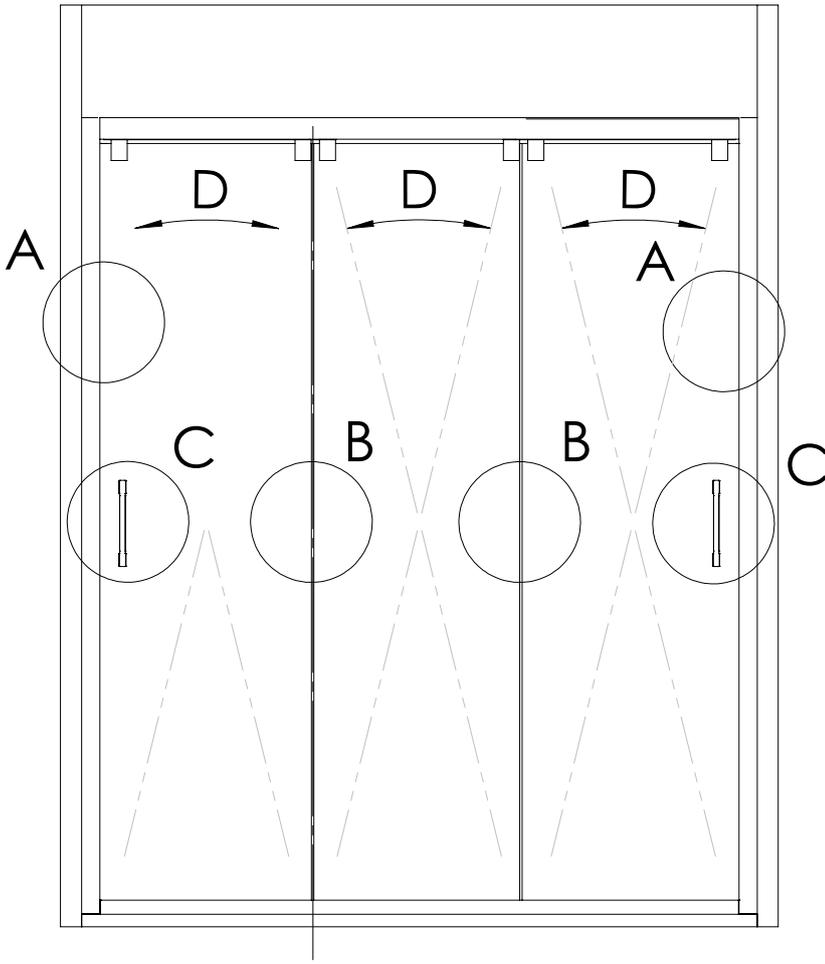

5

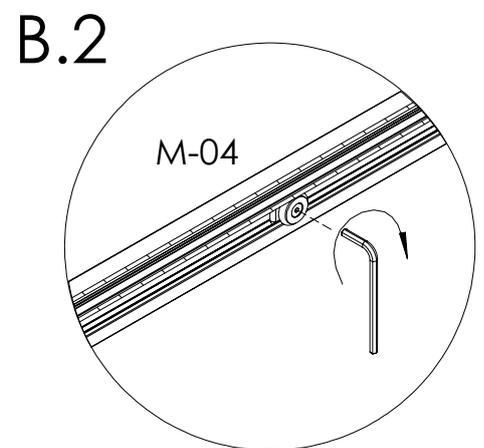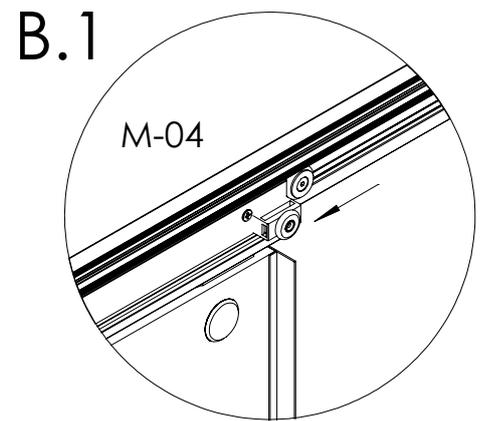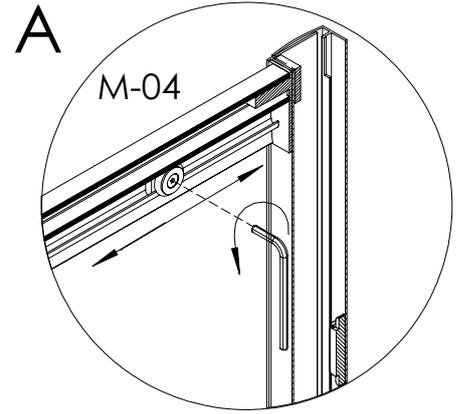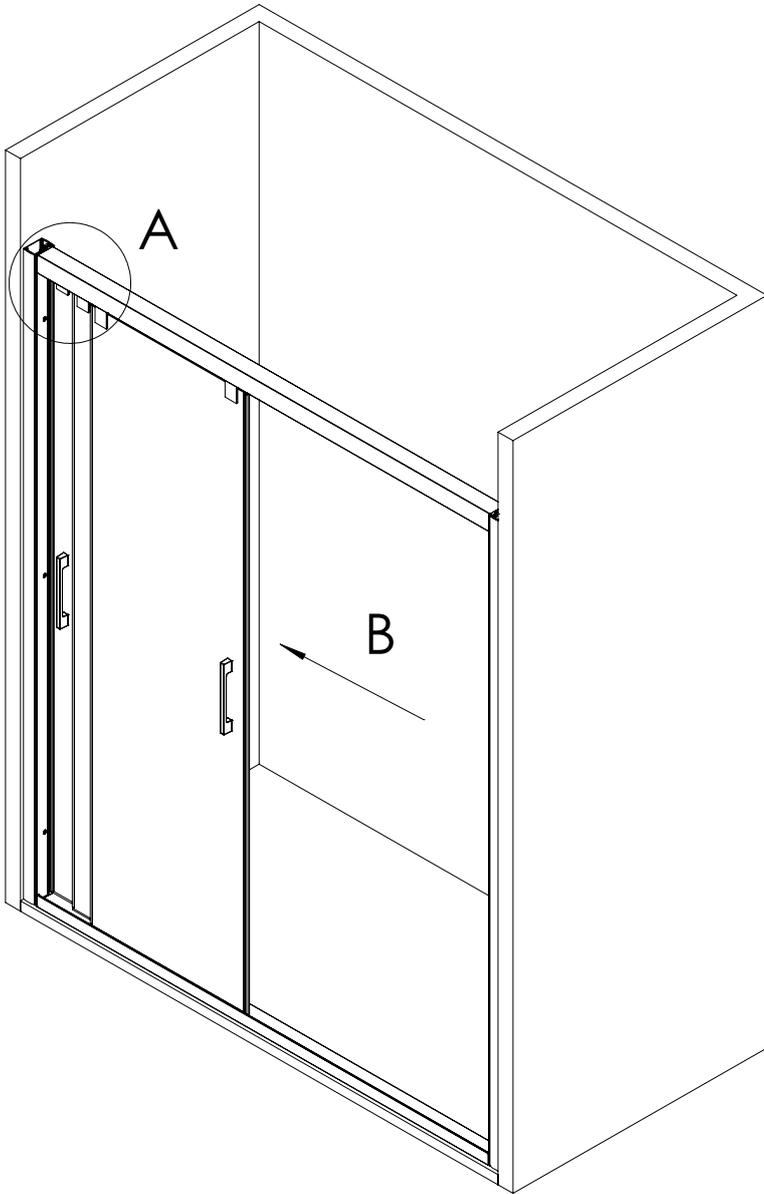


6

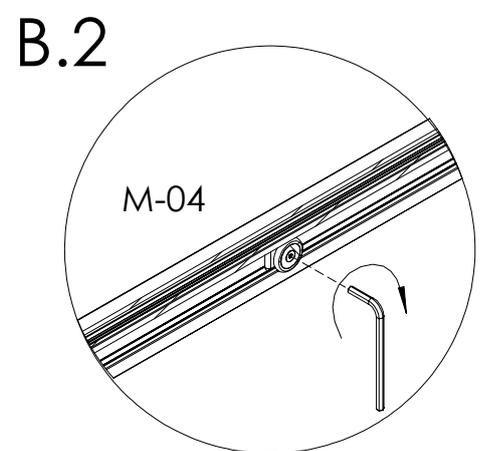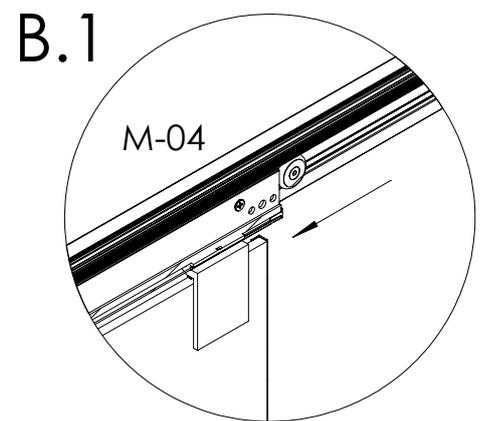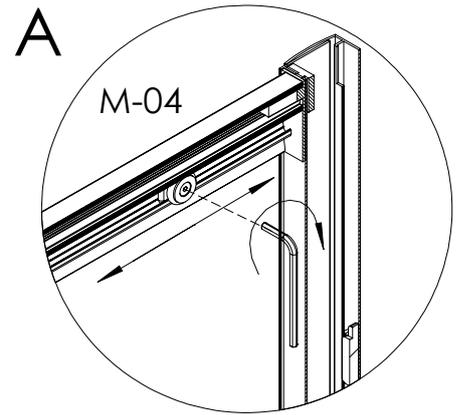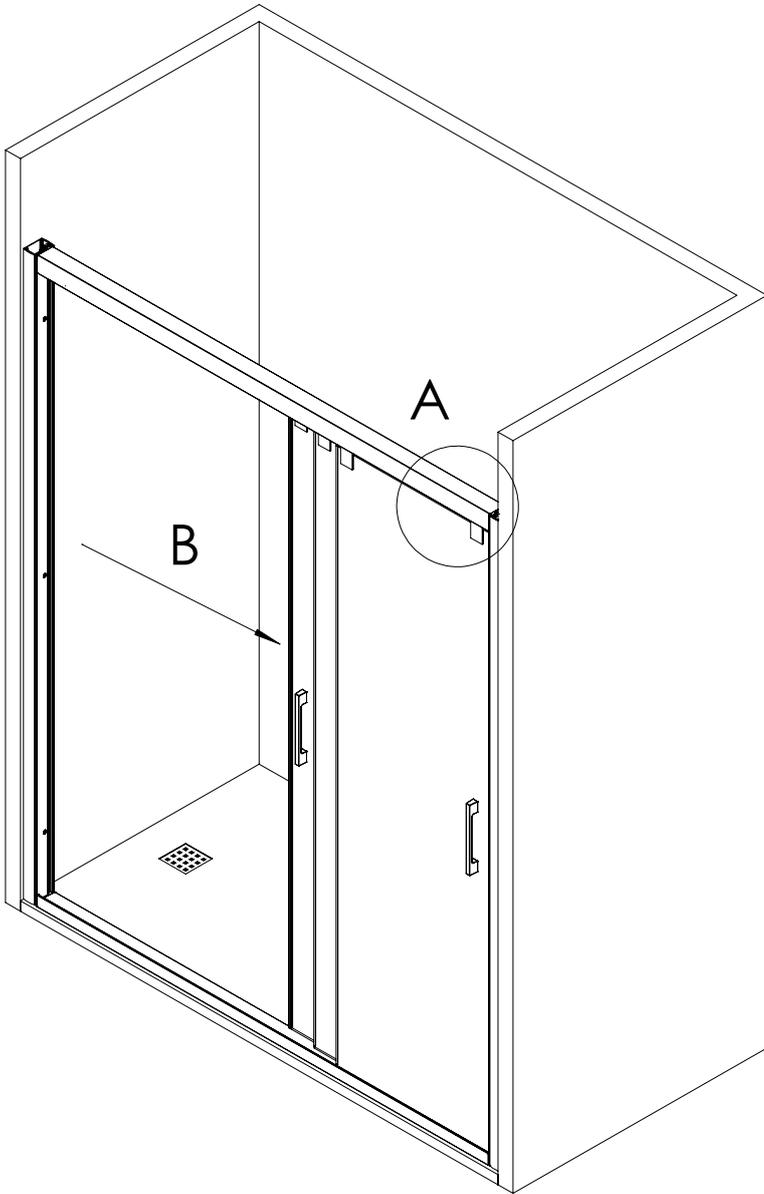


7


A.1

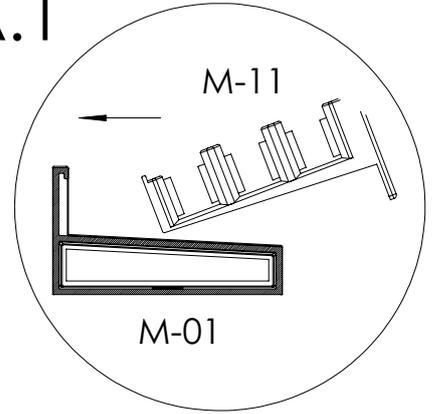



A.2

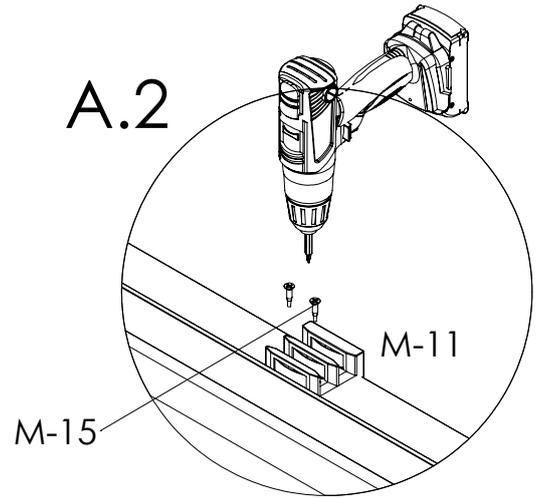



B

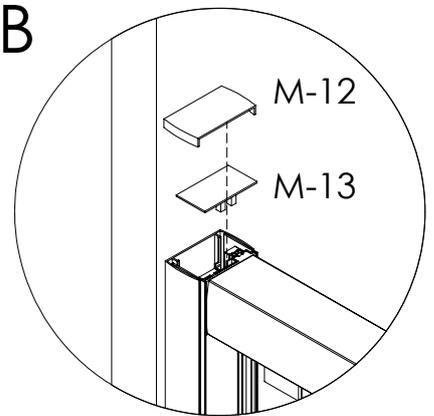



C

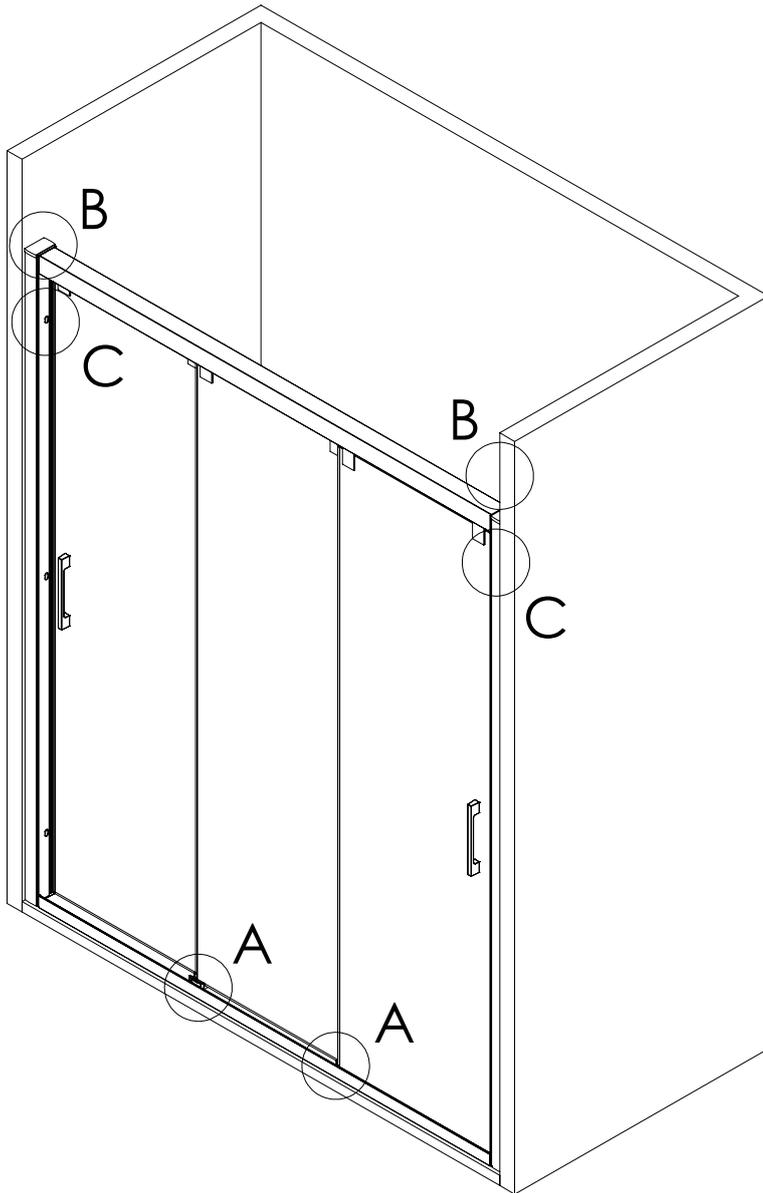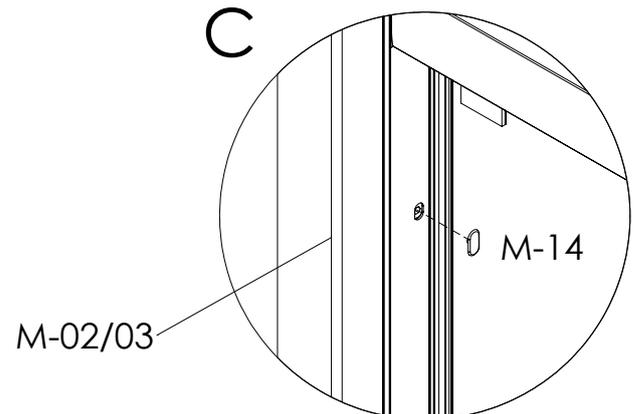

8

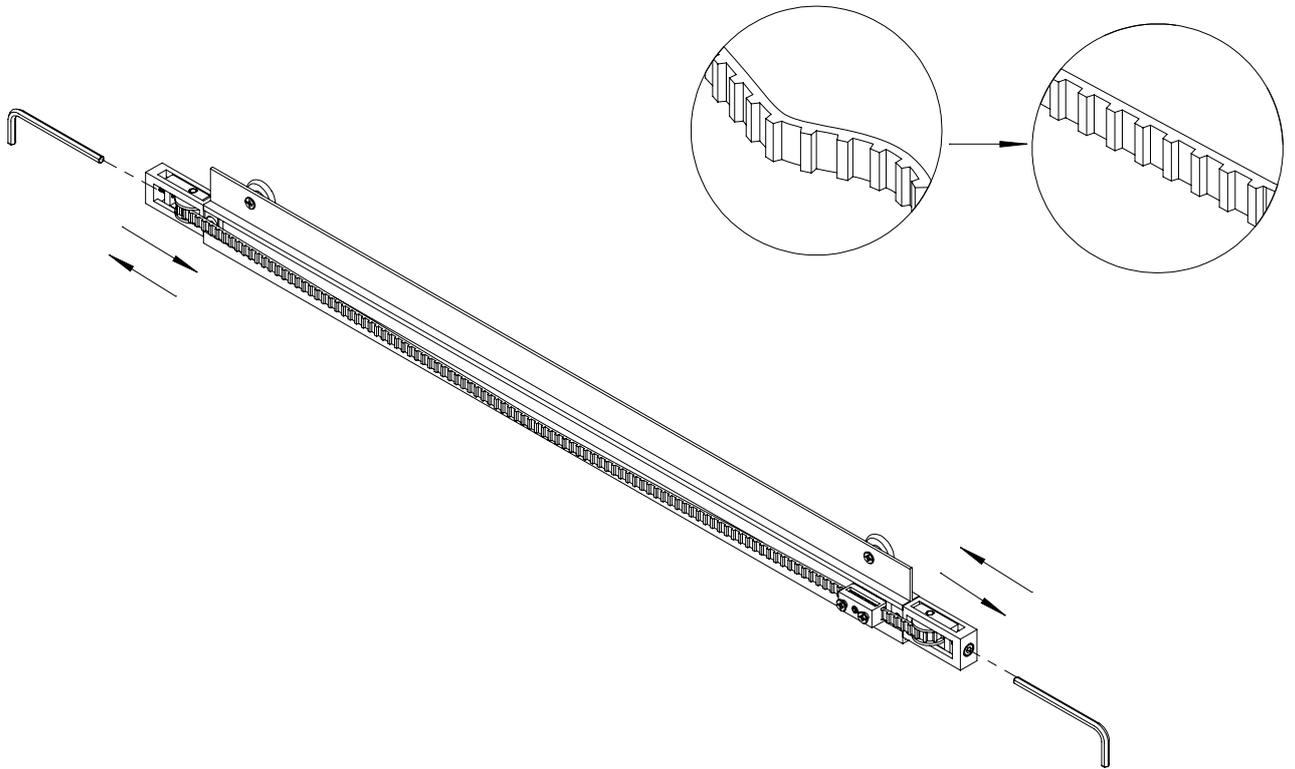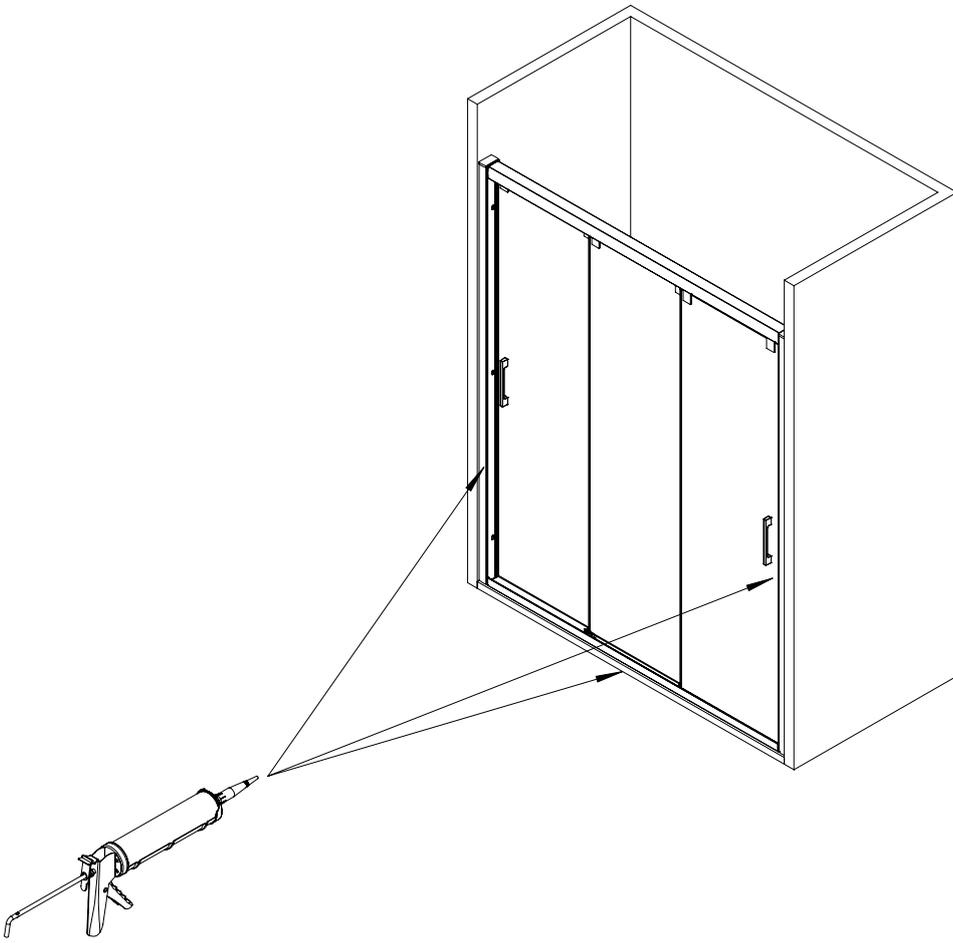

X



✓

