



FRO-PER-AM-005

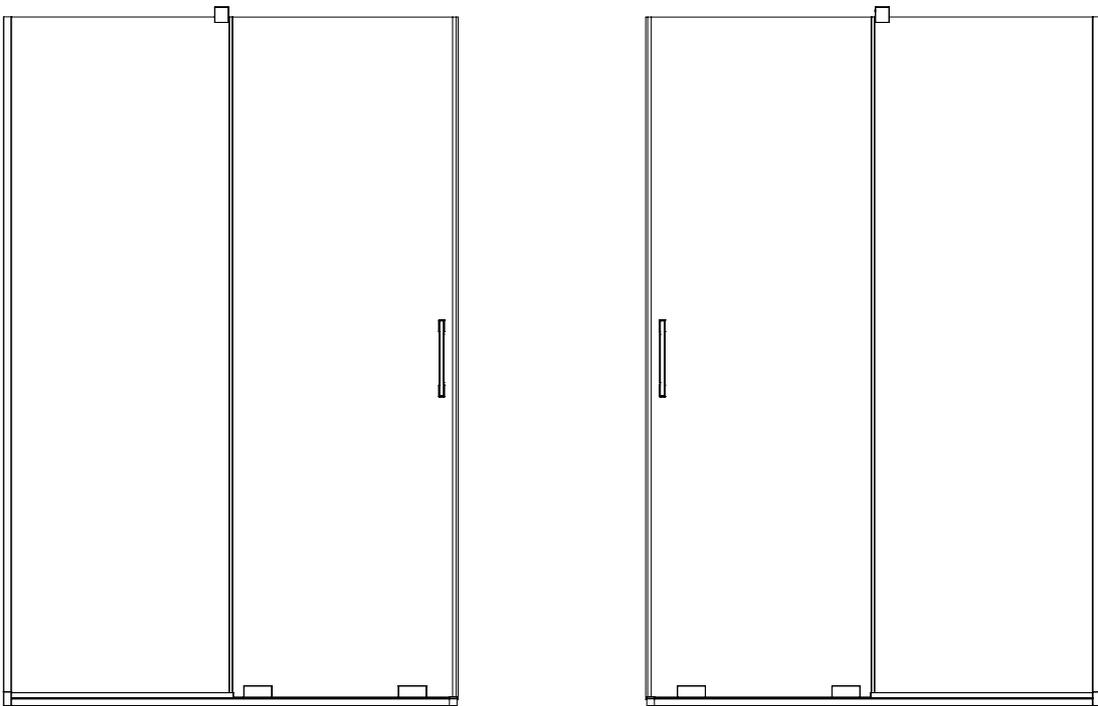


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSEURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //

M-01
x1

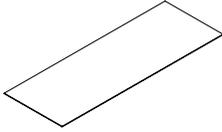


M-10
x1




M-19
x4




M-02
x1

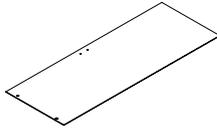


M-11
x1



M-20
x3




M-03
x1




M-12
x1




M-21
x1




M-04
x1




M-13
x1




M-05
x1



M-14
x2

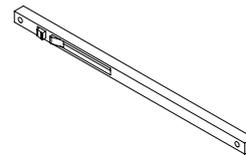

M-06
x1




M-15
x1



M-07
x1




M-16
x1




M-08
x2



M-17
x1




M-09
x1








M-18
x1




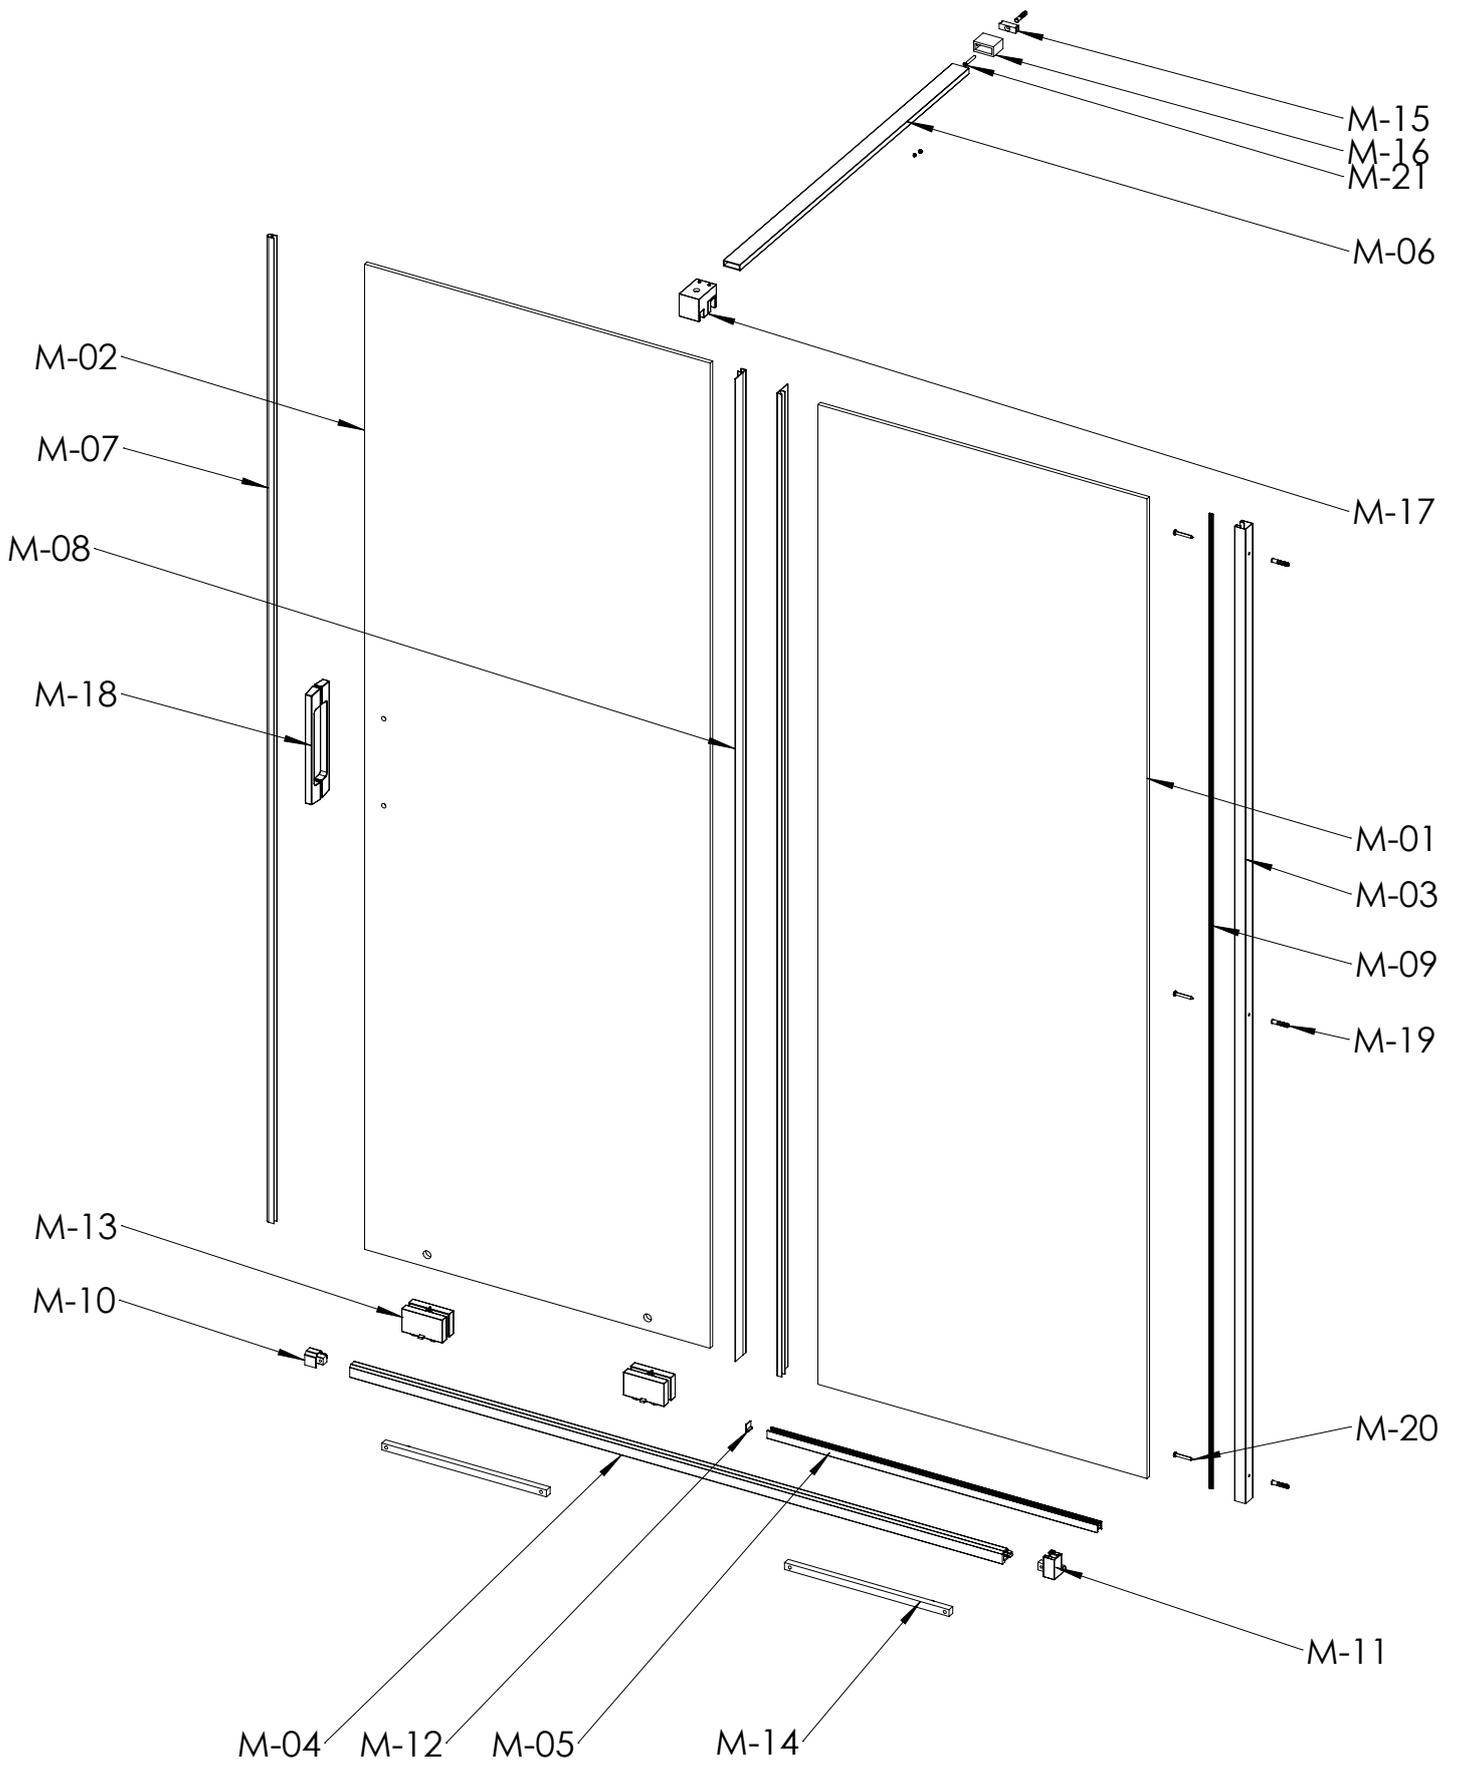


1

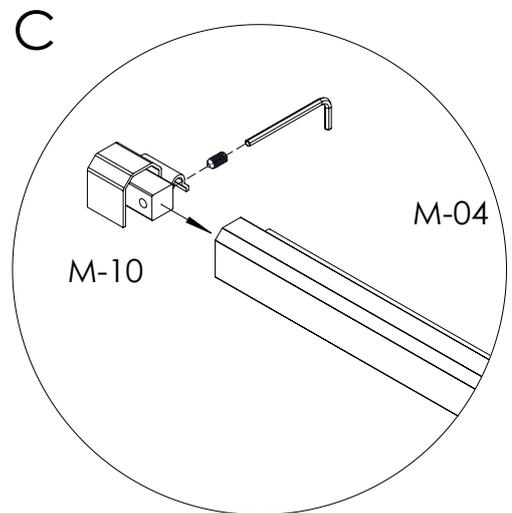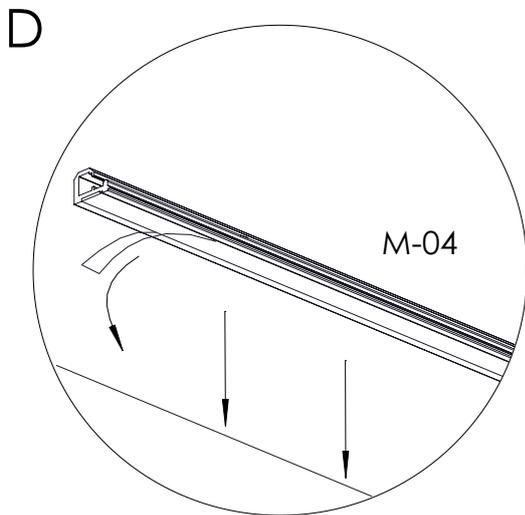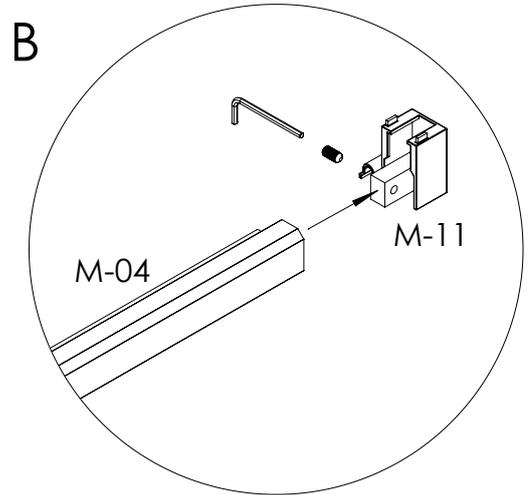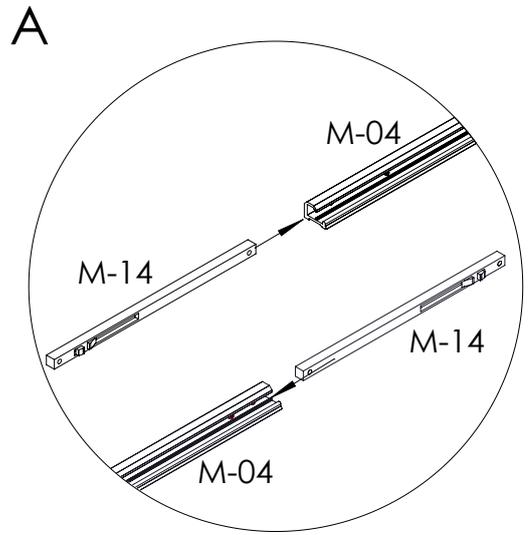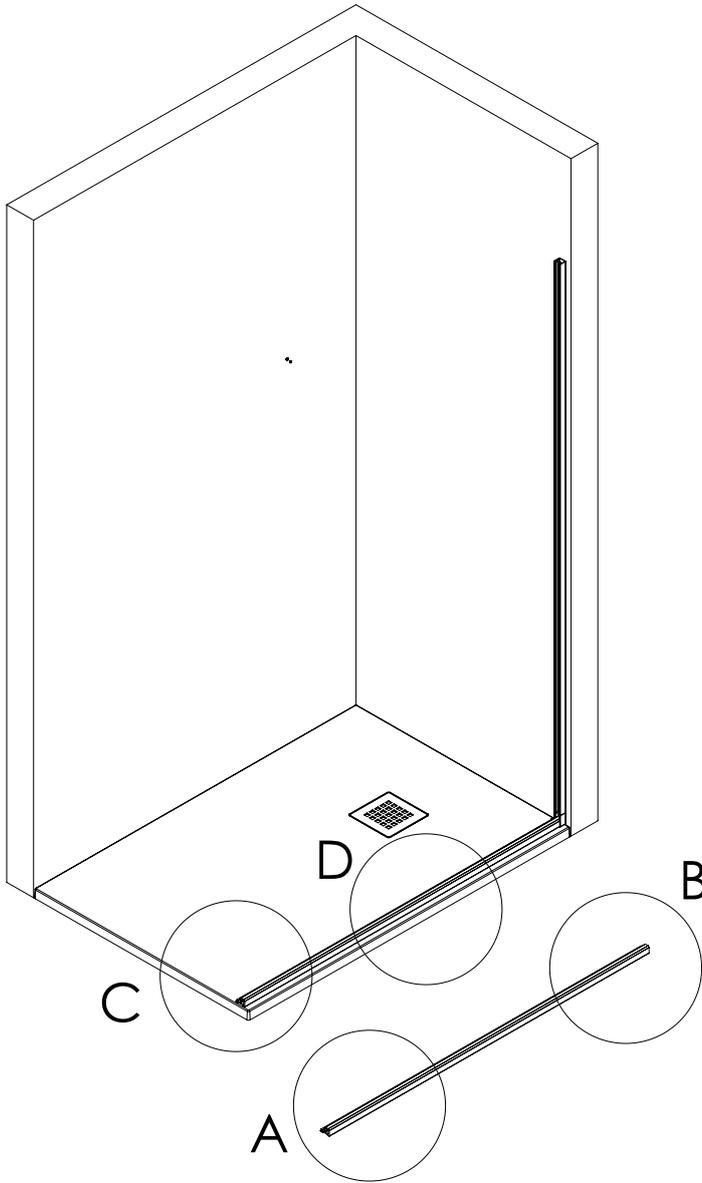


2

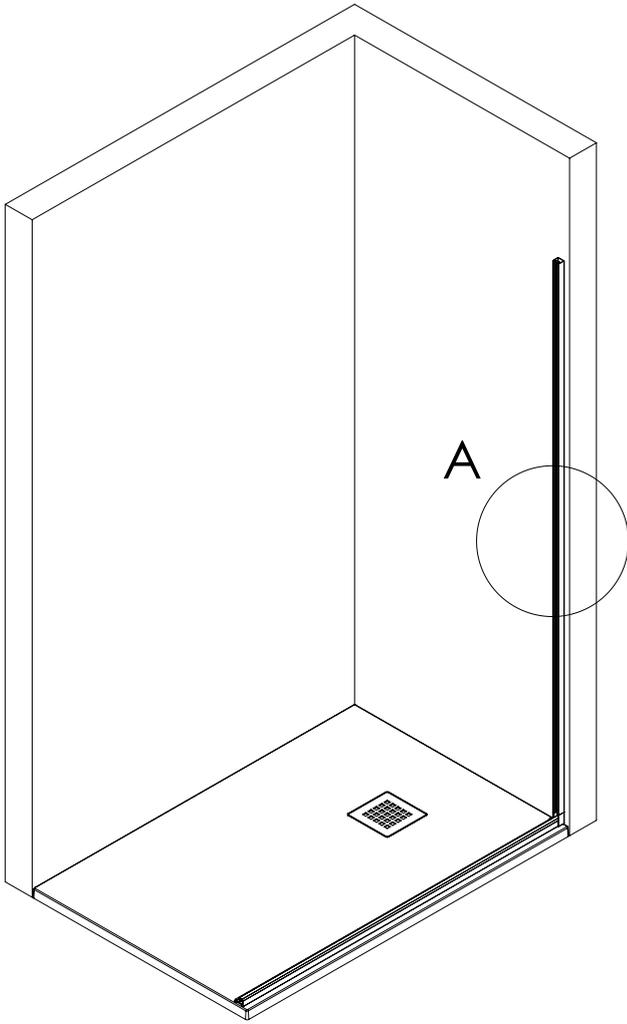


A.1

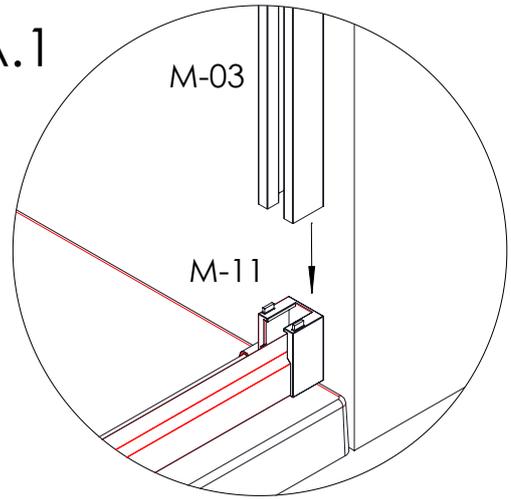


A.2

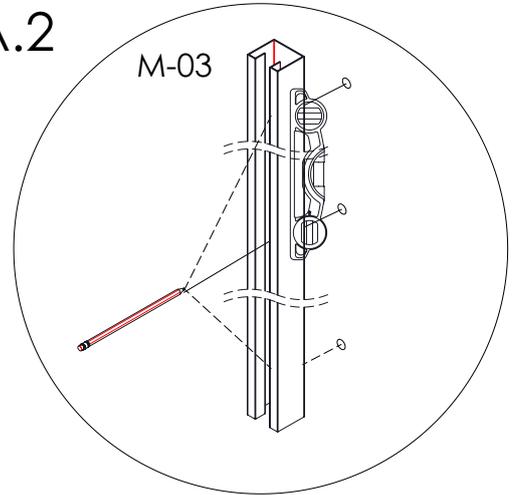


A.3

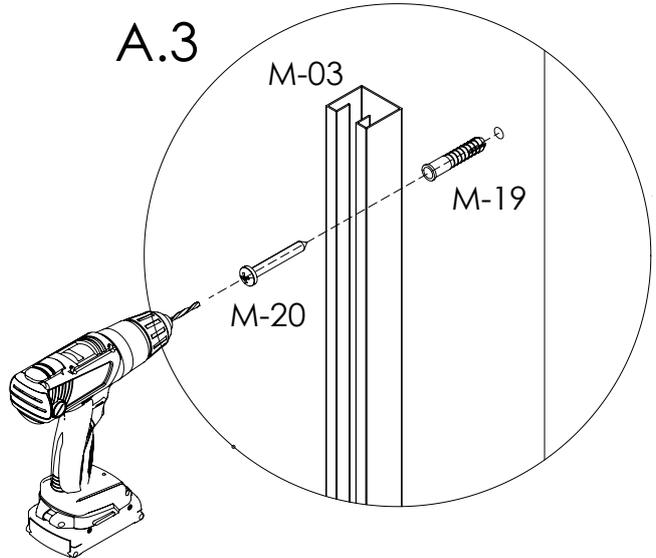


3

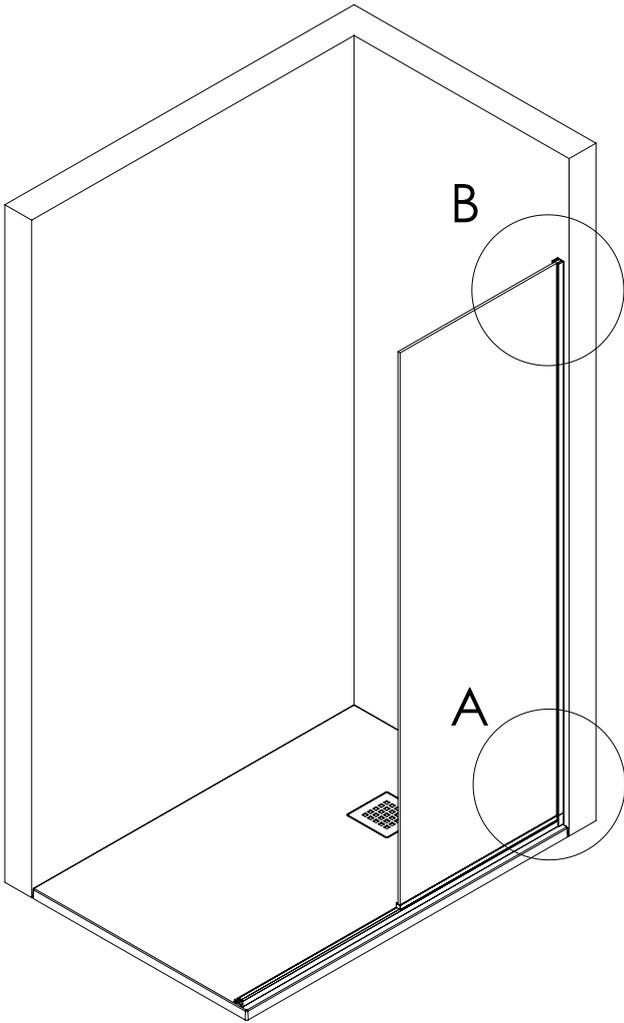


A.1

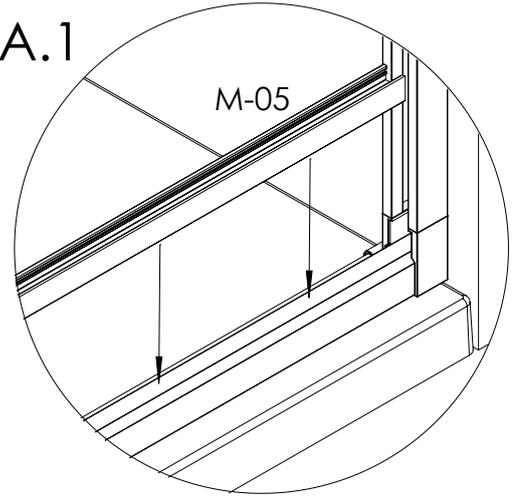

A.2

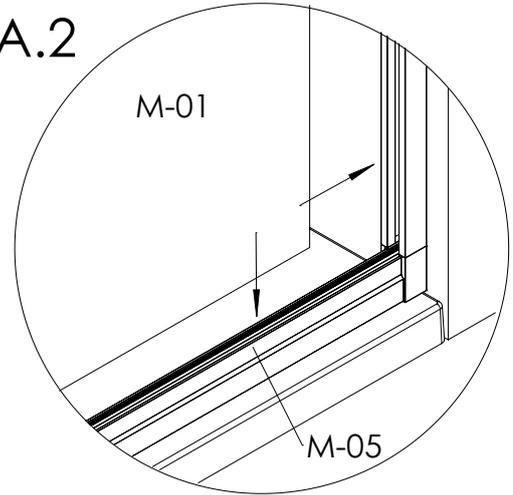


B


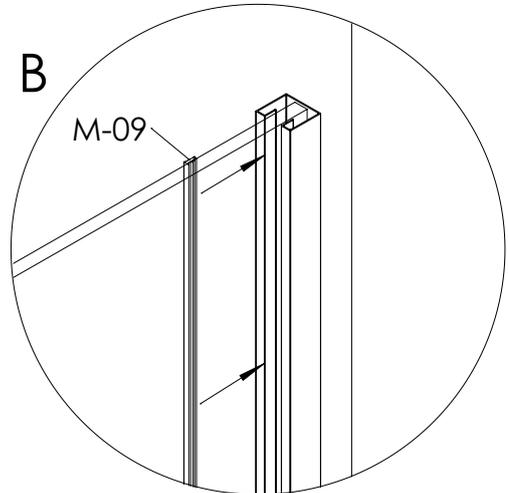


4


A.1

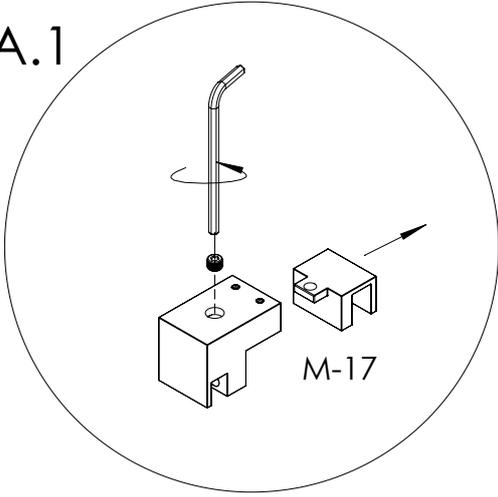


A.2

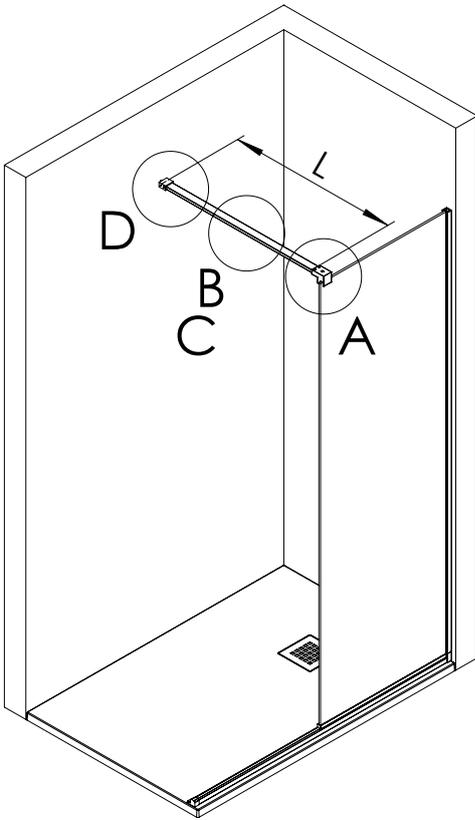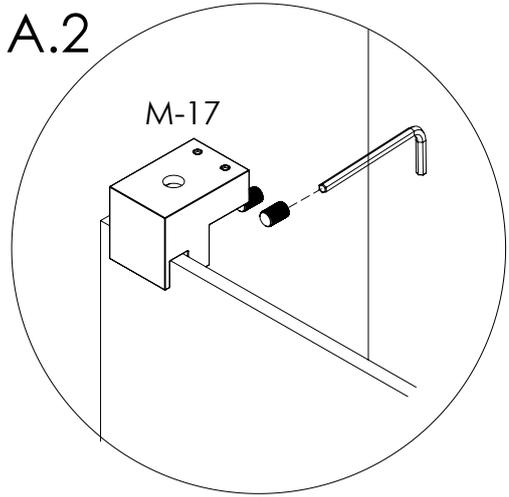


B

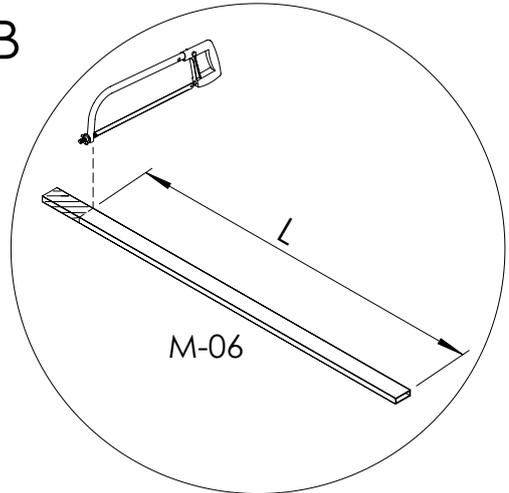


D

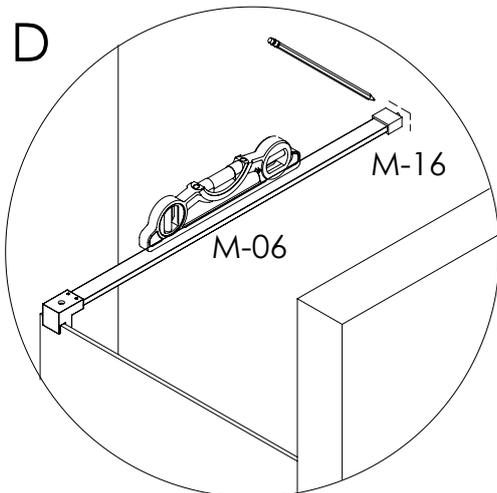


C

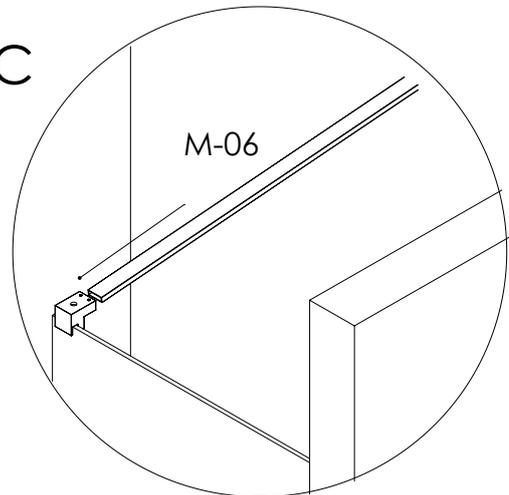


4

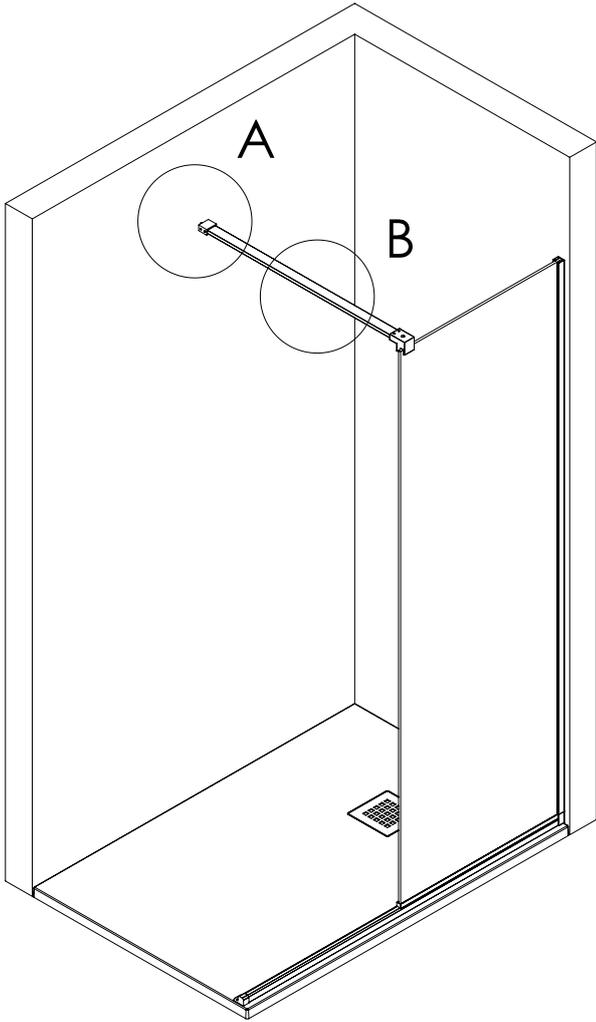


A.1

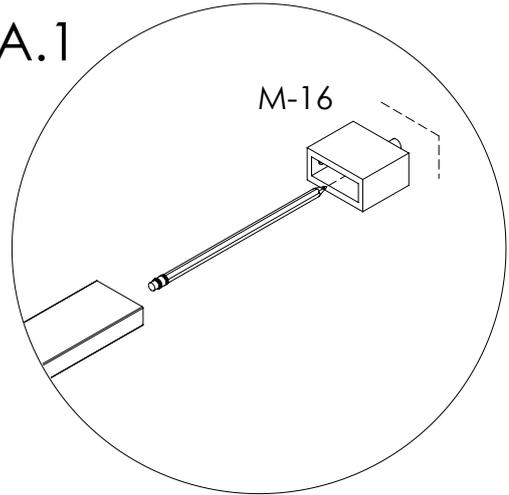


A.2

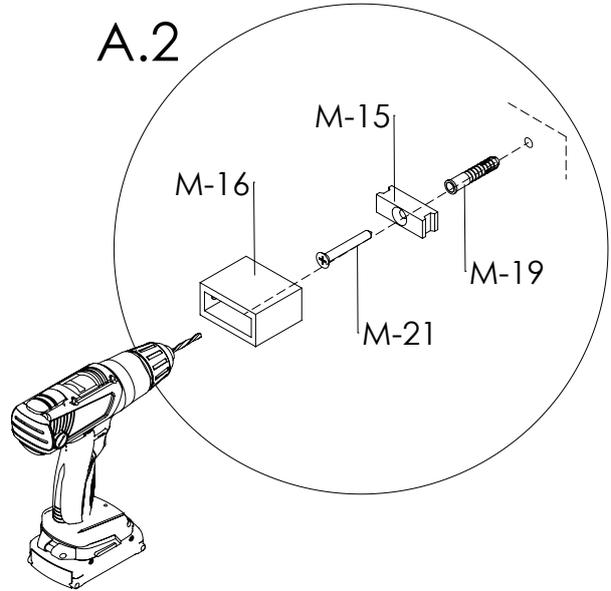


B

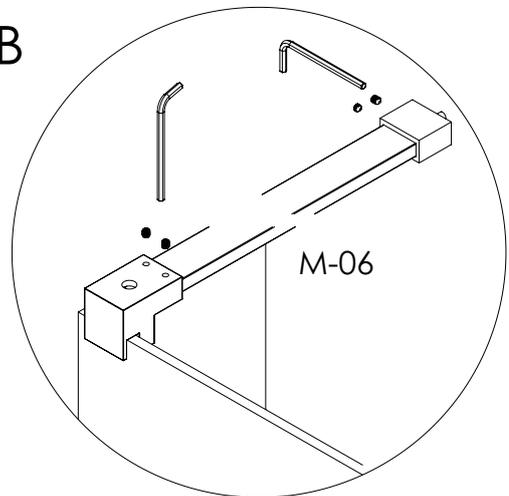


5

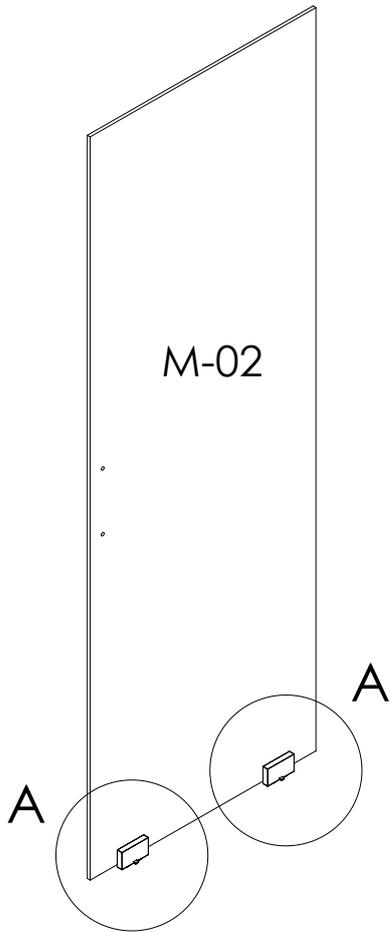





A.1

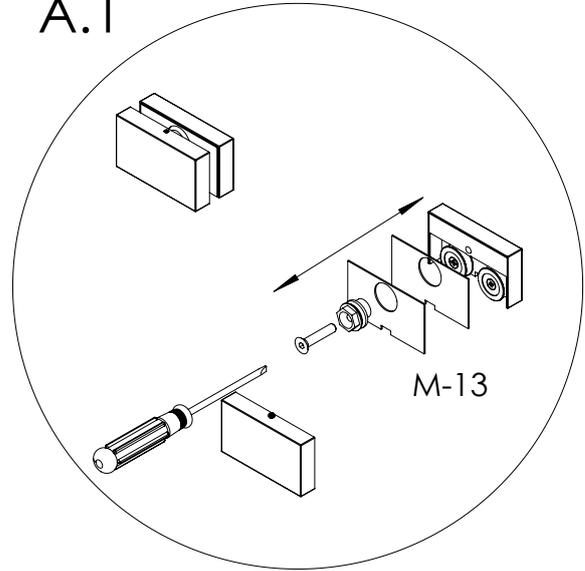





A.2

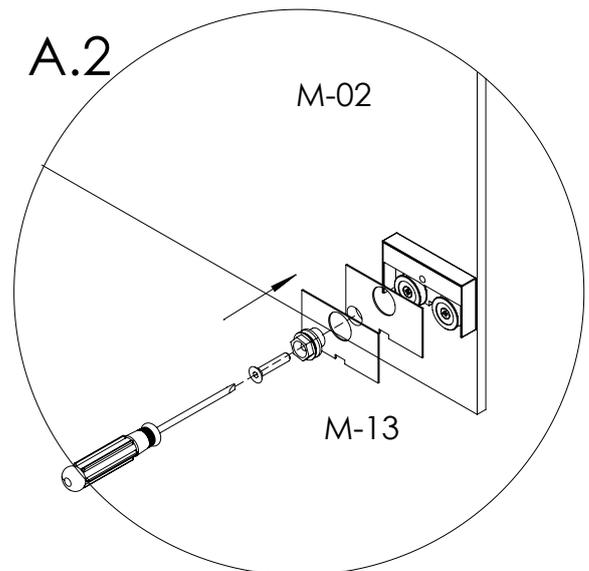


6

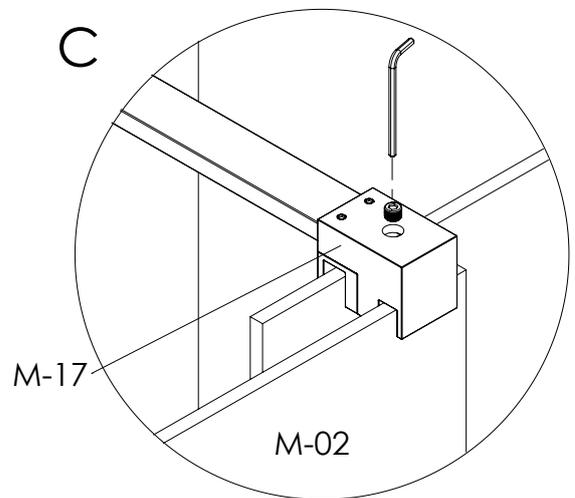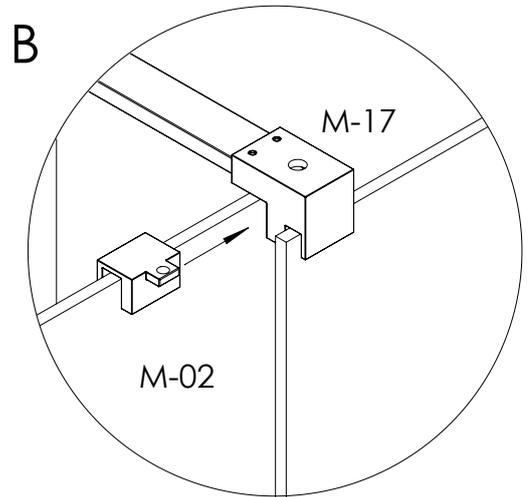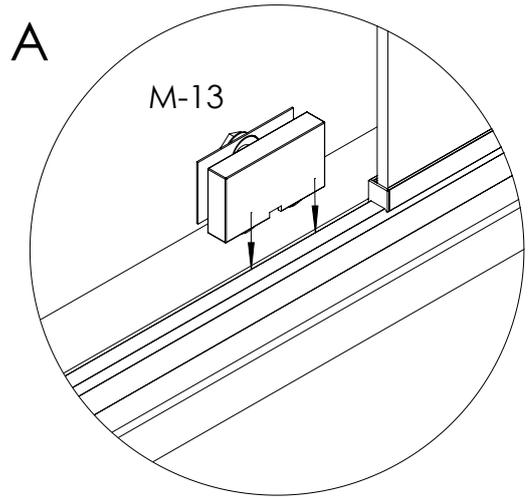
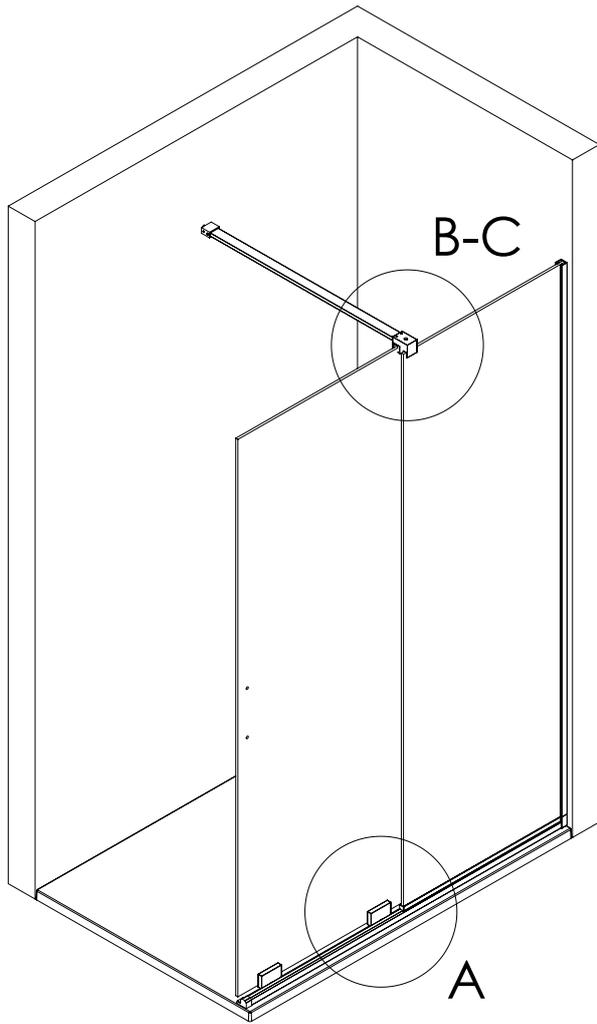


7

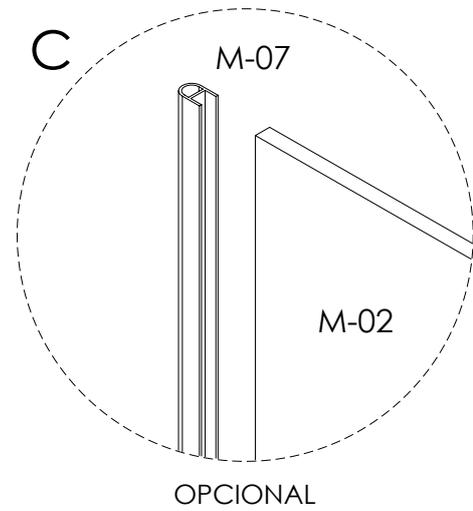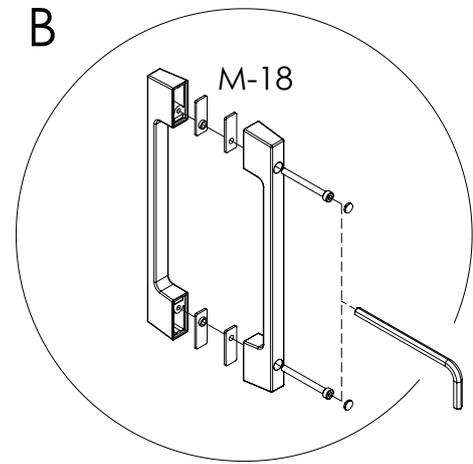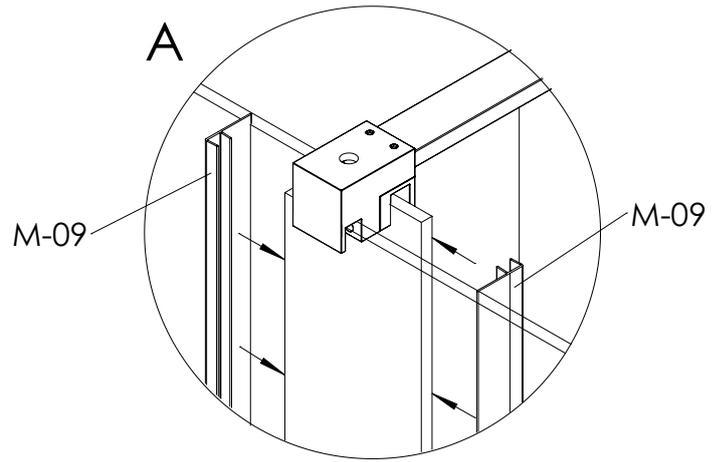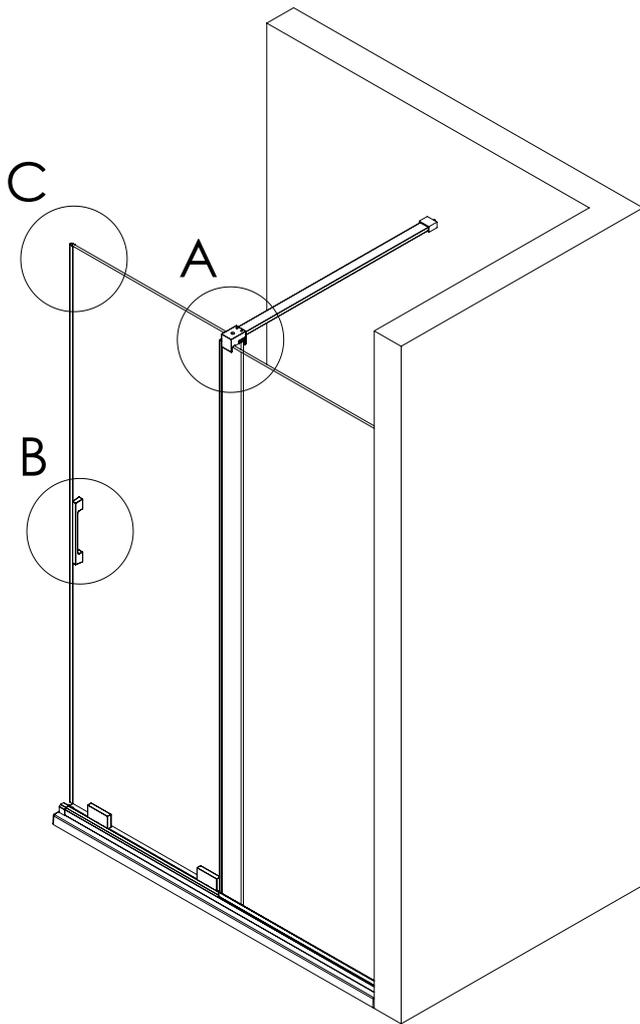


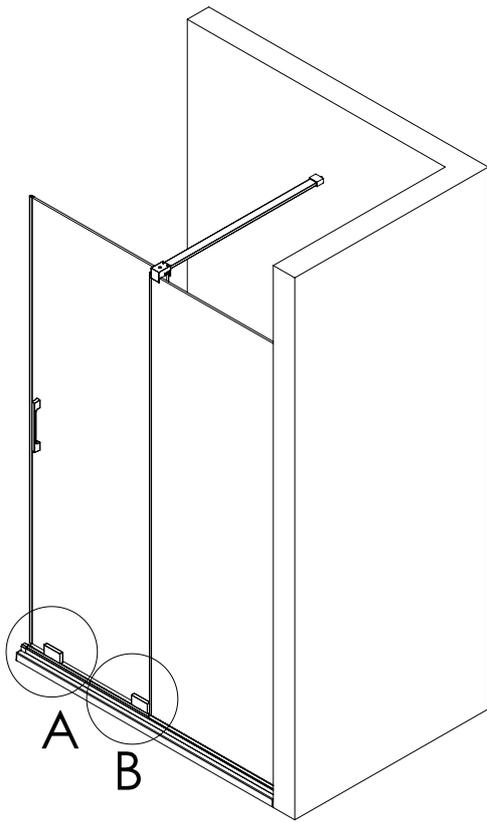


A.1



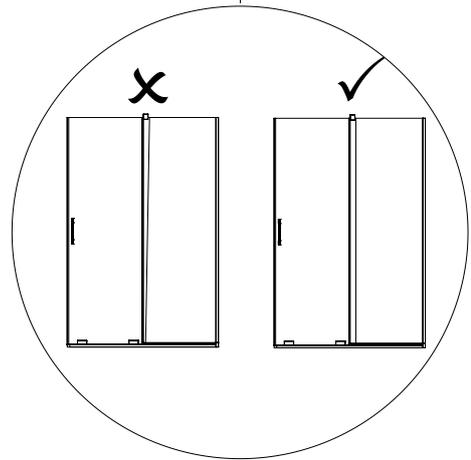
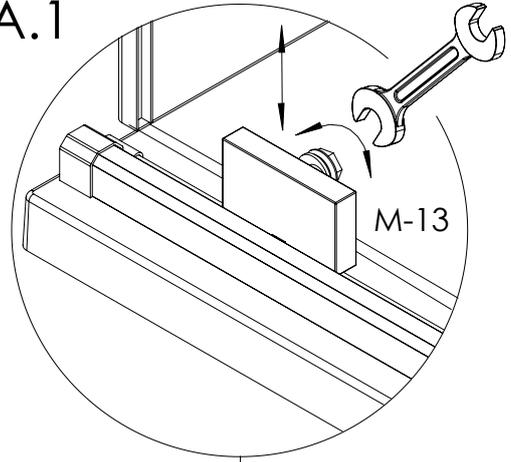





A.2

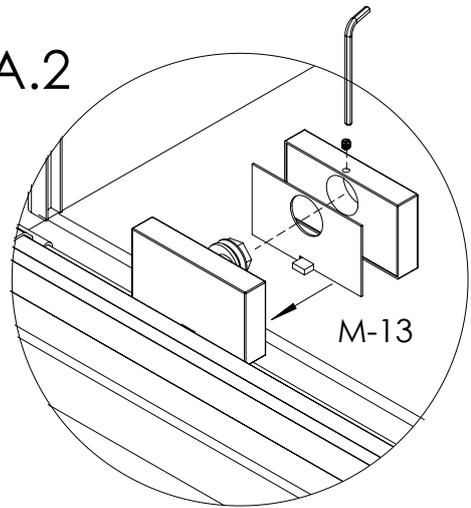

B

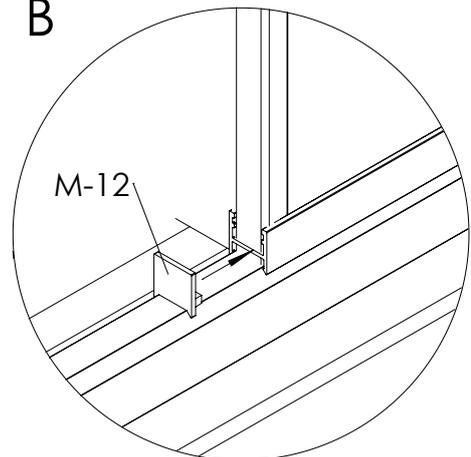

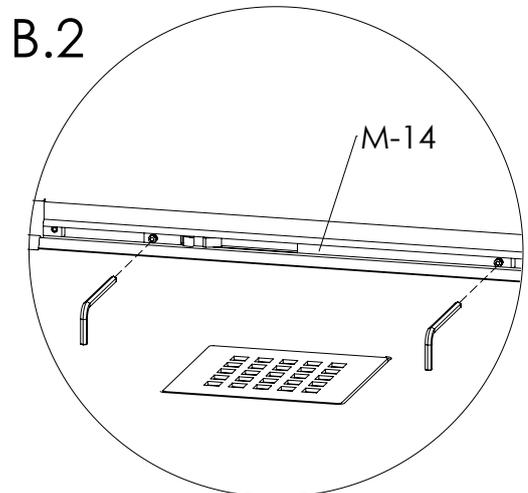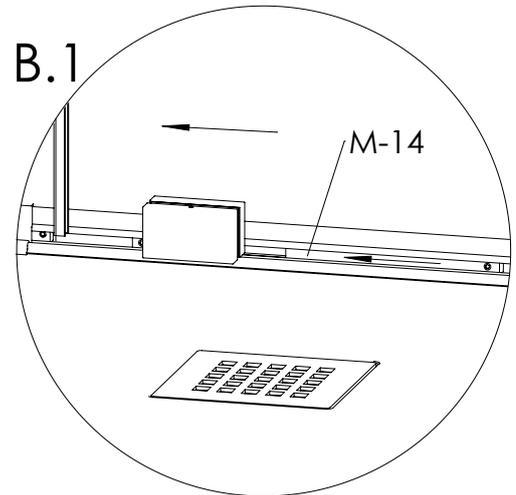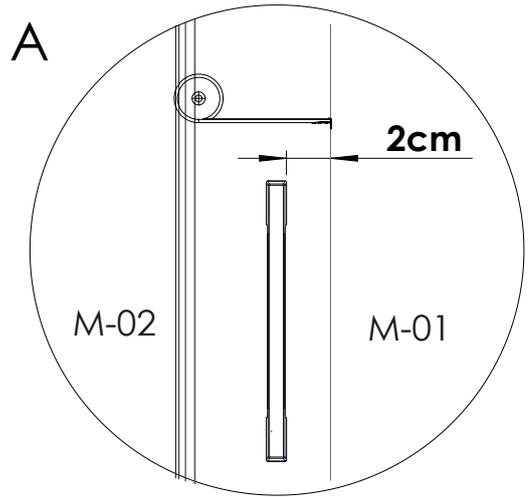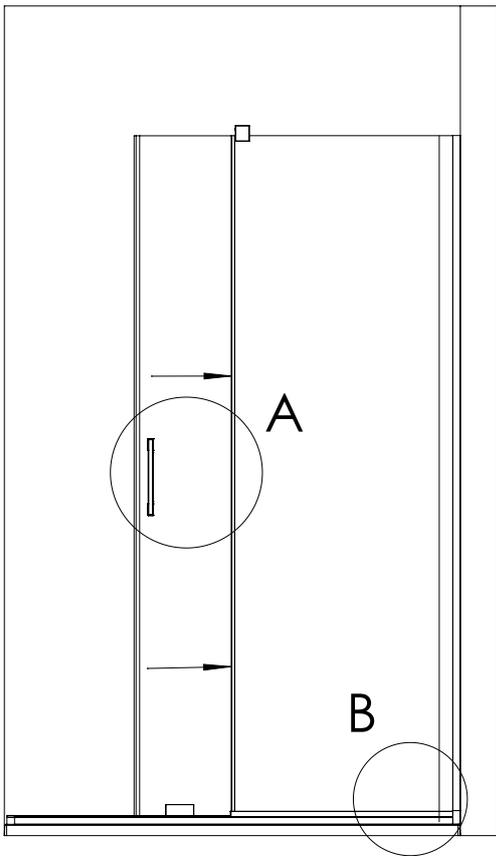

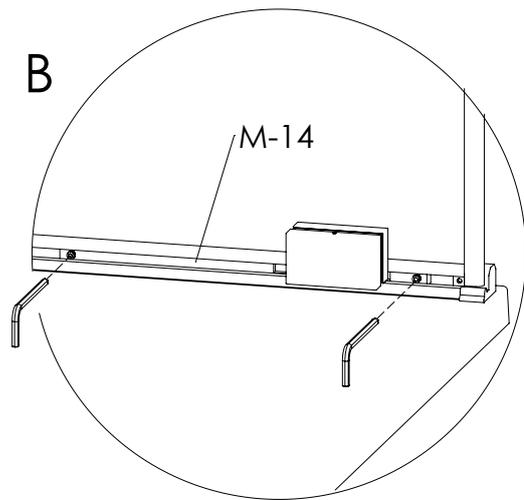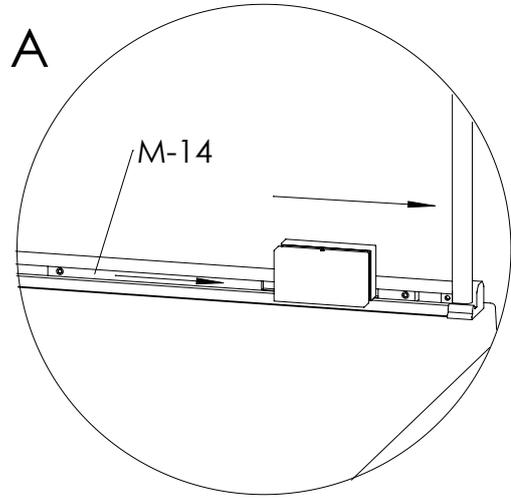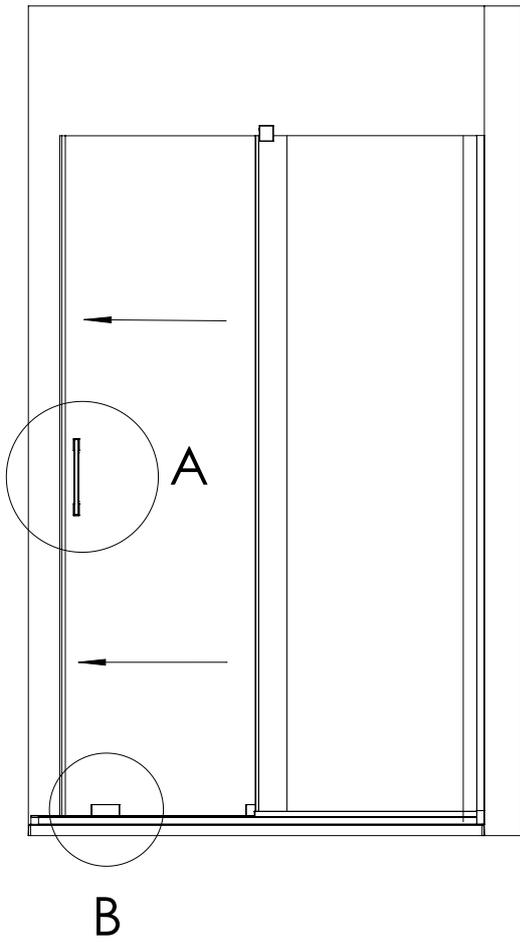

10

