



# FL-ORI-AM-000

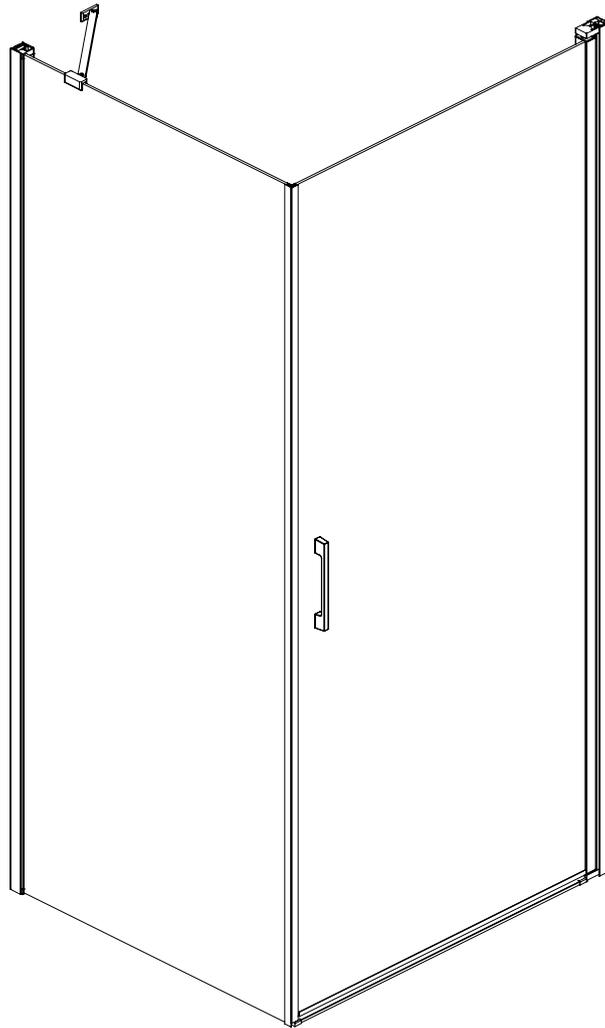


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //  
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //

---


M-01  
x2



M-08  
x2




M-02  
x1



M-09  
x1




M-03  
x1

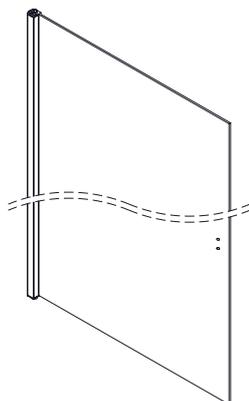


M-10  
x1



M-04  
x1

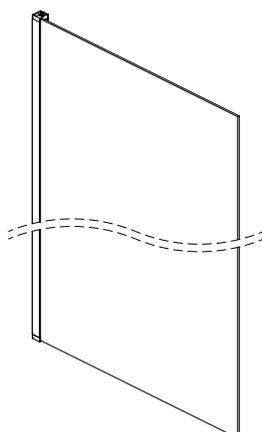


M-11  
x1



M-12  
x6




M-13  
x2




M-14  
x6




M-05  
x2



M-15  
x6




M-06  
x1



M-16  
x2




M-07  
x1




M-17  
x8




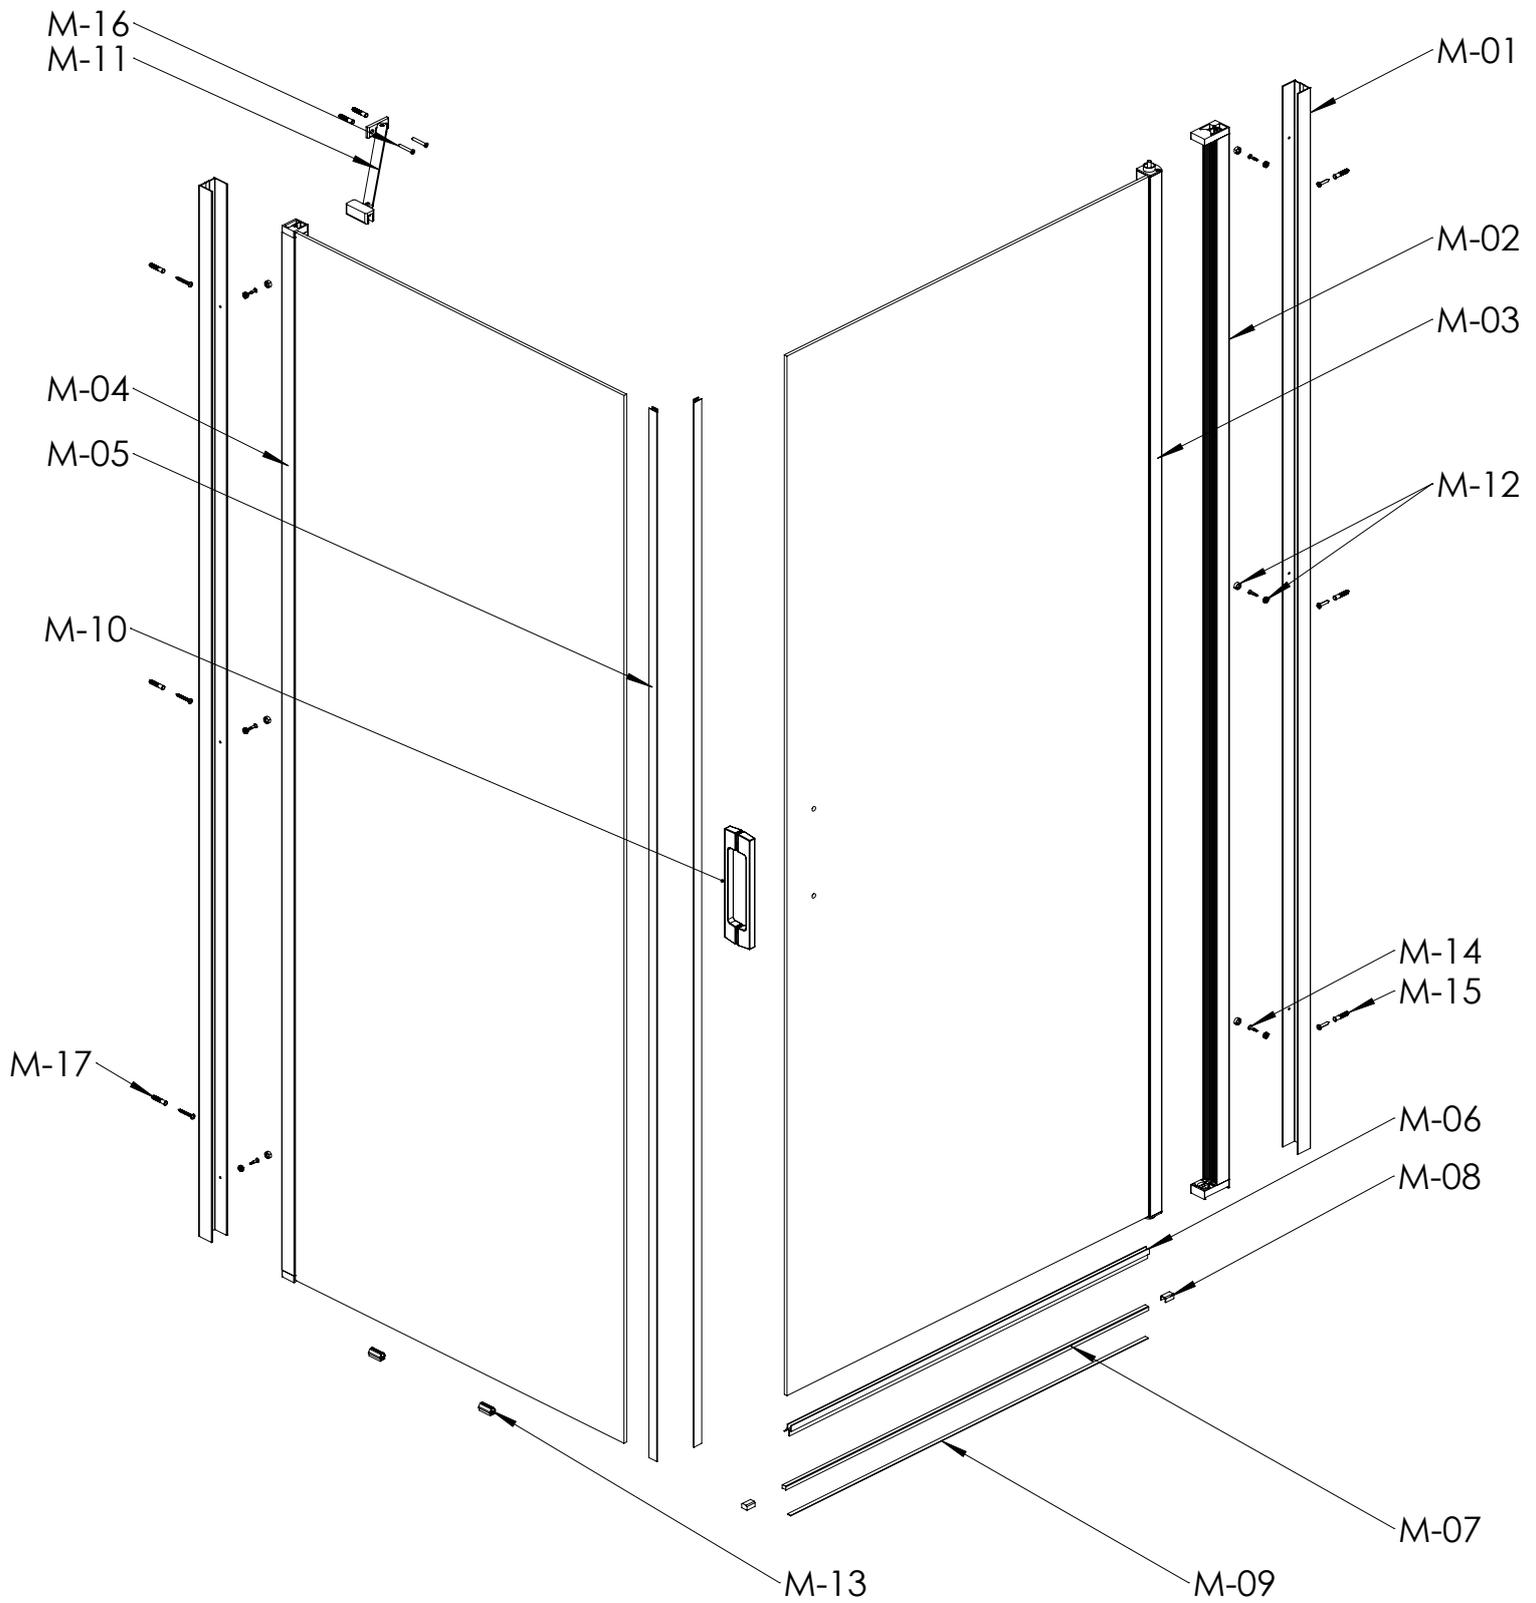


# 1

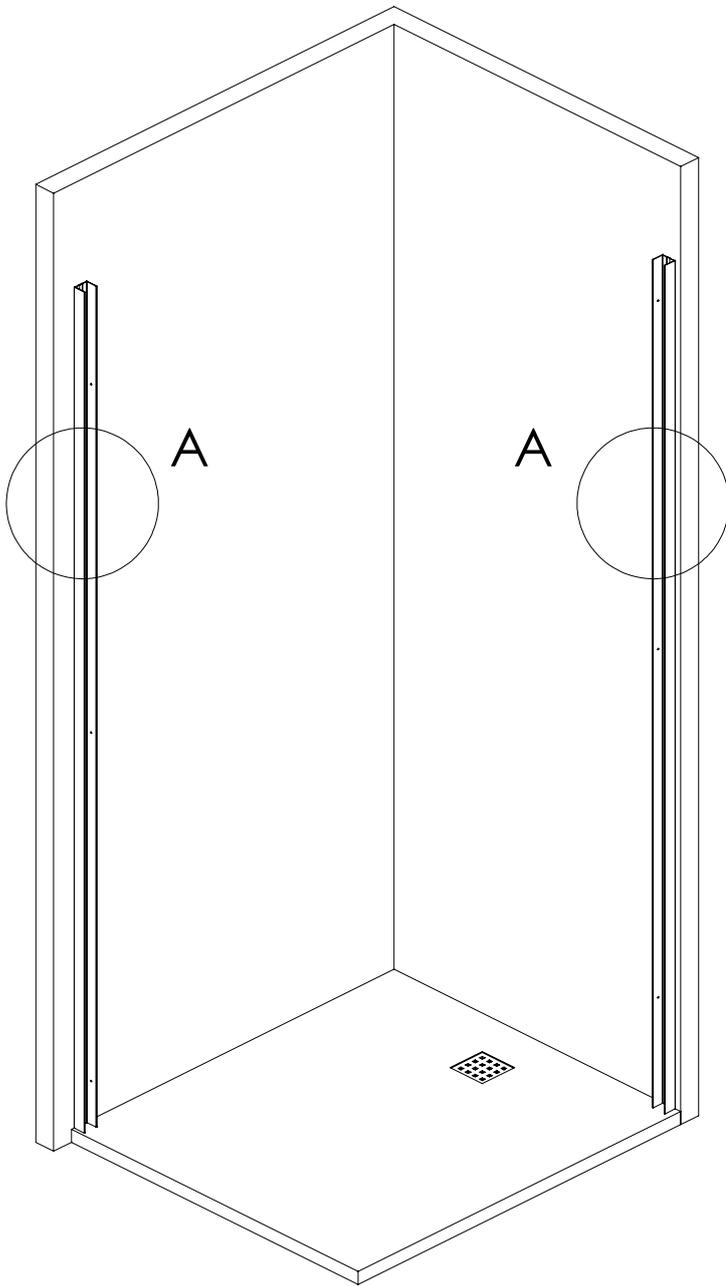


### A.1

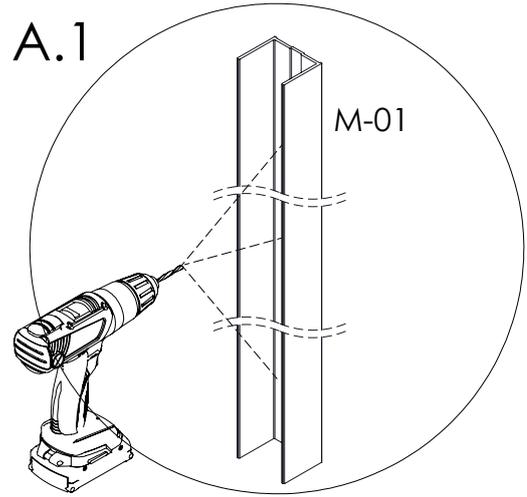





### A.2

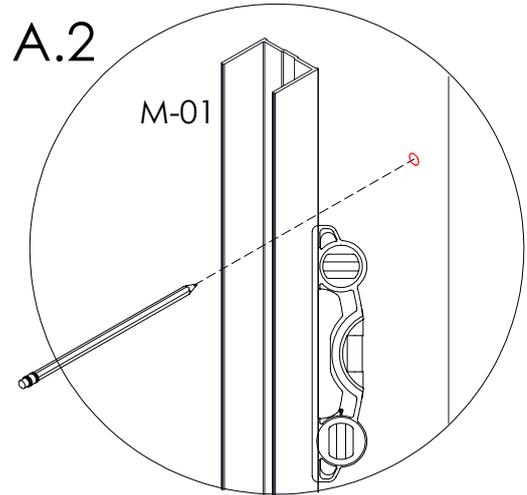





### A.3

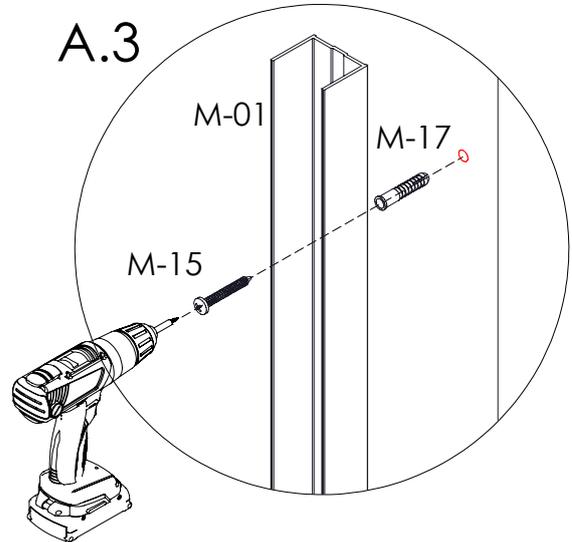





# 2

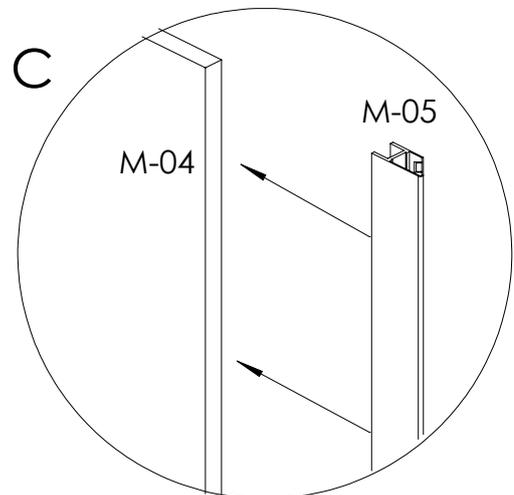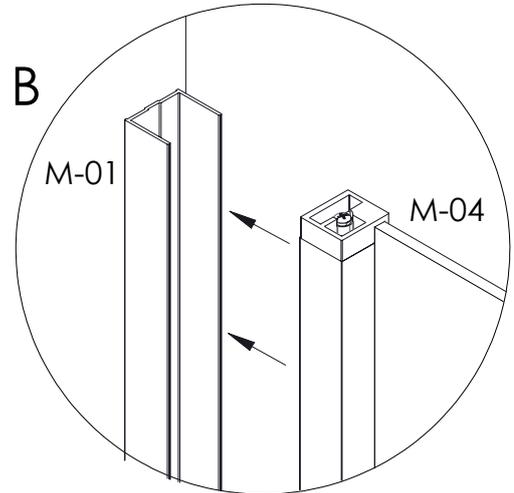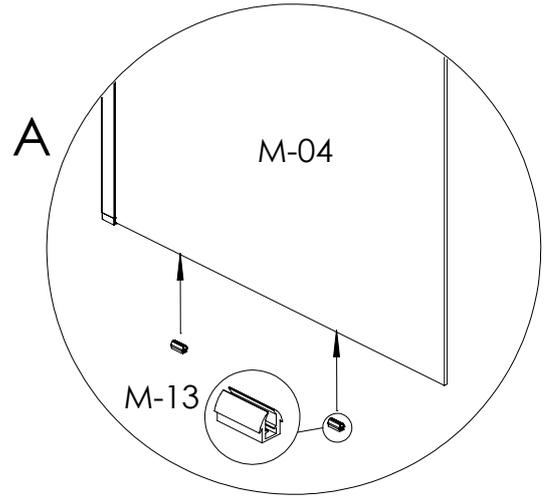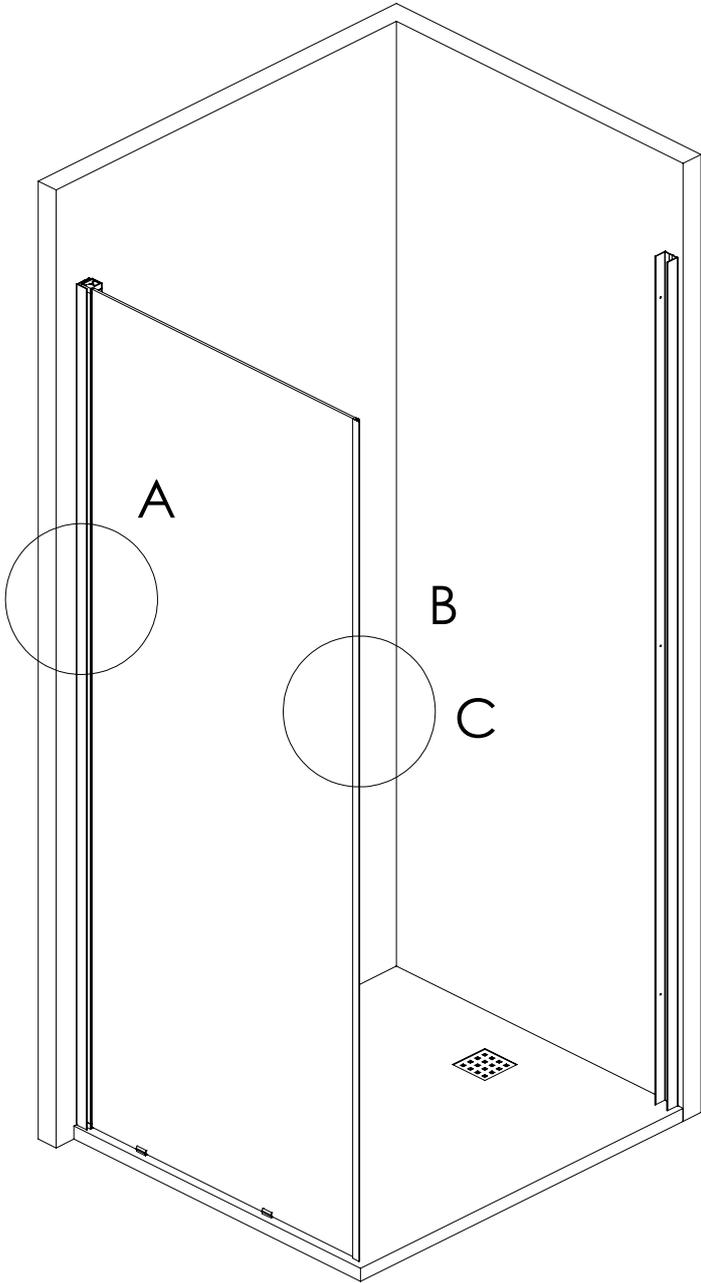






# 3

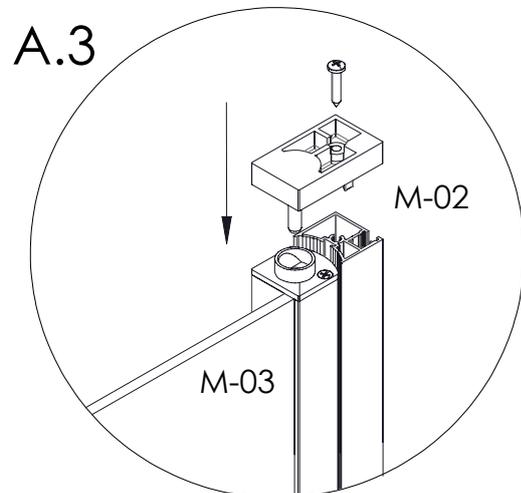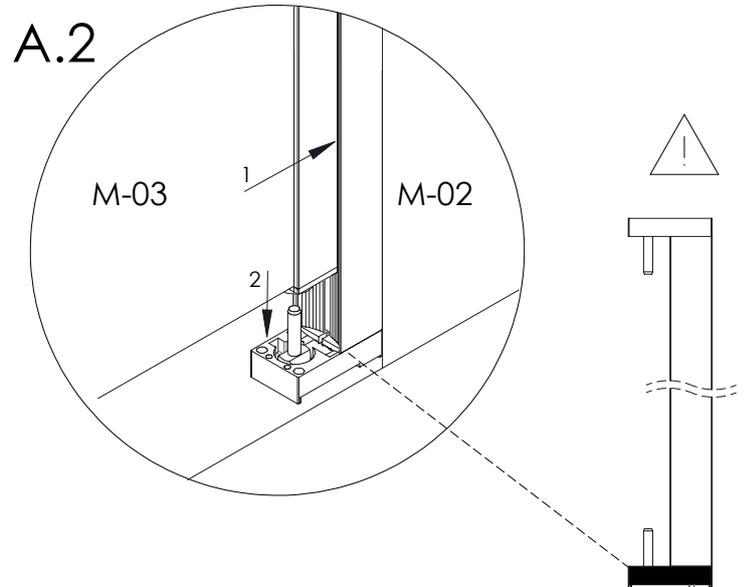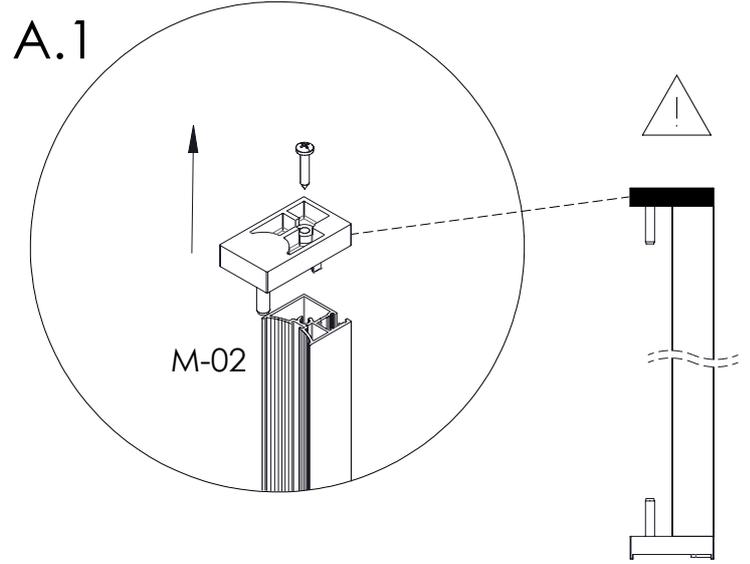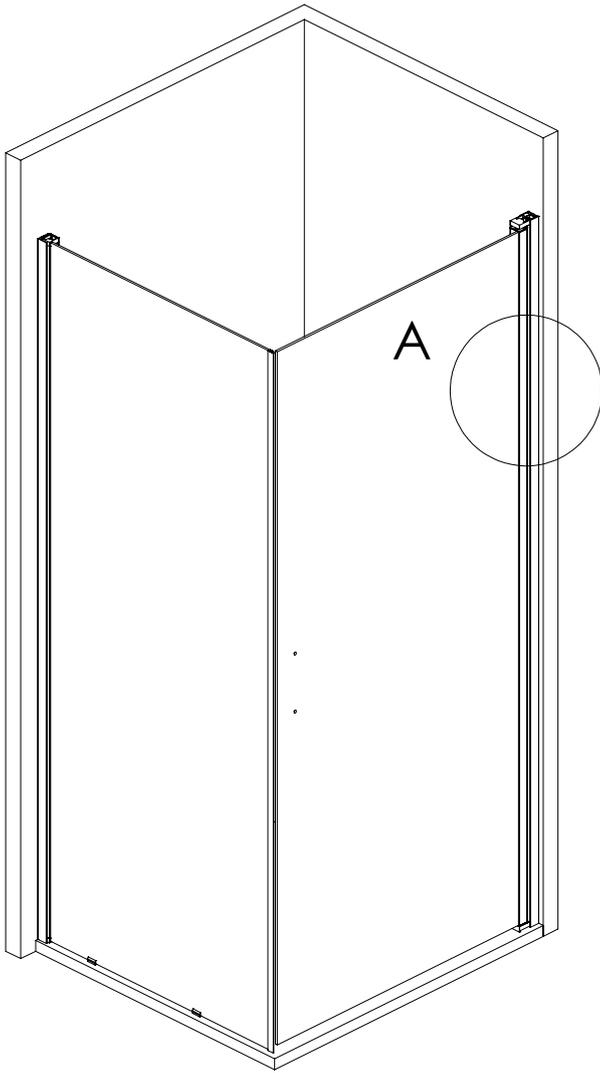







# 4

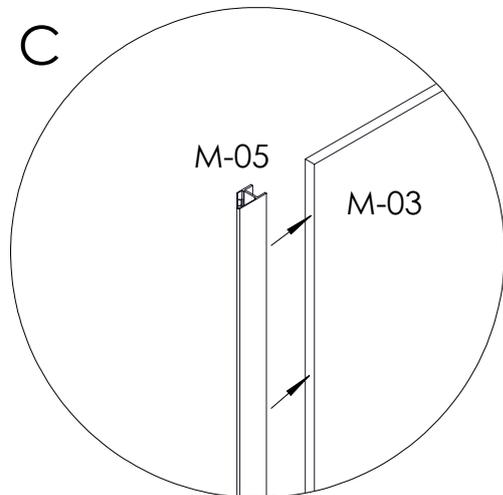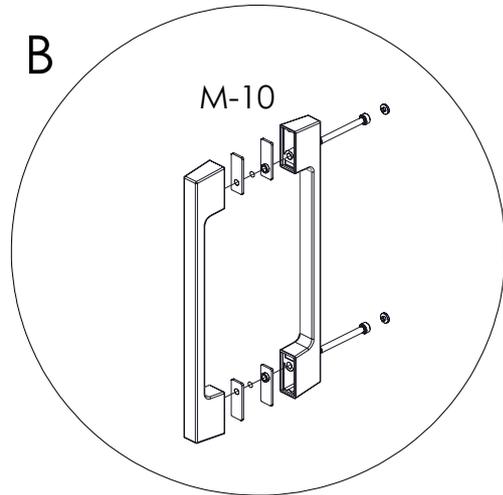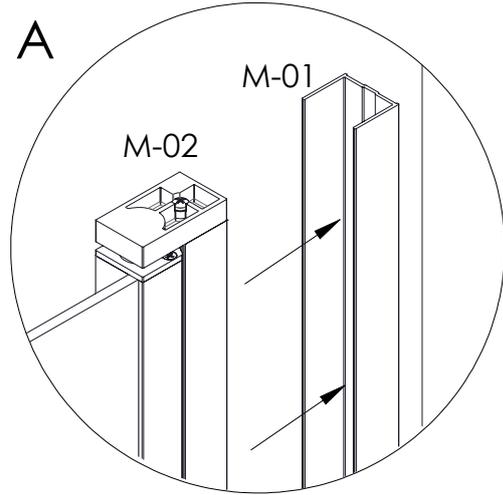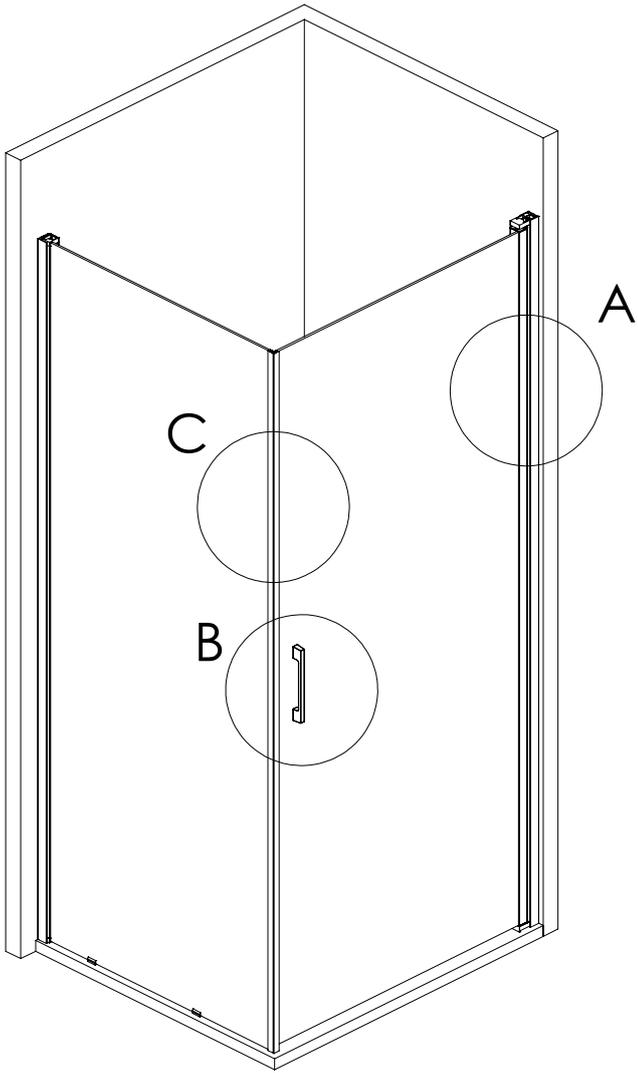

# 5

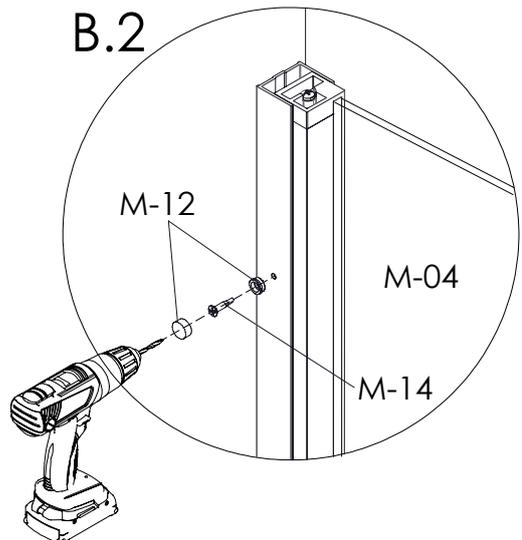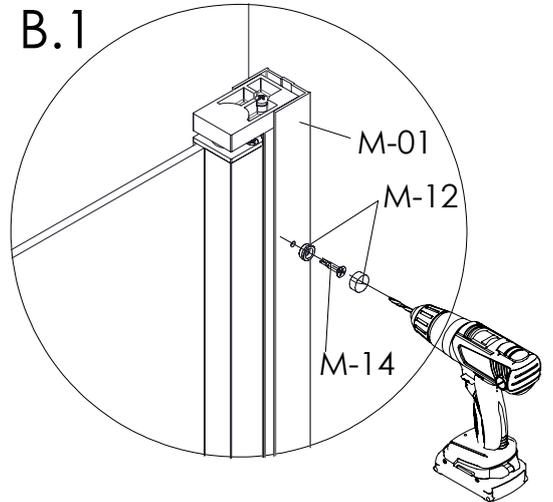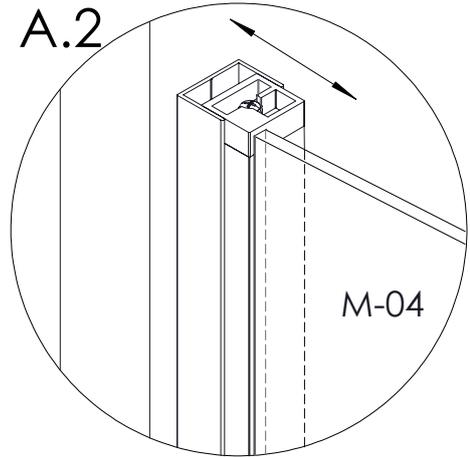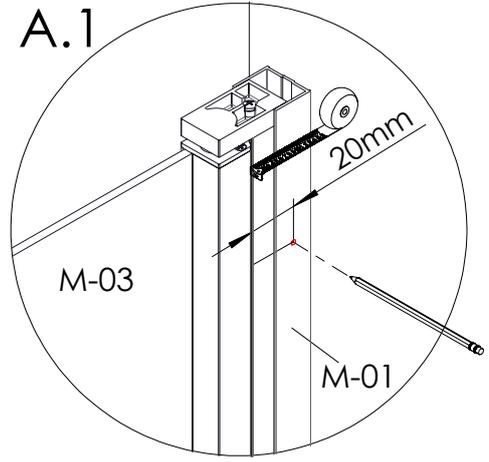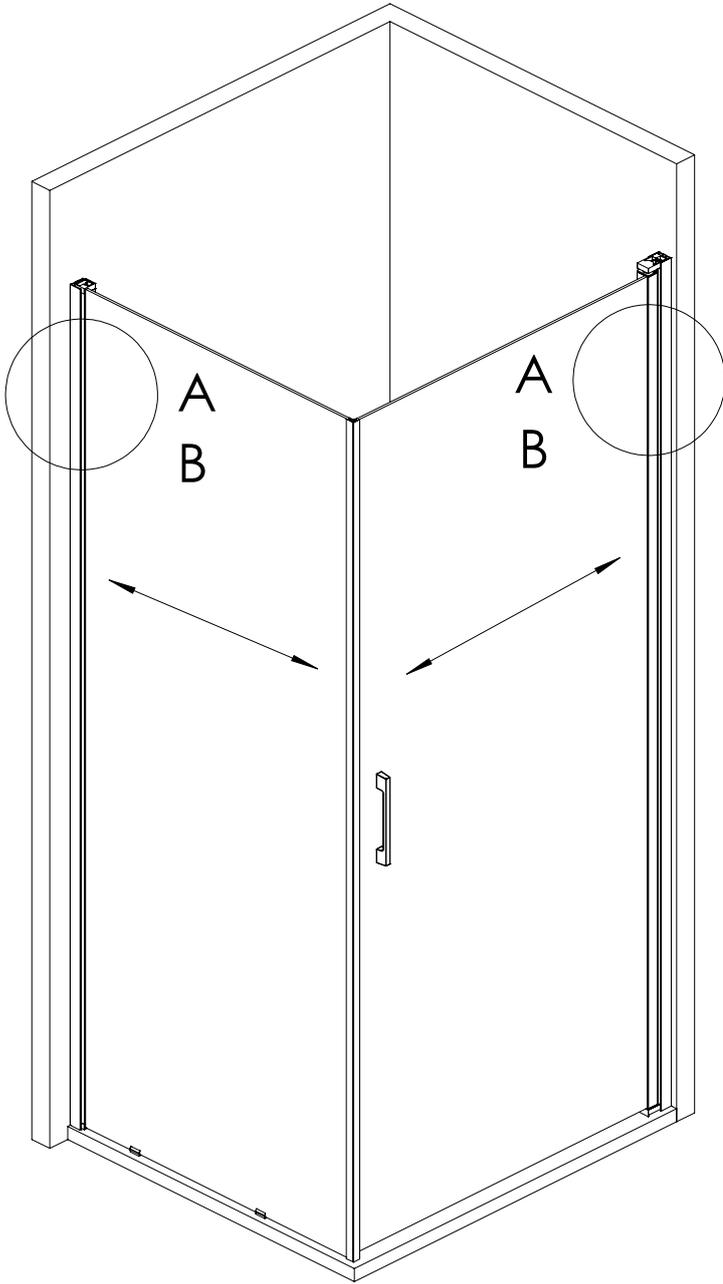


6

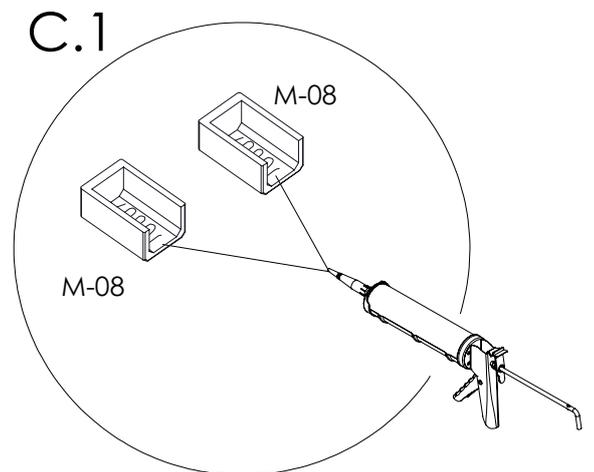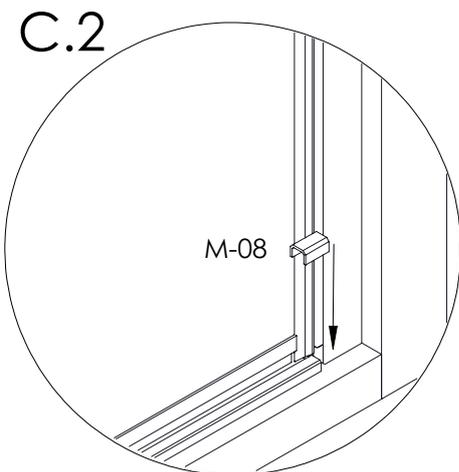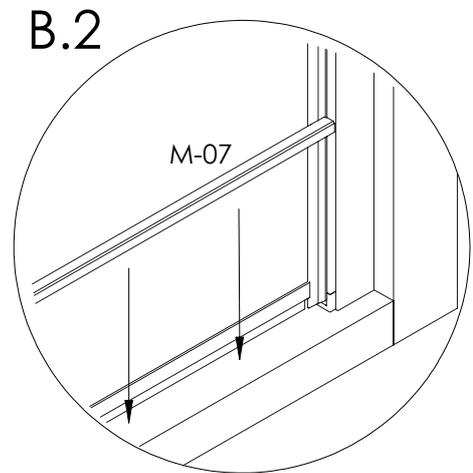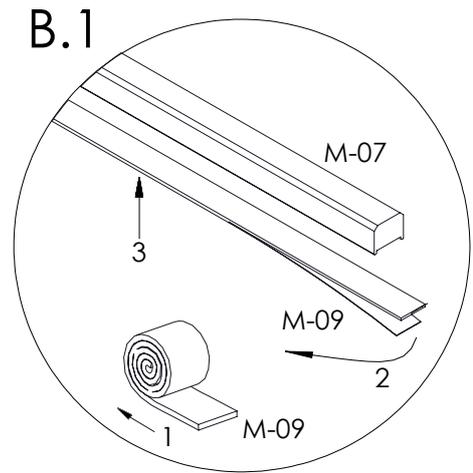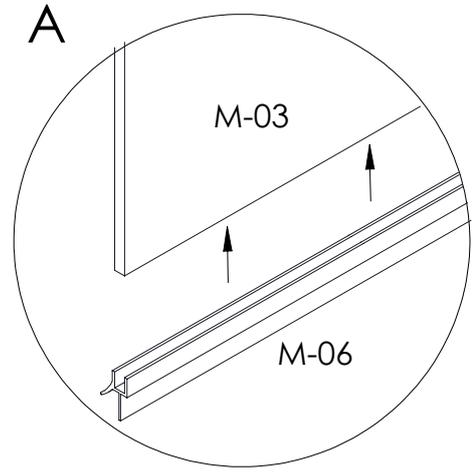
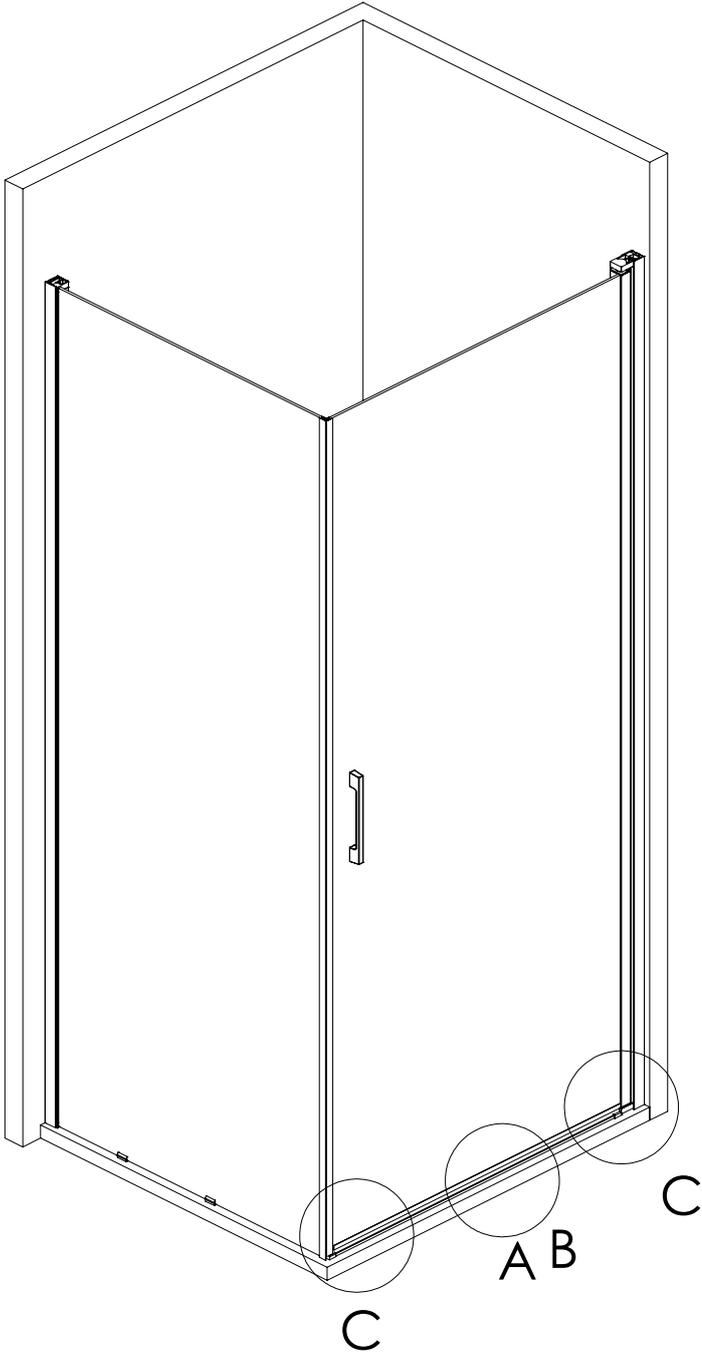


# 7


A.1

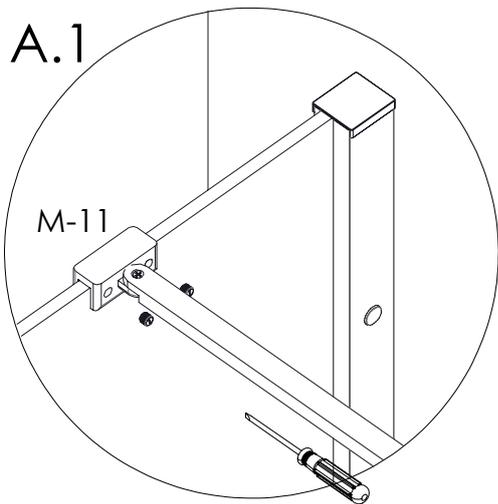


A.2

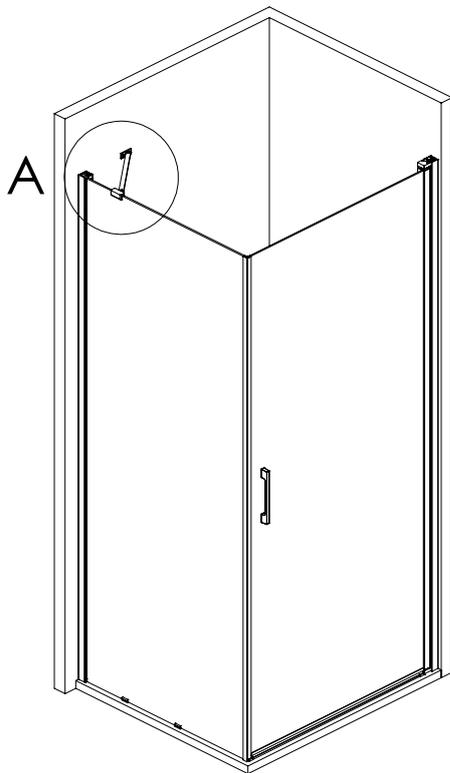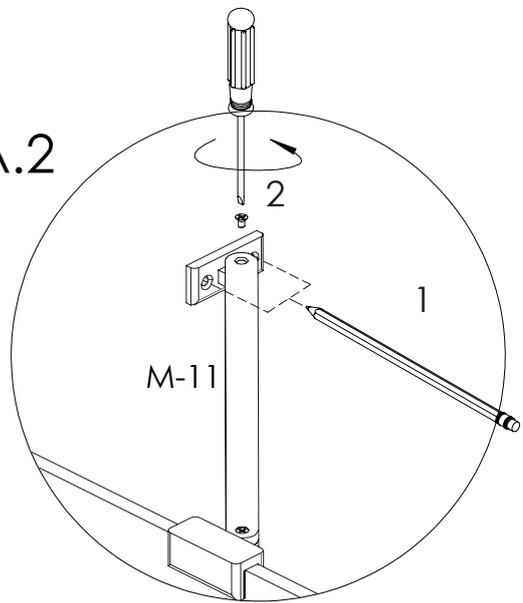


A.3

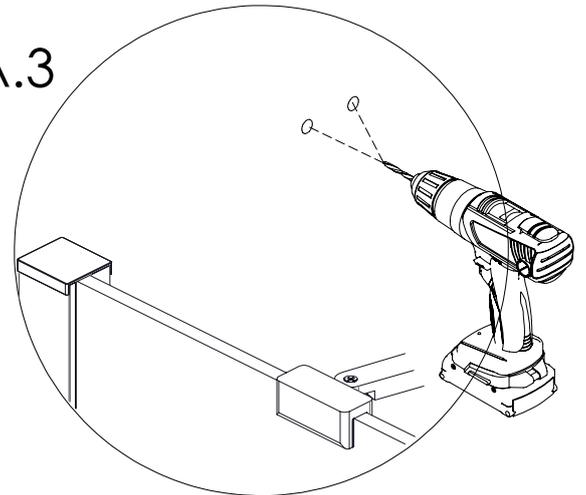

A.5

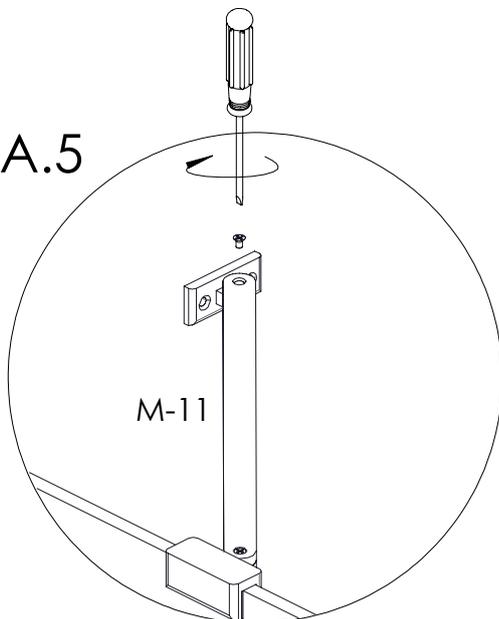

A.4

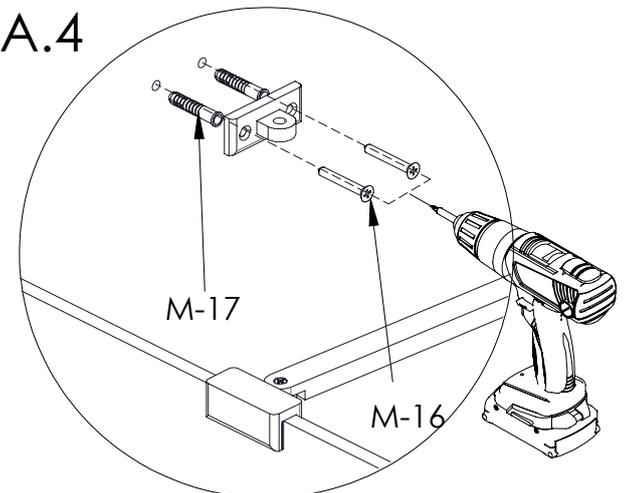

# 8

