



FRO-25-ANV-ST-003

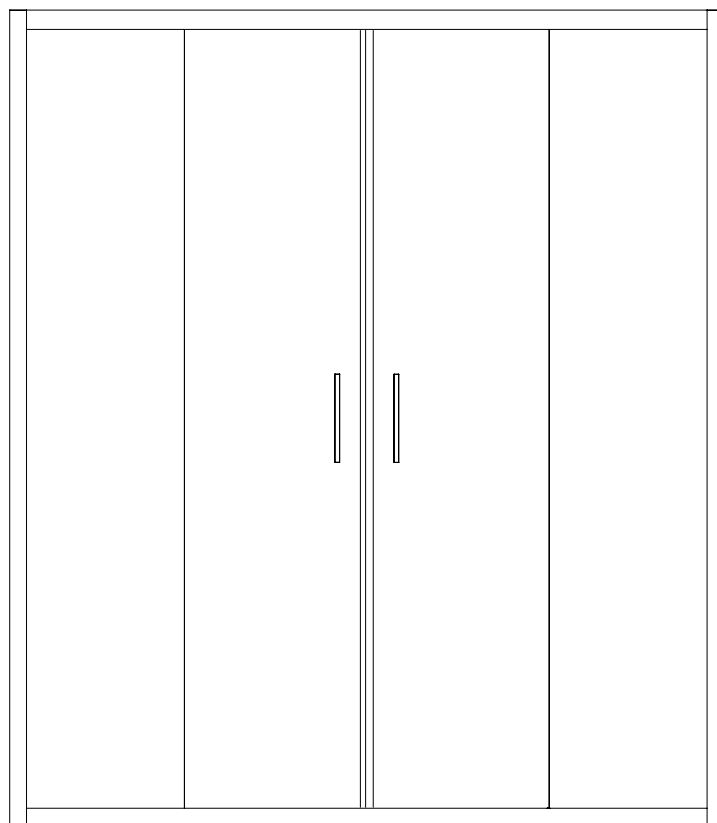

// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //

// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


M-01
x2




M-09
x2



M-17
x4




M-02
x2




M-10
x2



M-18
x4




M-03
x1




M-11
x2



M-19
x4



M-04
x1




M-12
x2



M-20
x4



M-05
x2




M-13
x4




M-21
x8




M-06
x2

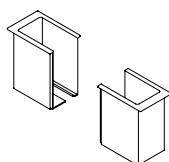


M-14
x4




M-07
x4






M-15
x2




M-08
x4








M-16
x6



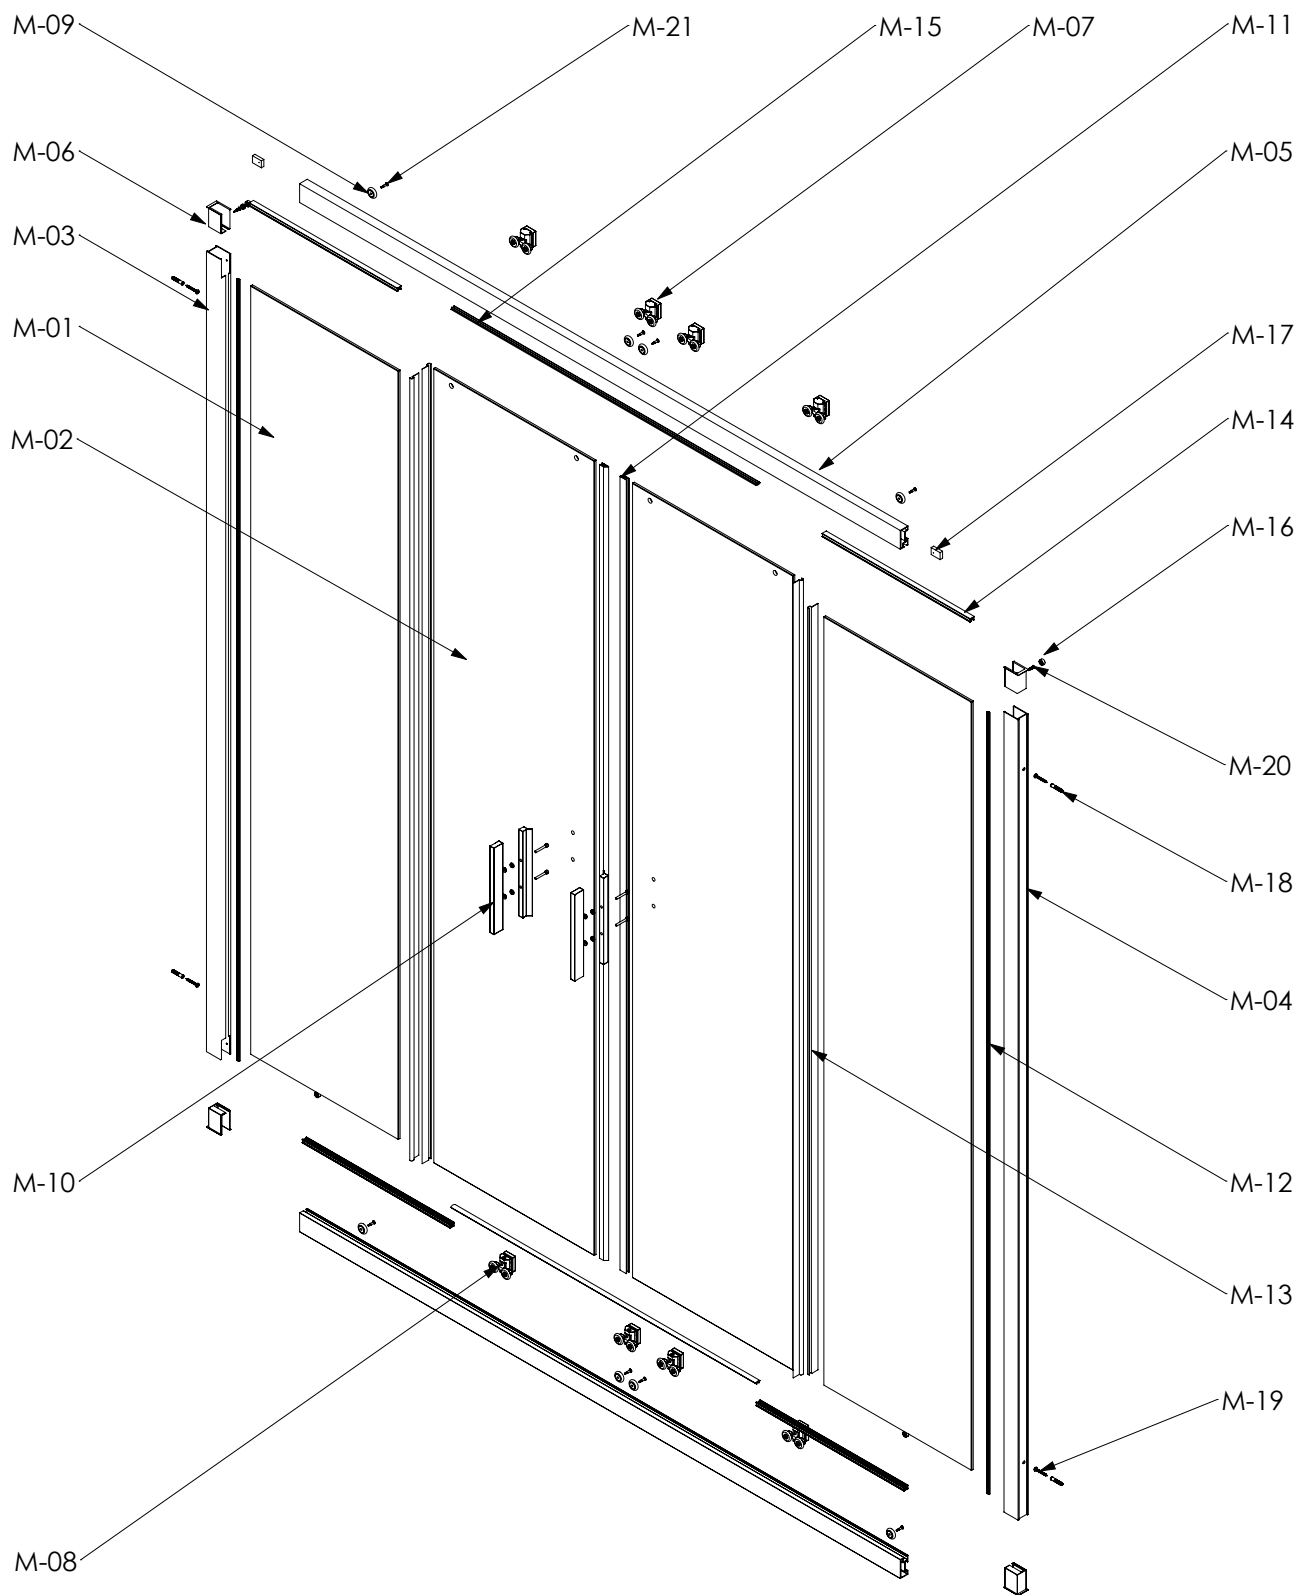


1

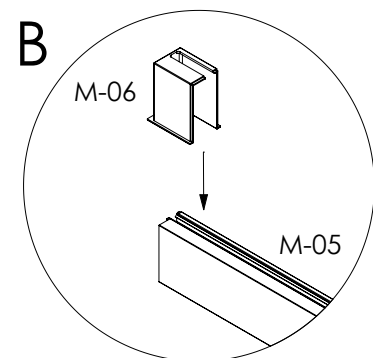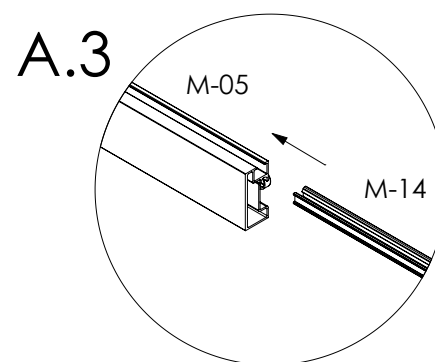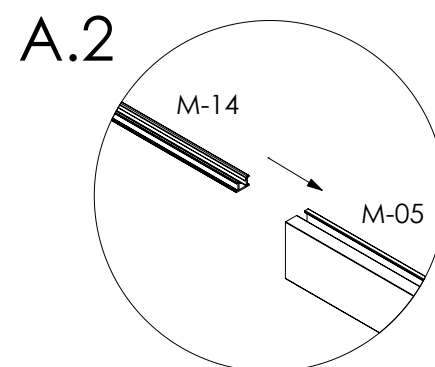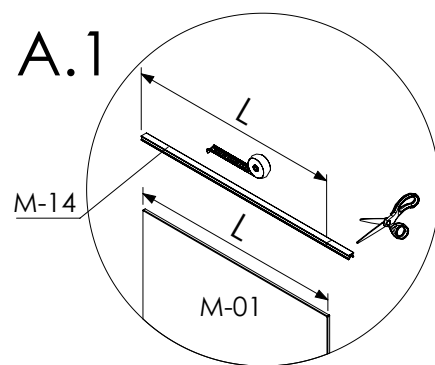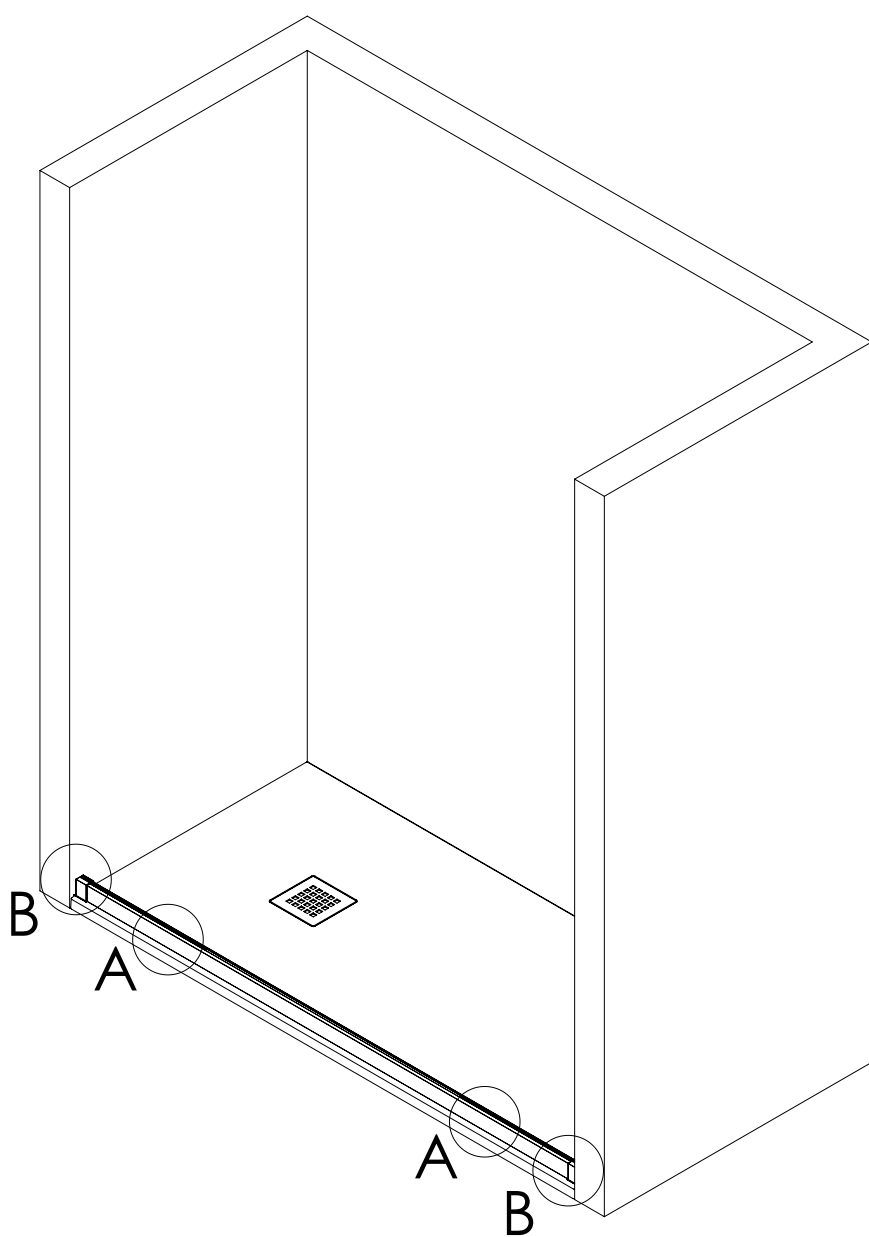


2 OPTION A



A.1

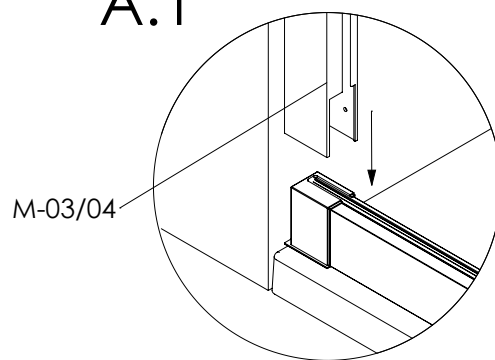


A.2

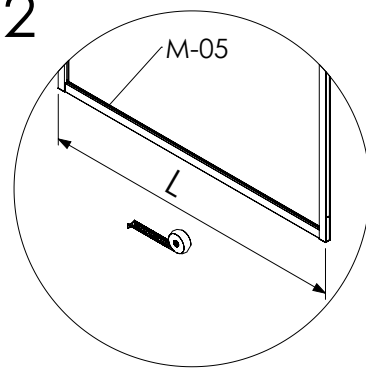


A.3

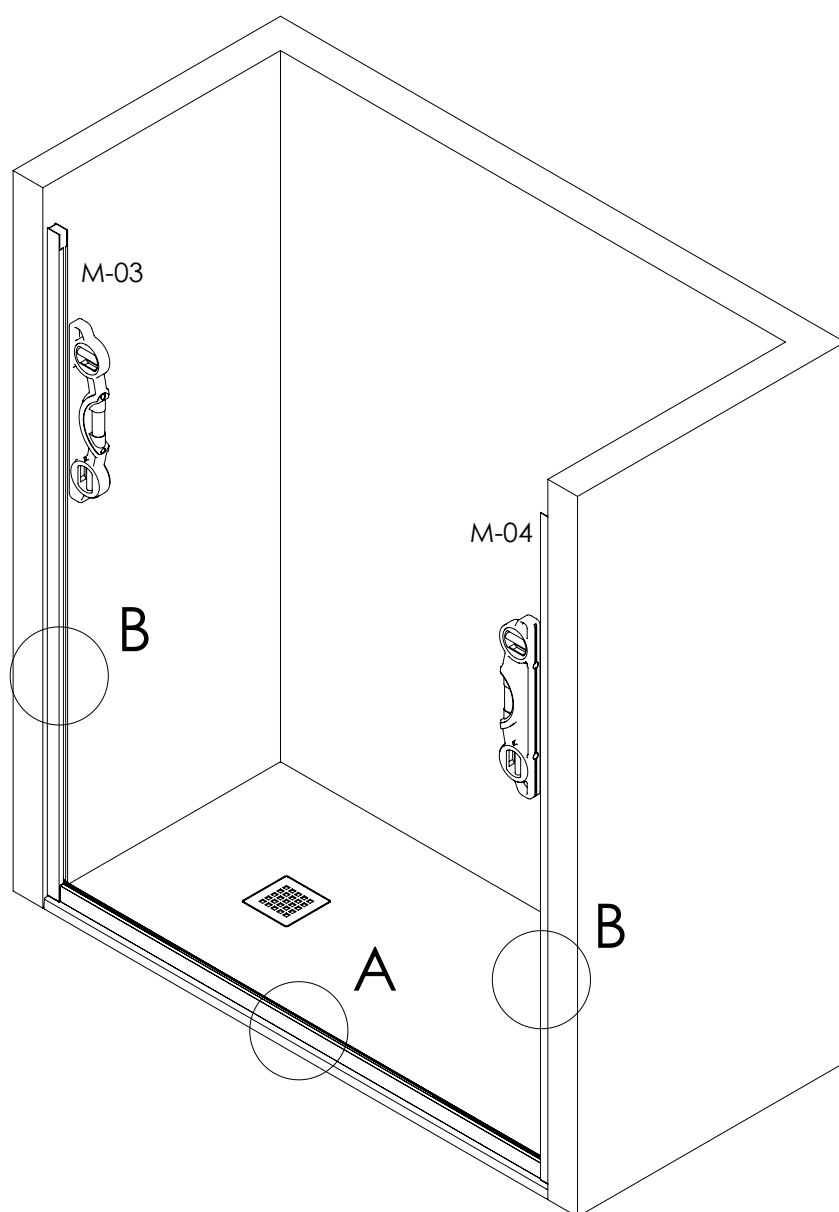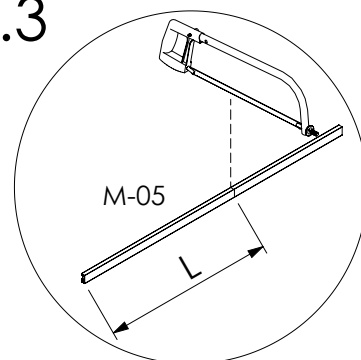









B.1

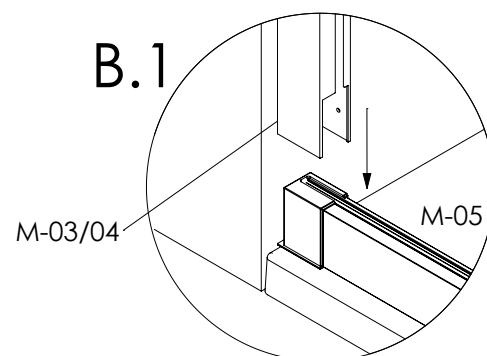





B.2

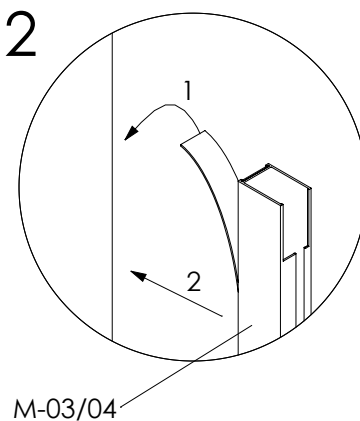









2 OPTION B

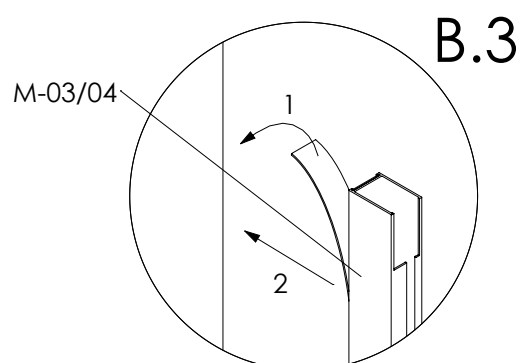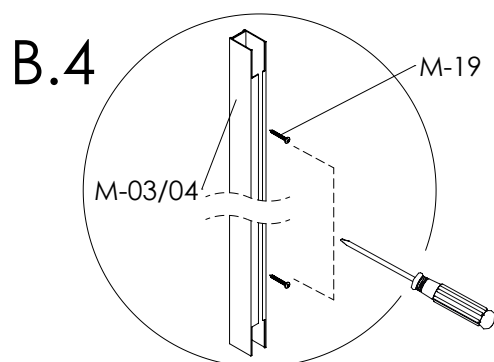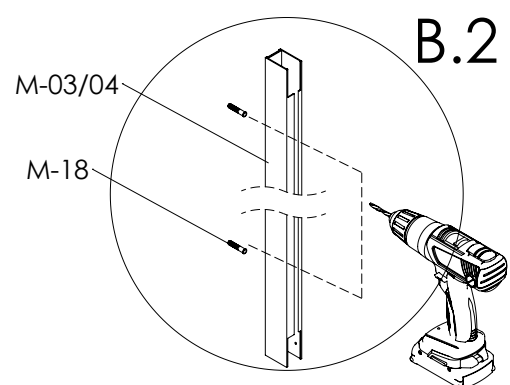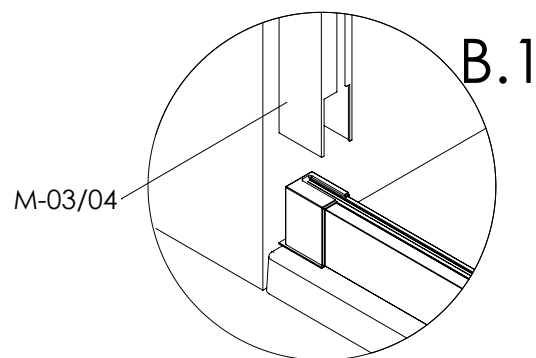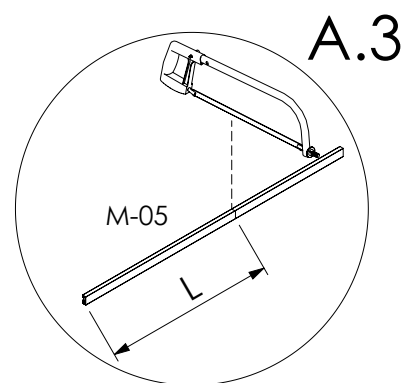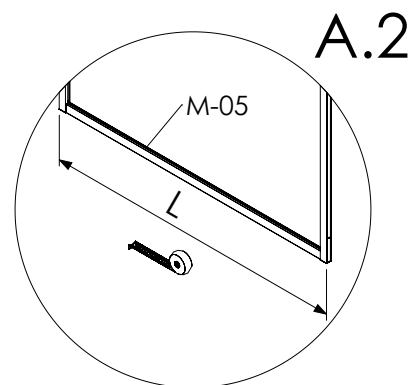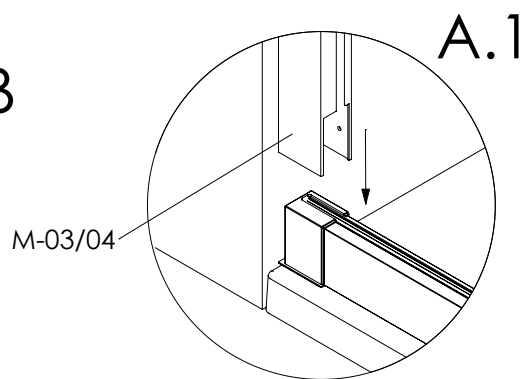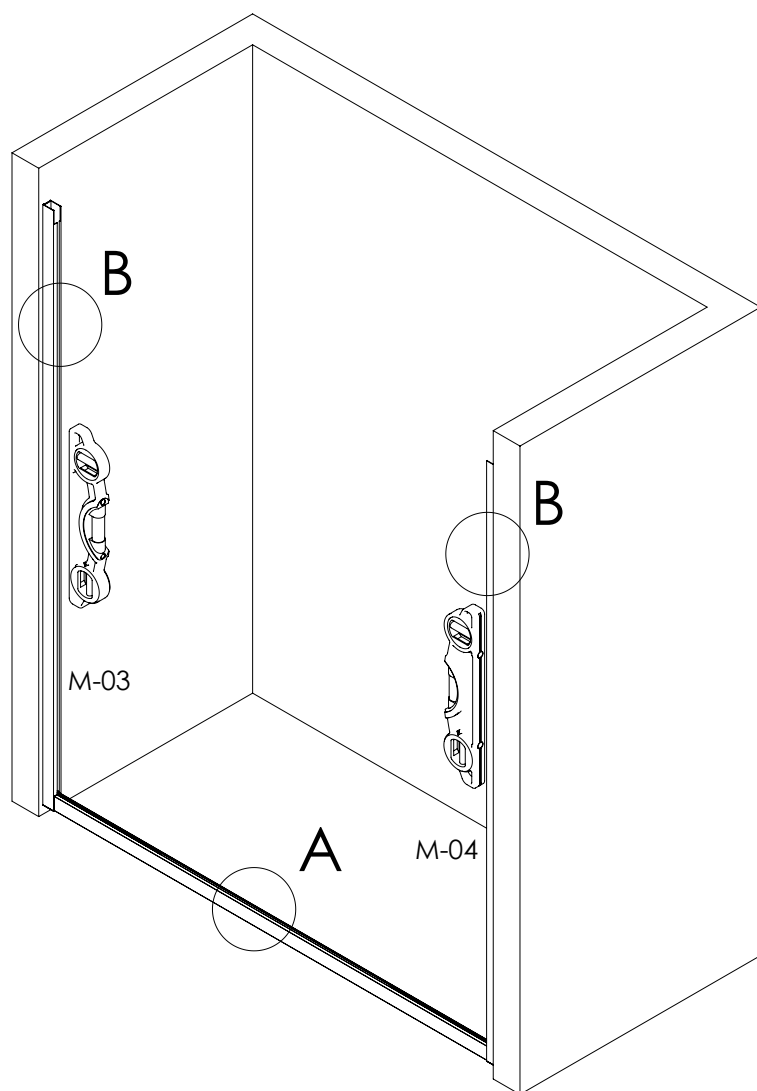






3

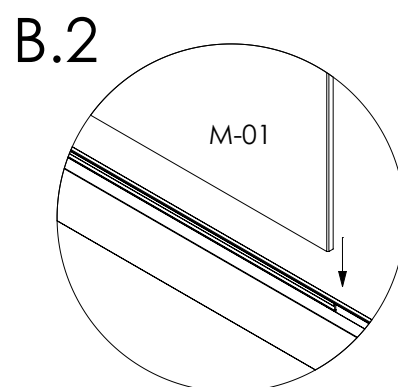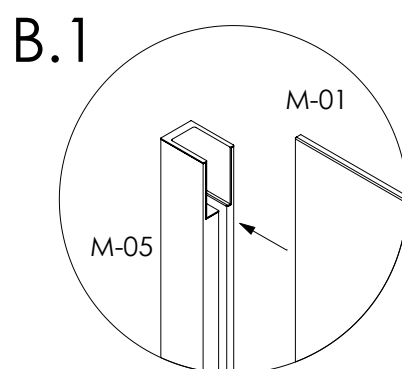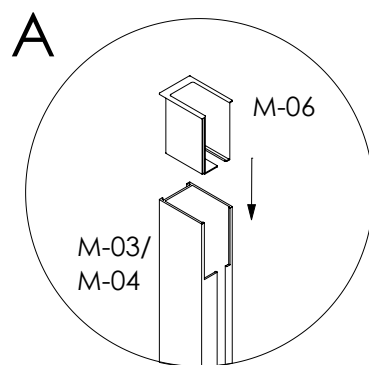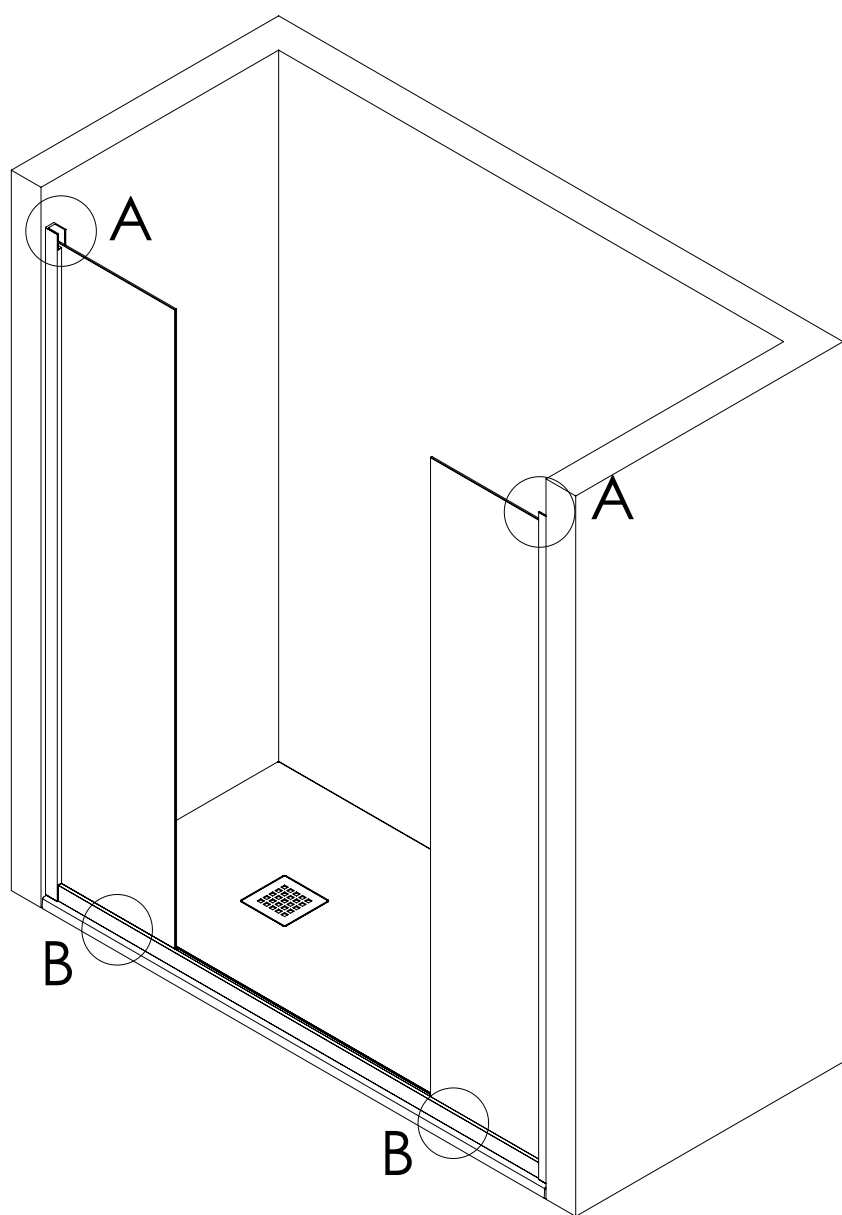






4

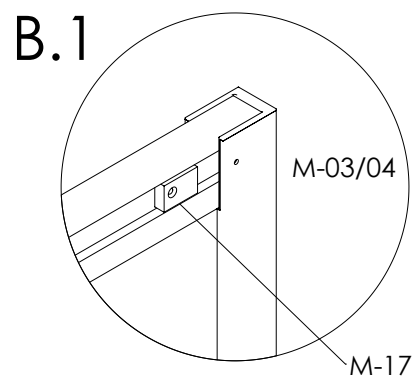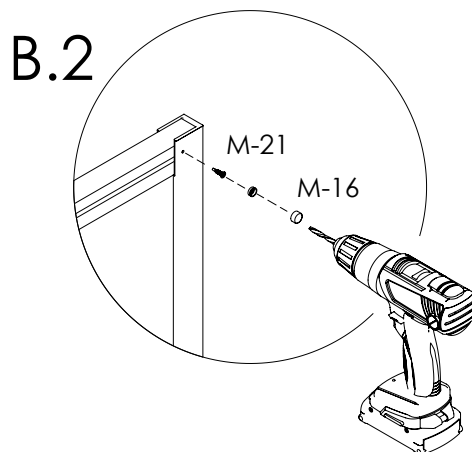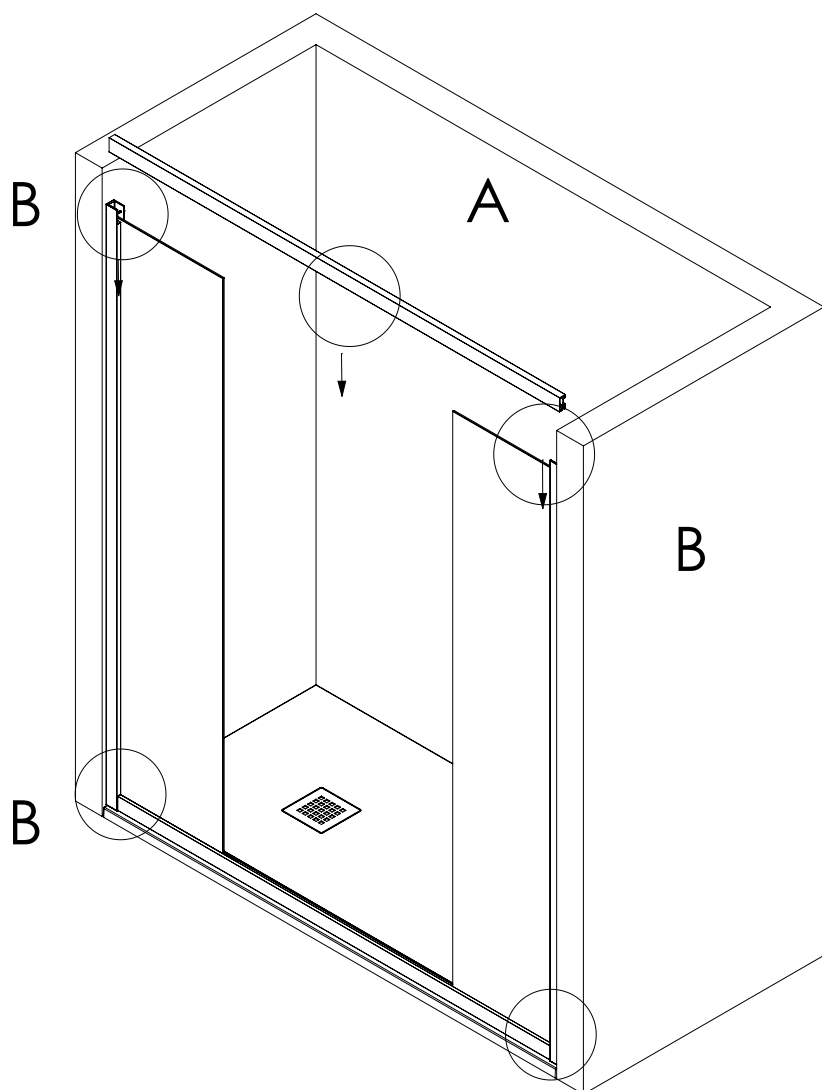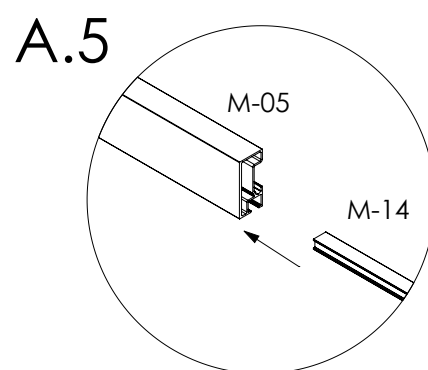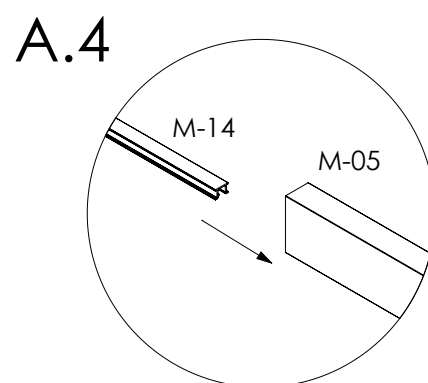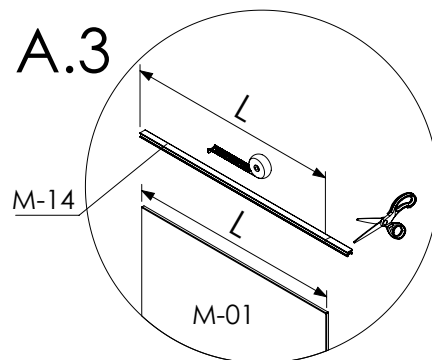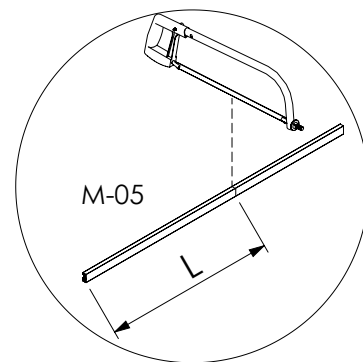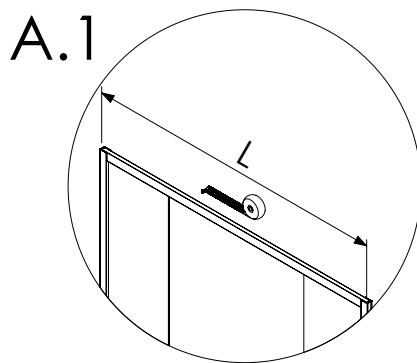





5

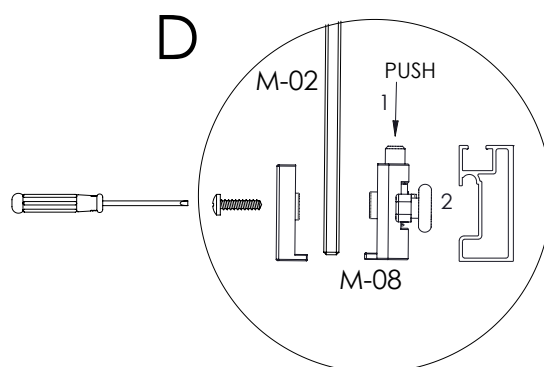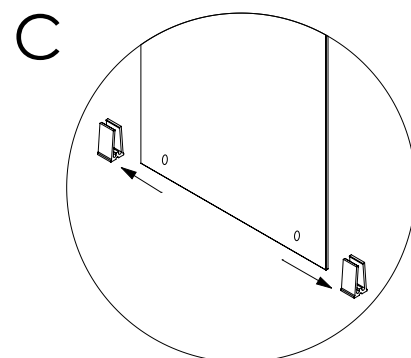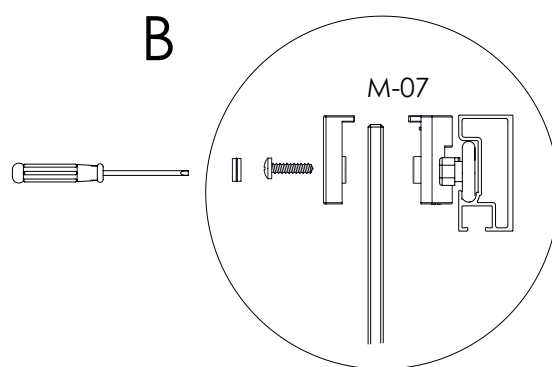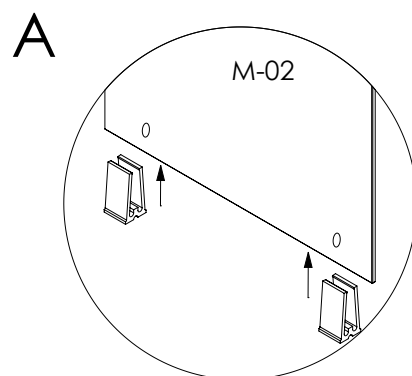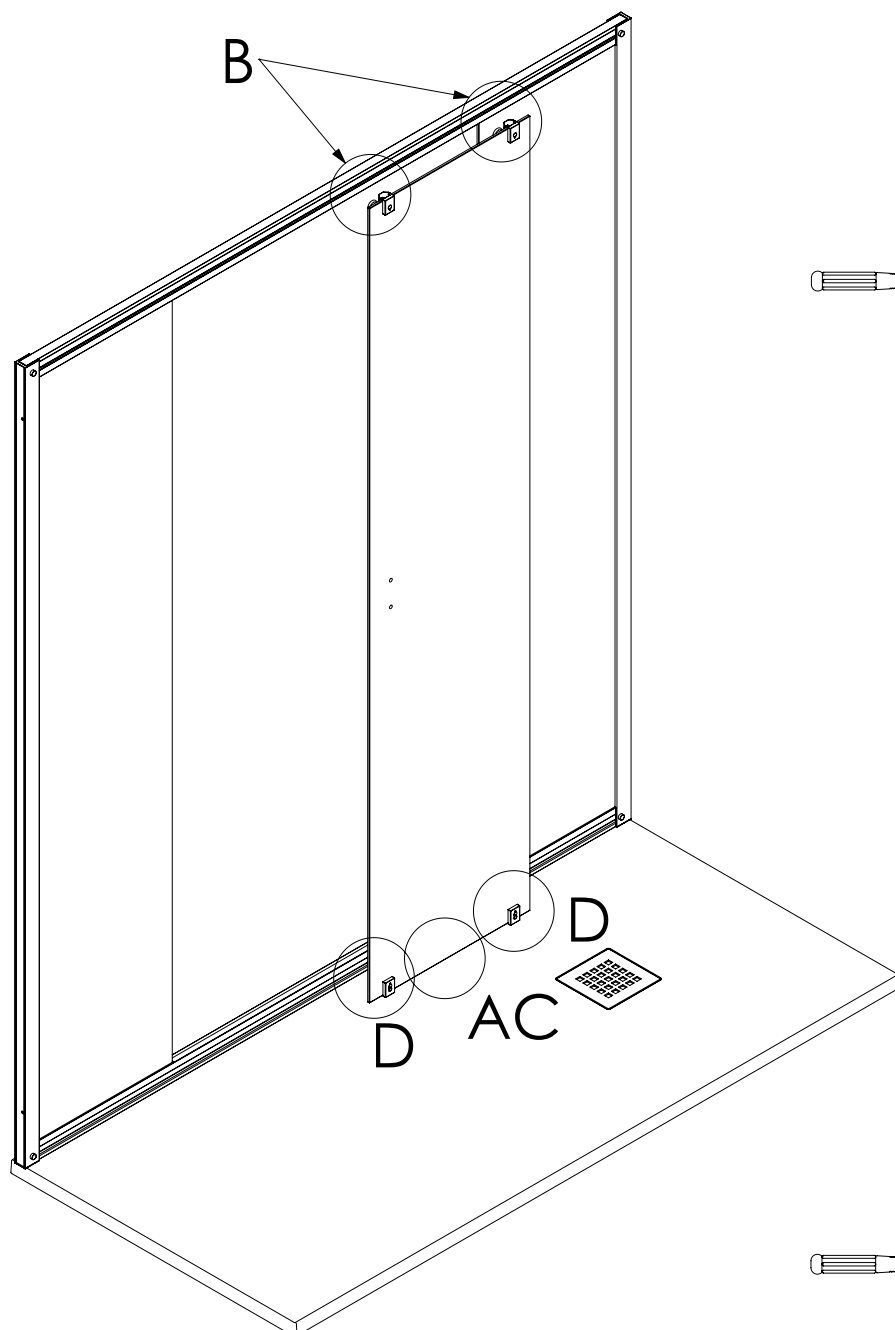



6

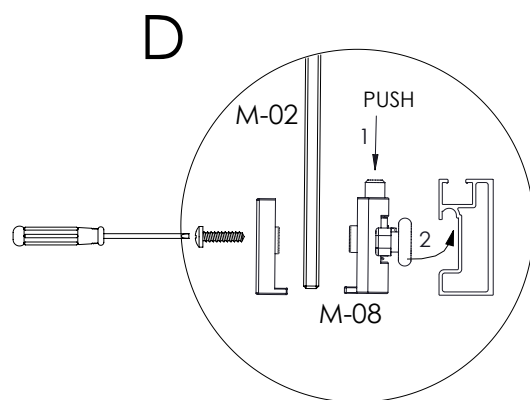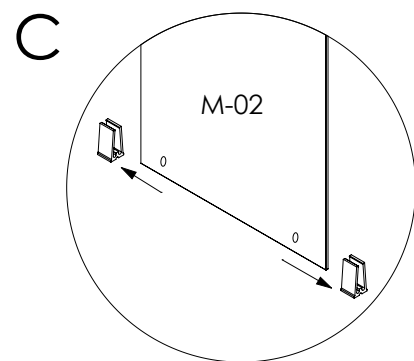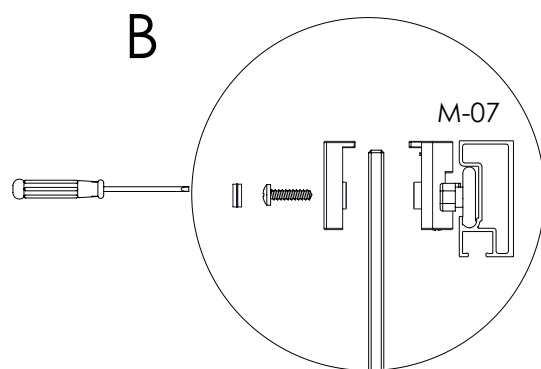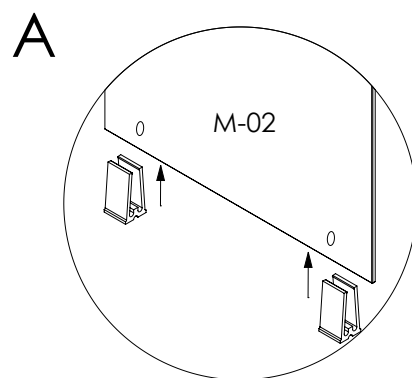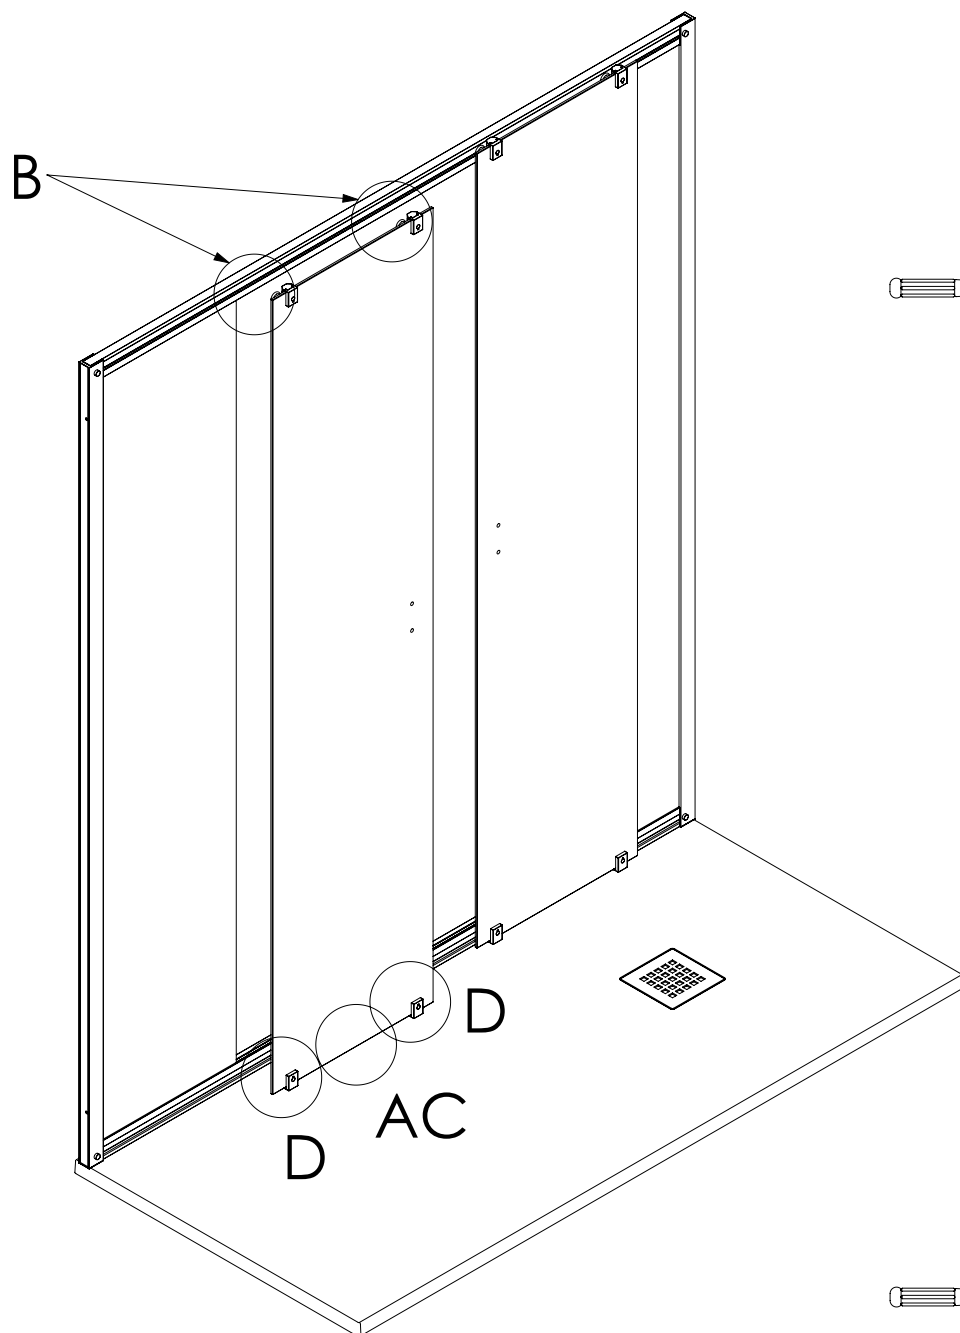


7

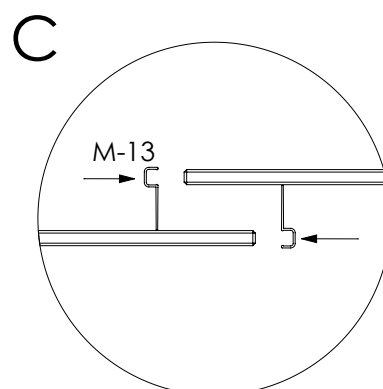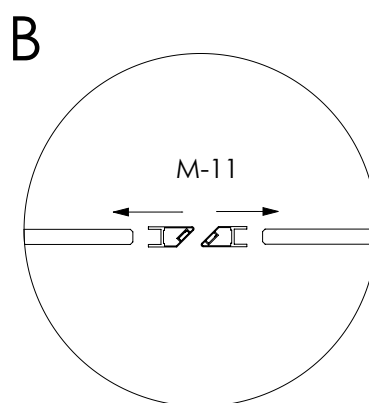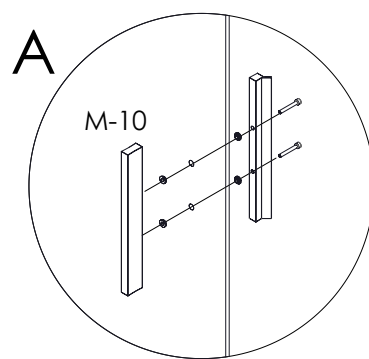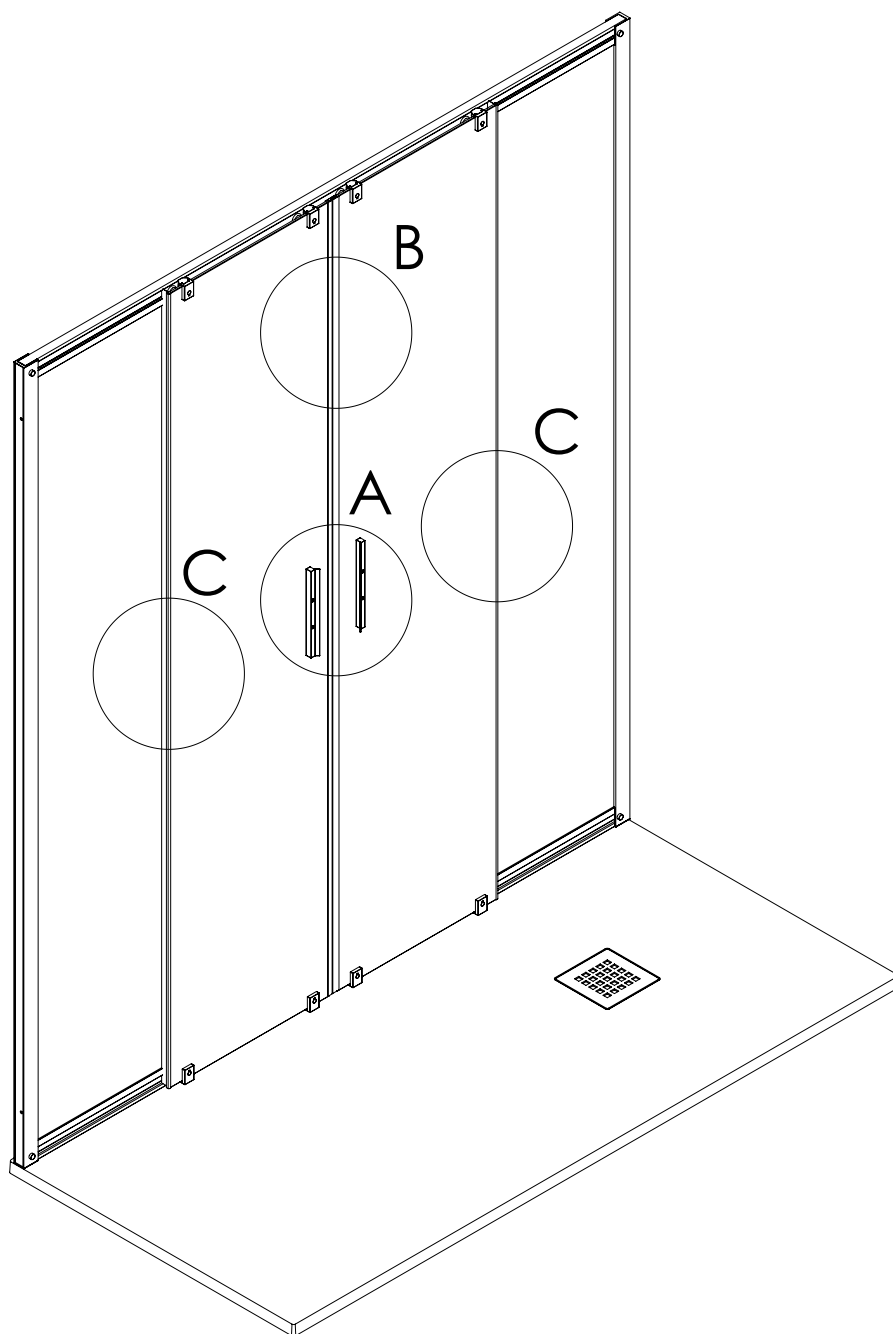


8

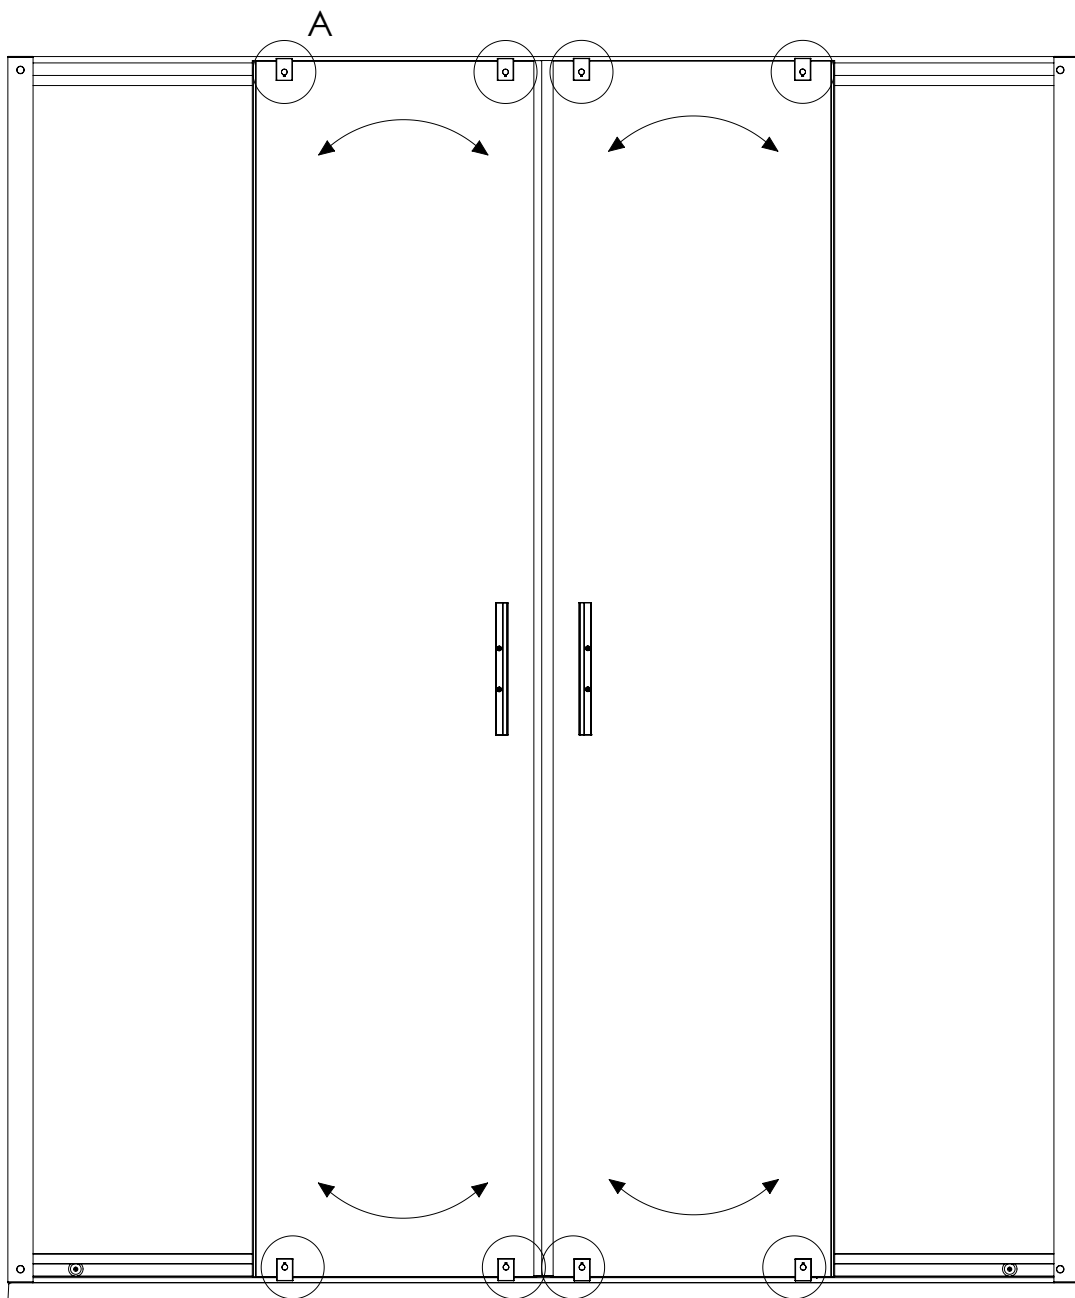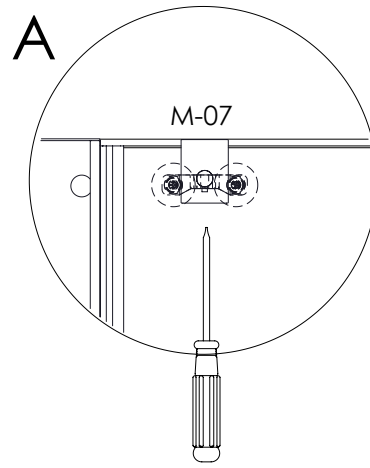


9

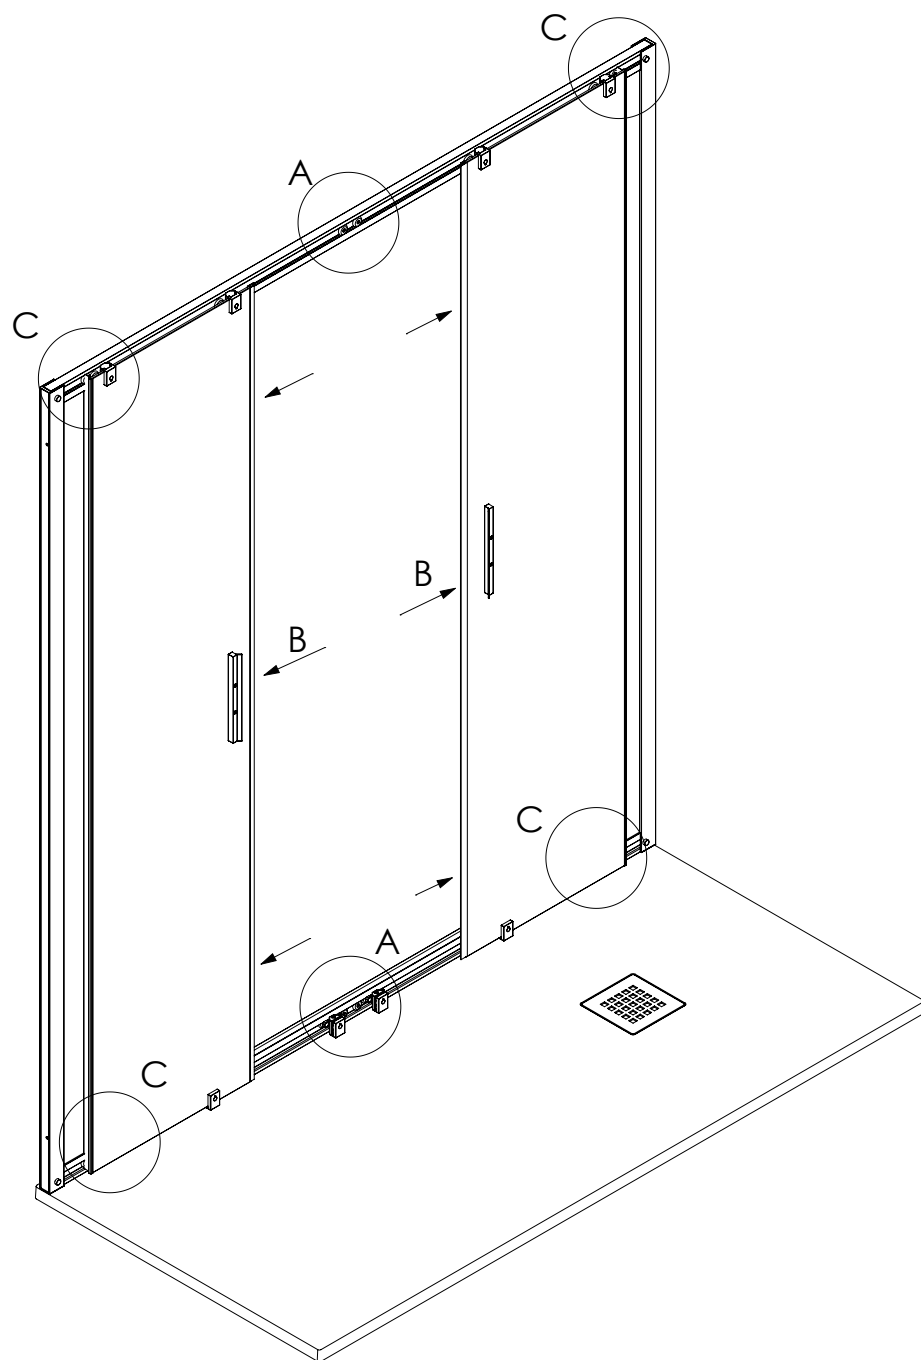

A.1

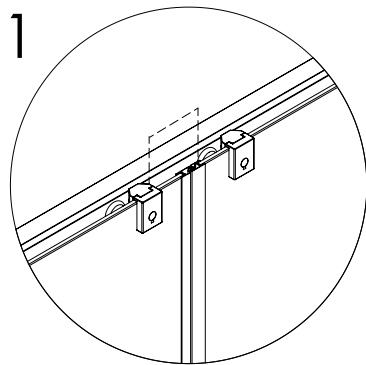

A.2

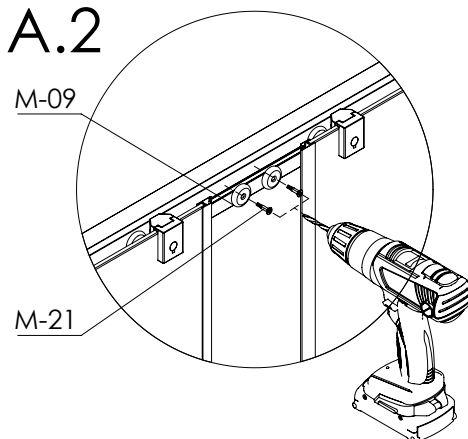

C

