



FRO-PER-AM-002

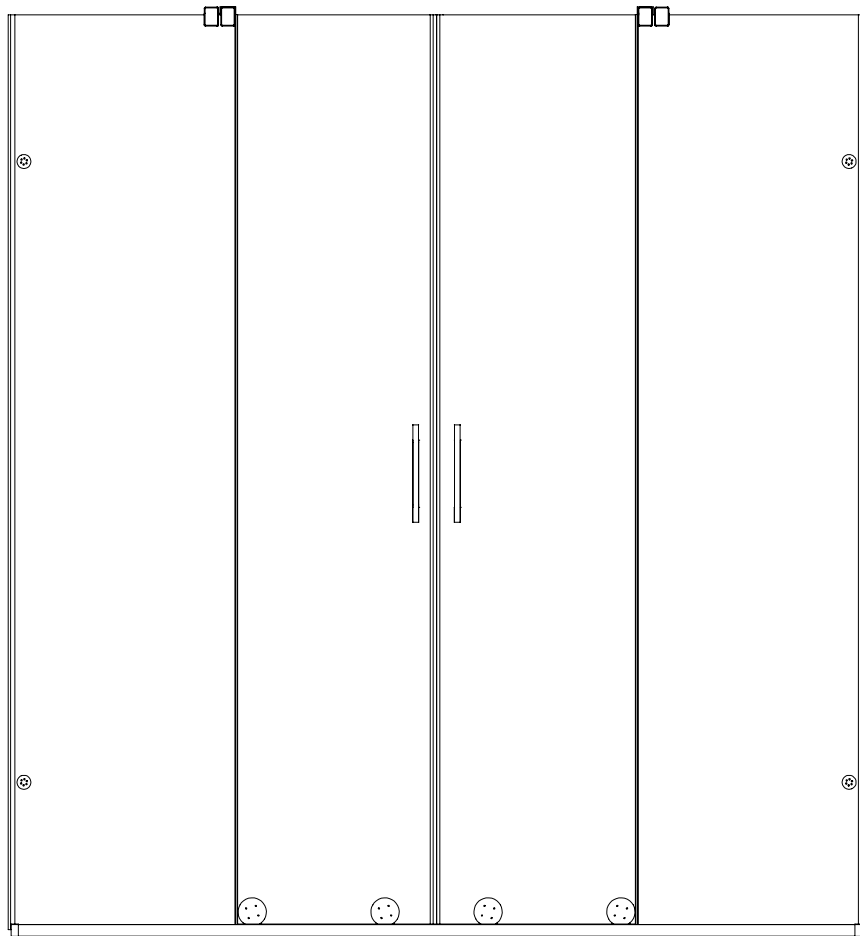


// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


M-01
x2

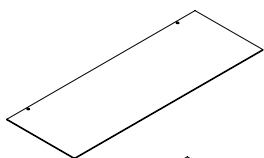


M-11
x4




M-21
x4




M-02
x2

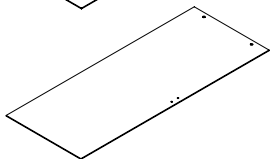


M-12
x4



M-22
x4




M-03
x1

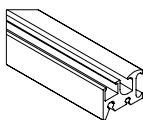


M-13
x2




M-04
x1




M-14
x2




M-05
x2

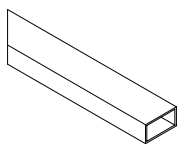


M-15
x1




M-06
x2




M-16
x2




M-07
x2




M-17
x2

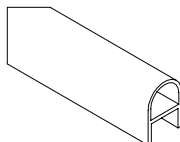


M-08
x2




M-18
x4

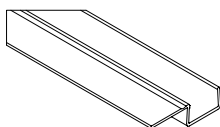


M-09
x4

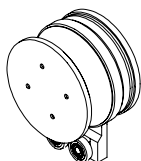



M-19
x1

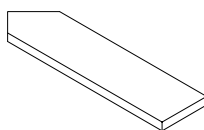


M-10
x4





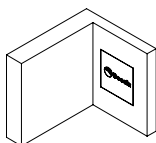


M-20
x8







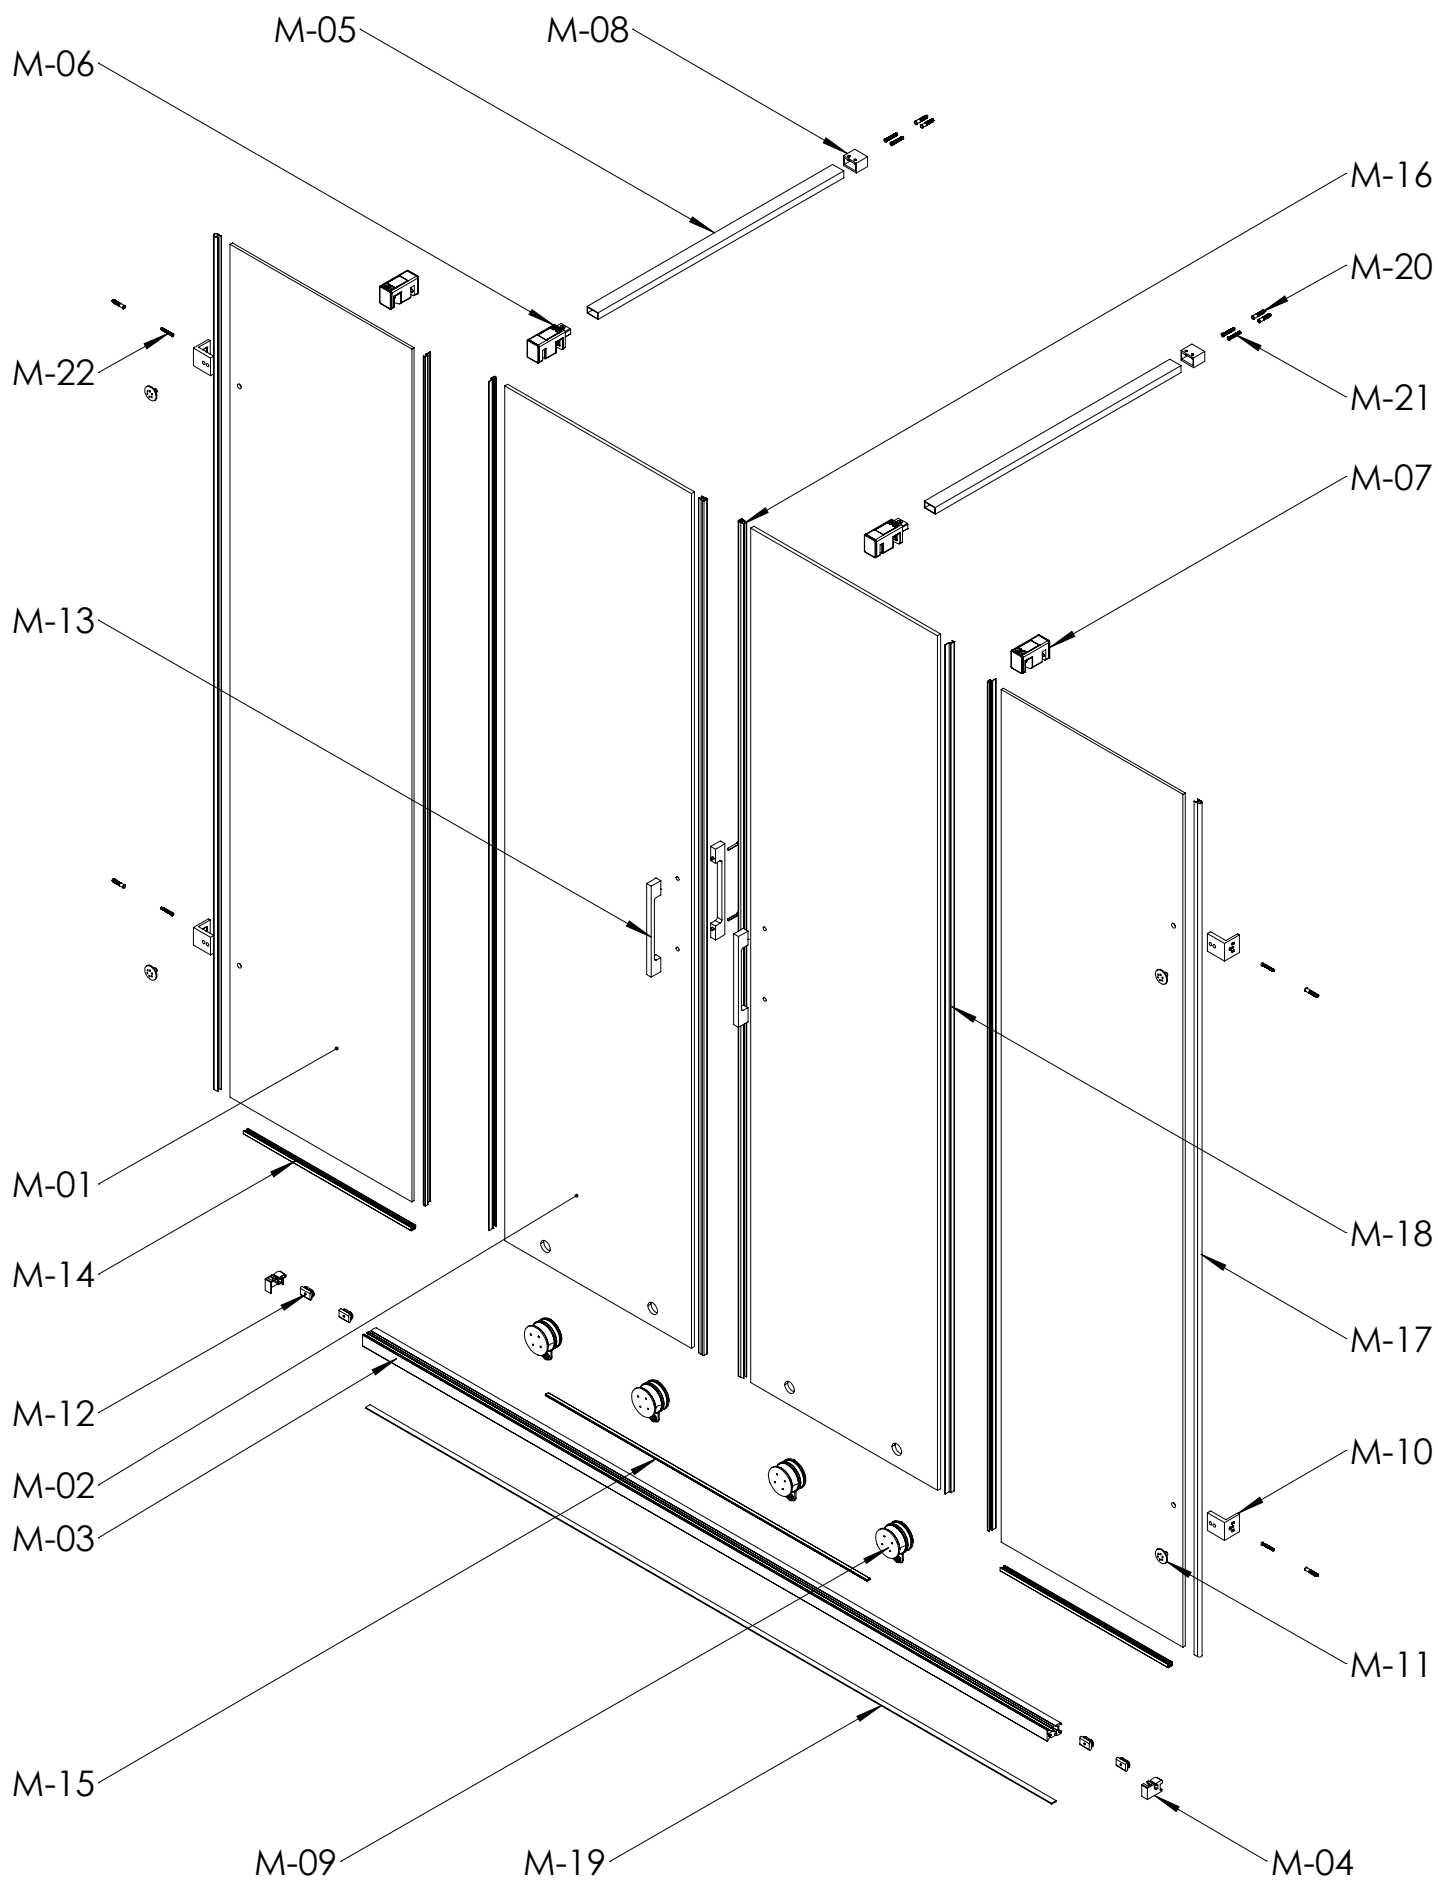

1

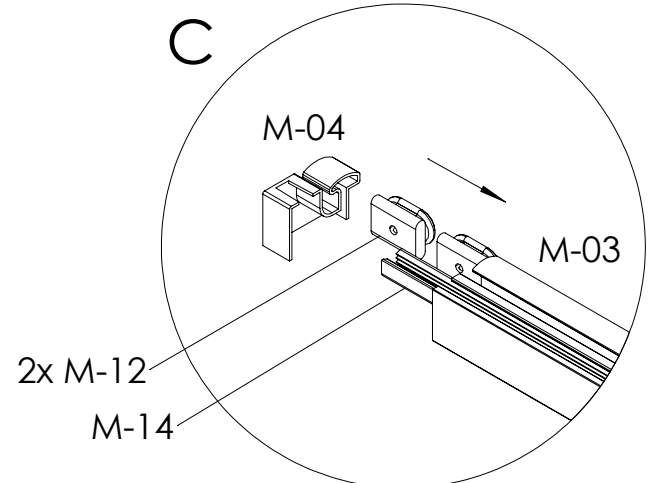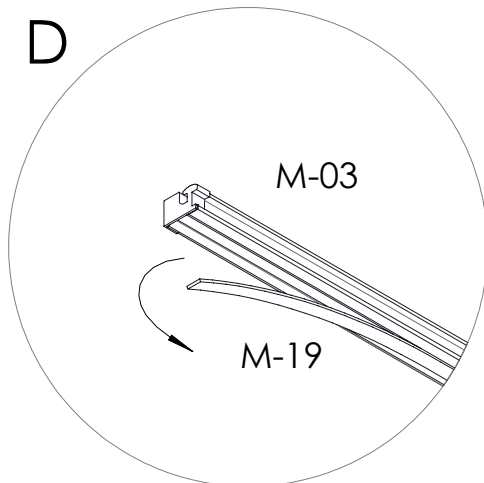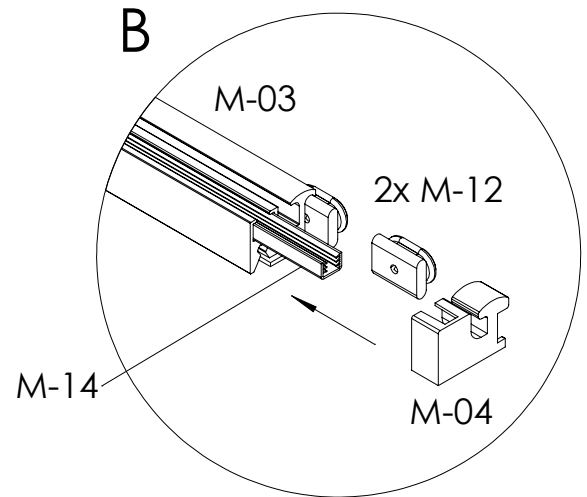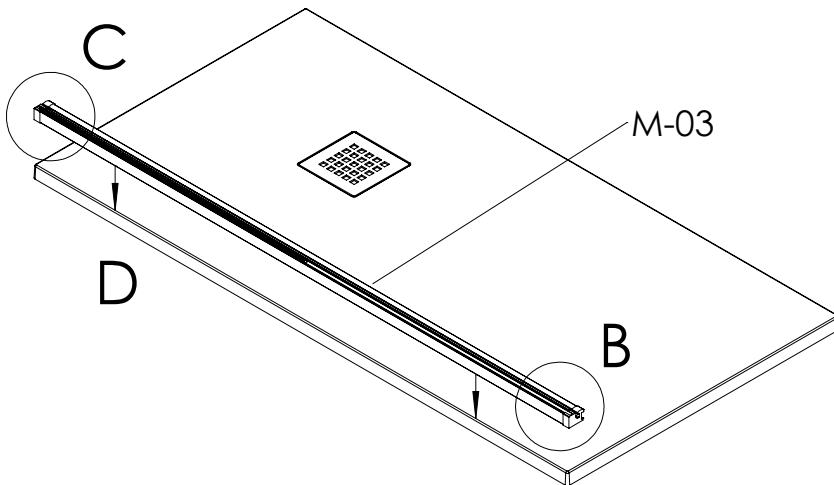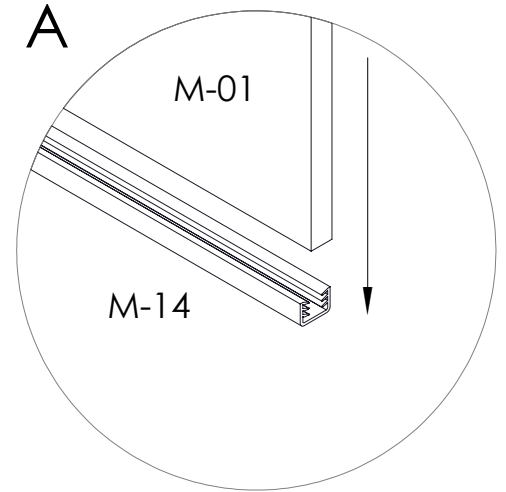


2

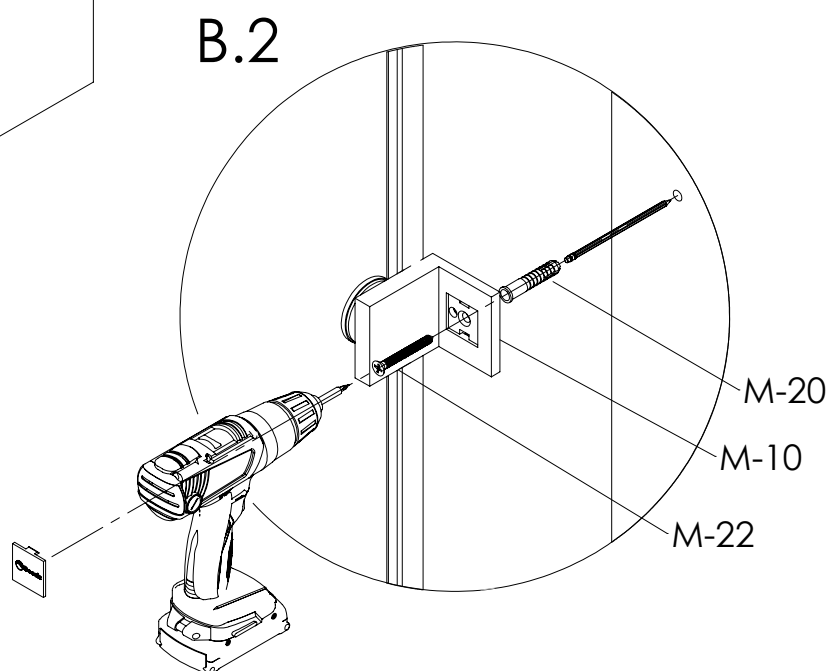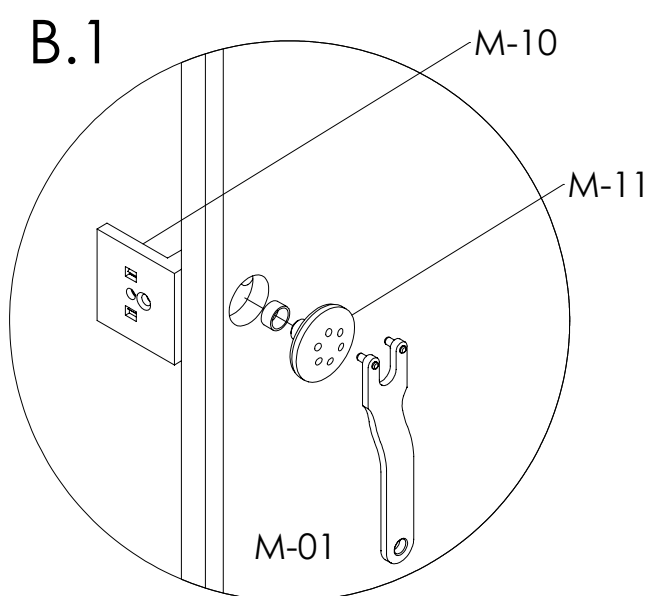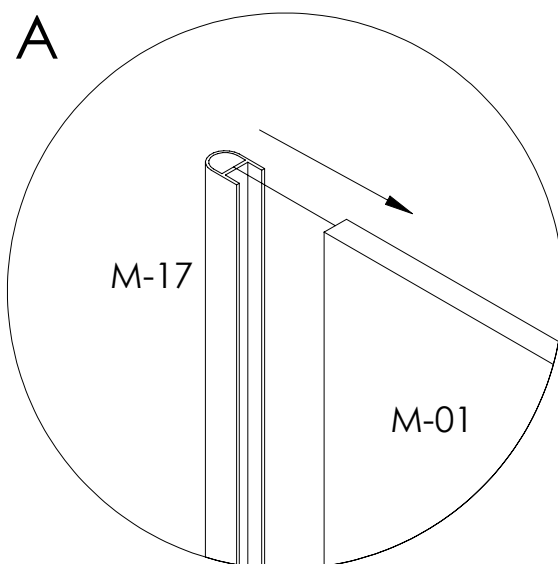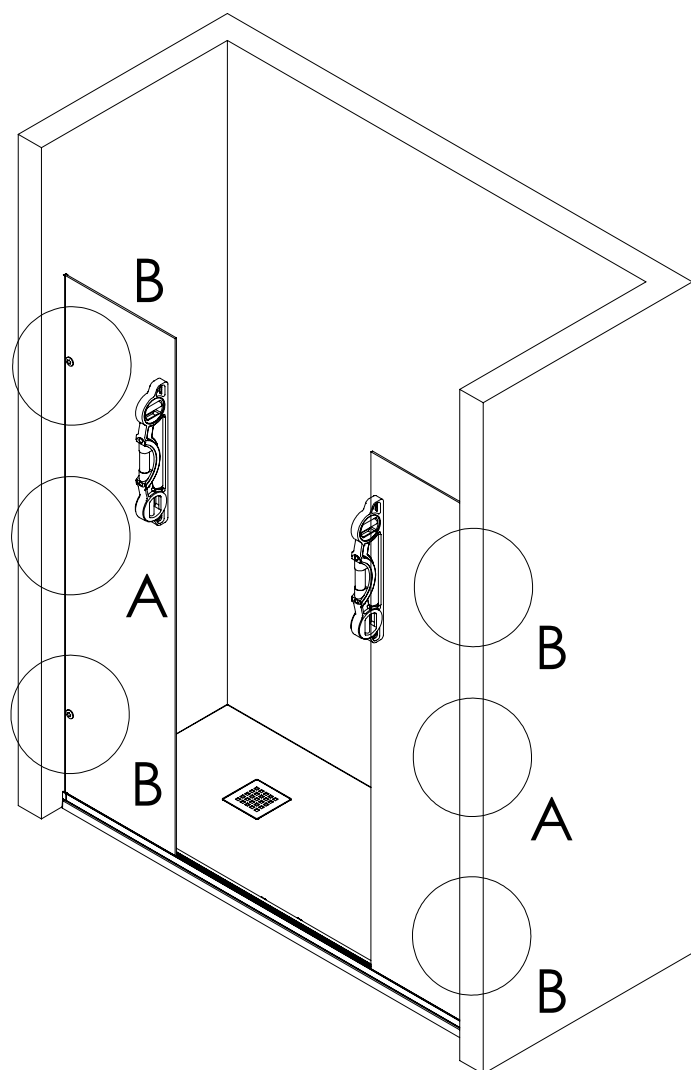


3


A.1

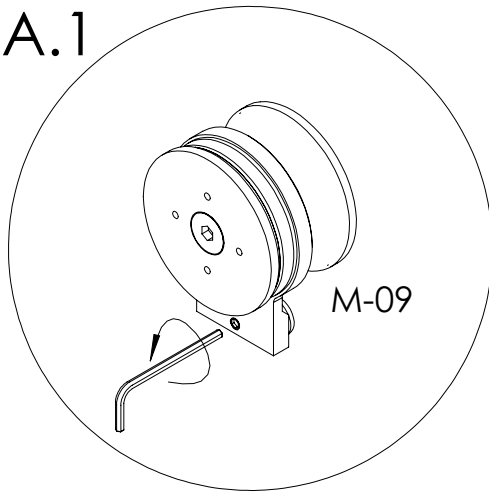


A.2

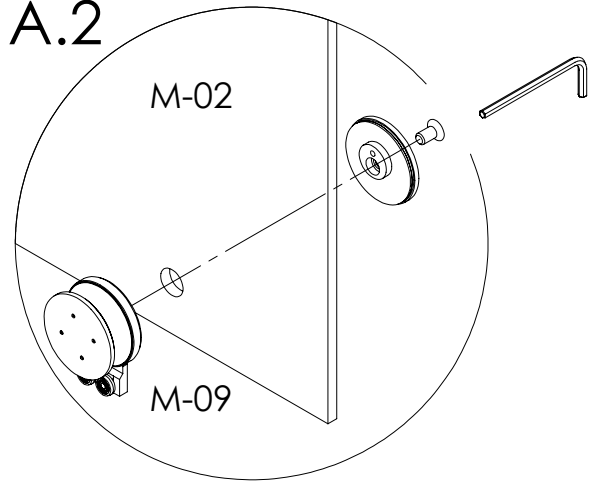



A.3

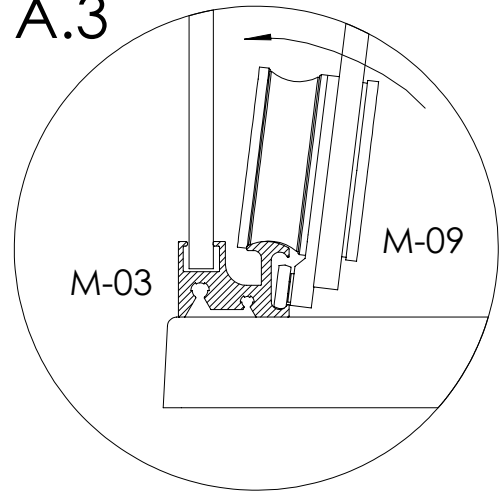

A.4

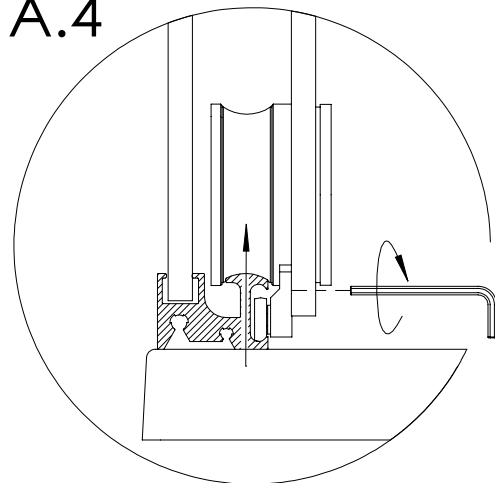


B

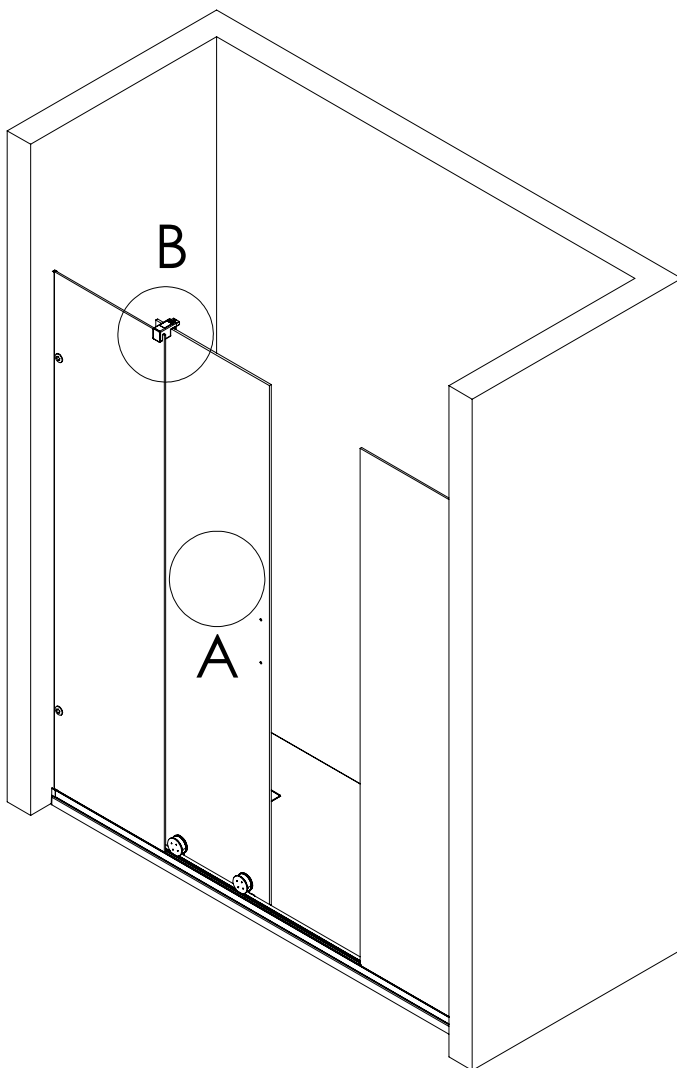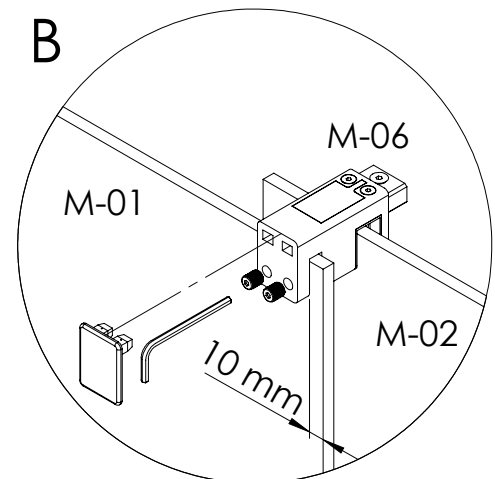


4


A.1

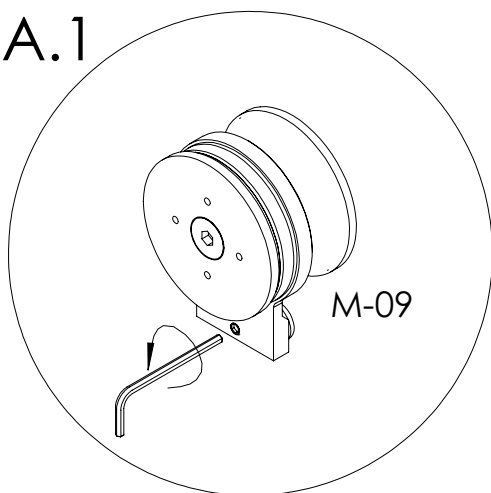


A.2

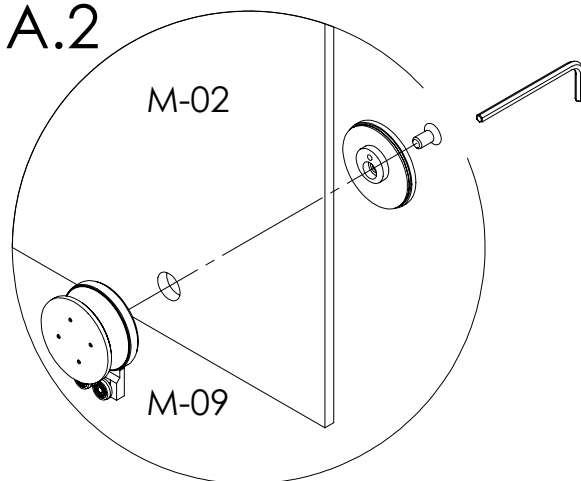



A.3

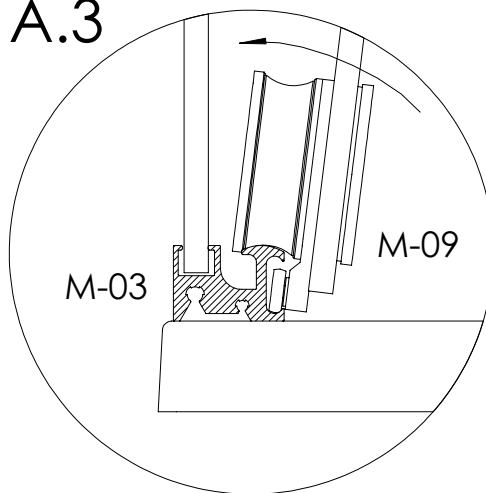

A.4

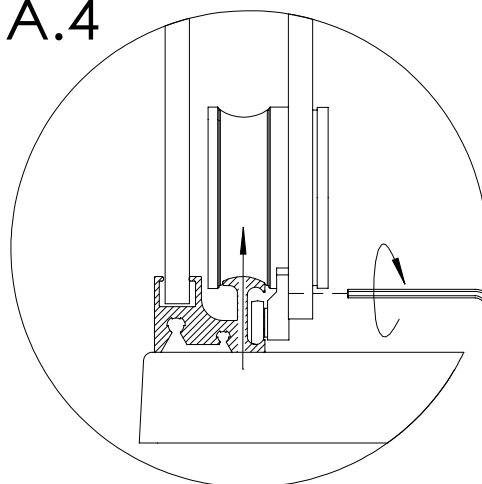


B

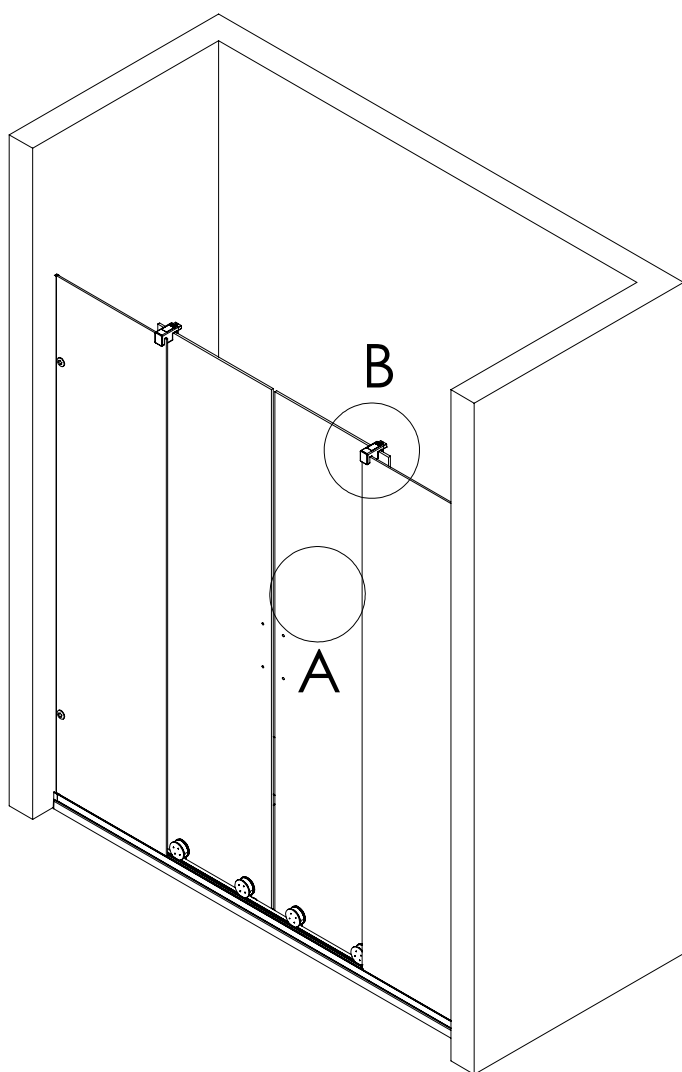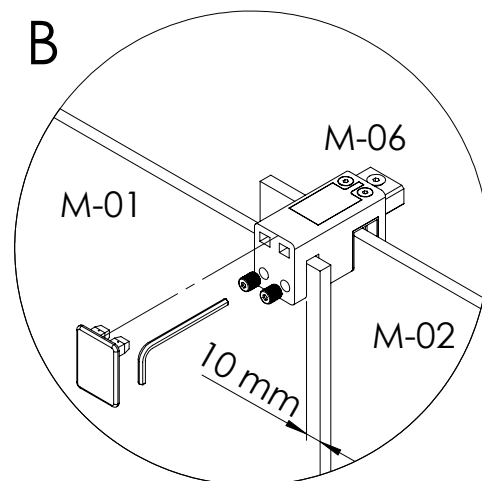


5


A.1

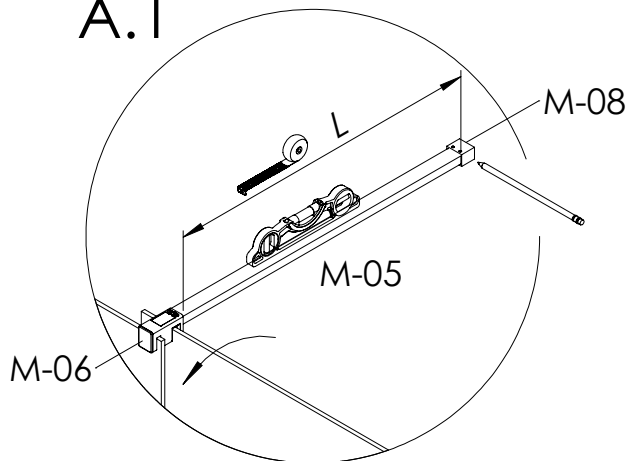


A.2

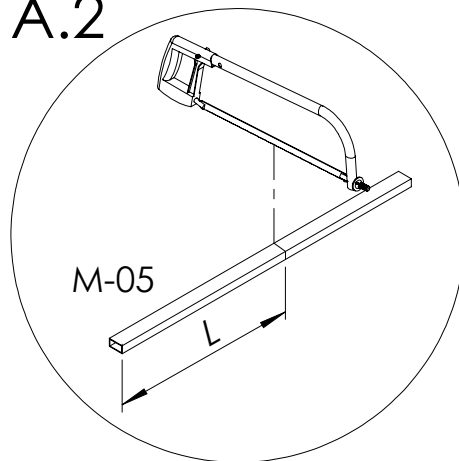



A.3

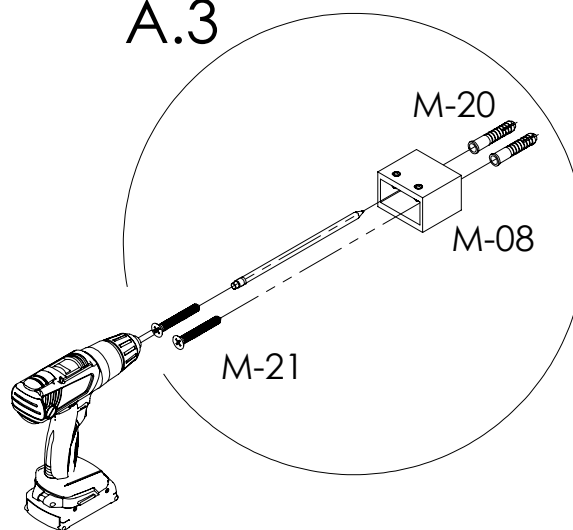





A.4

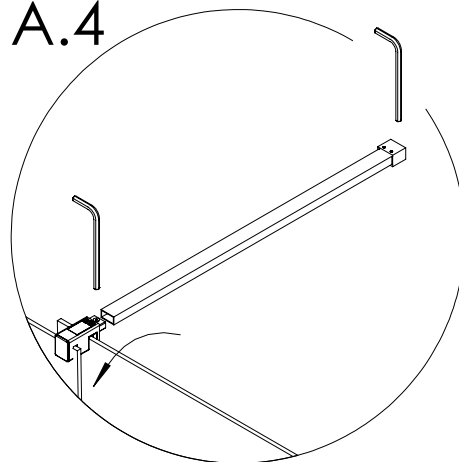





B

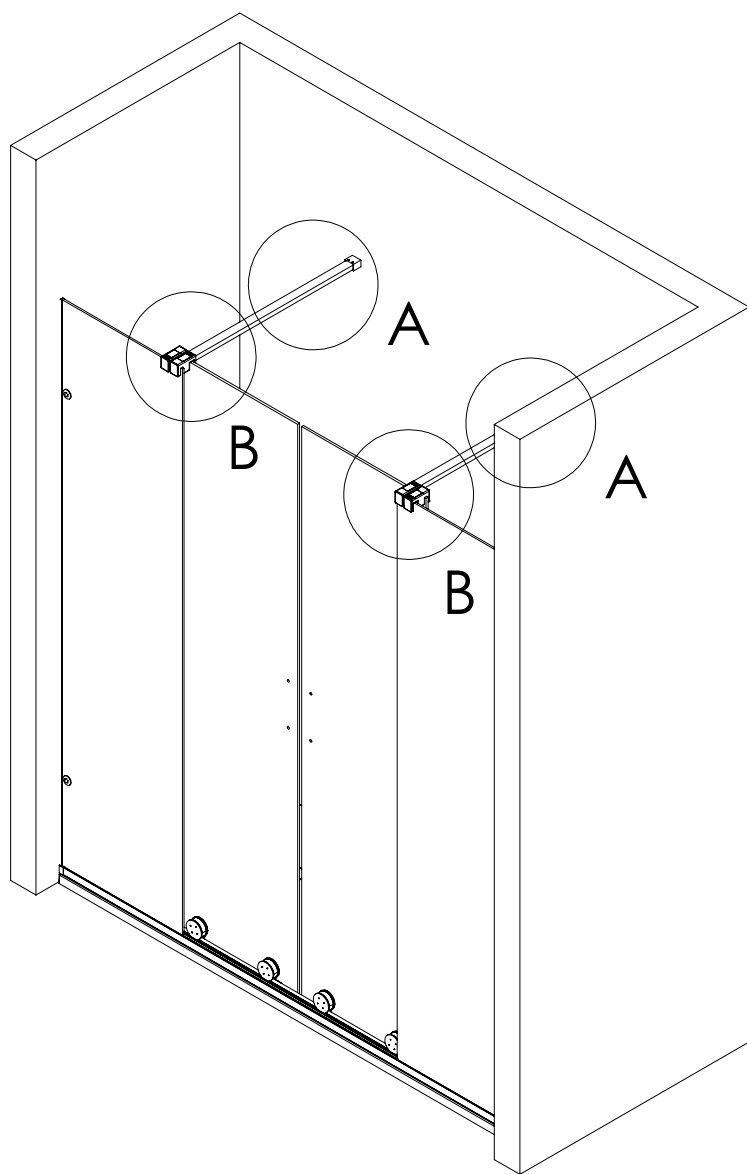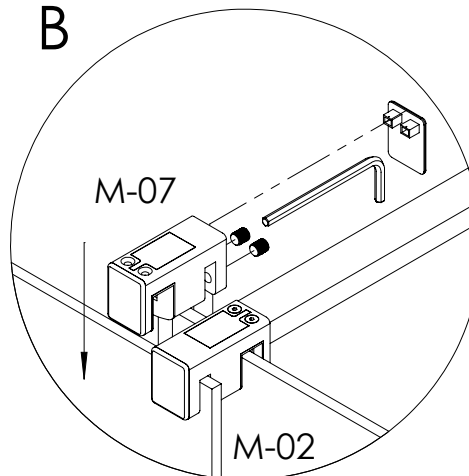


6

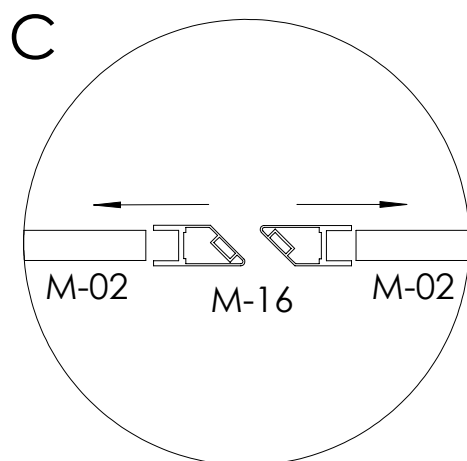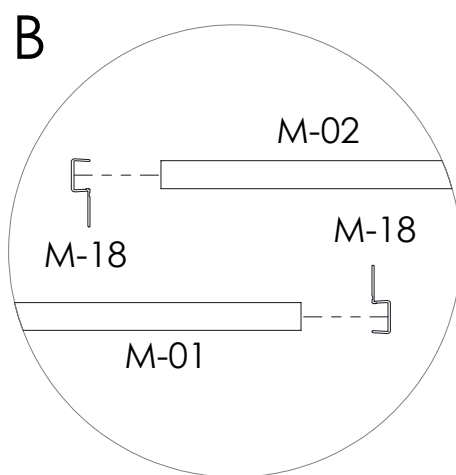
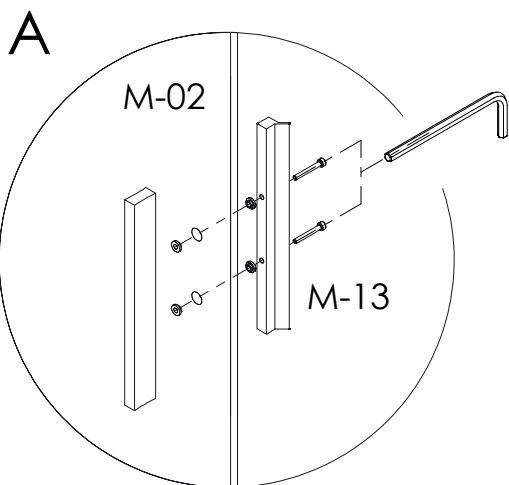
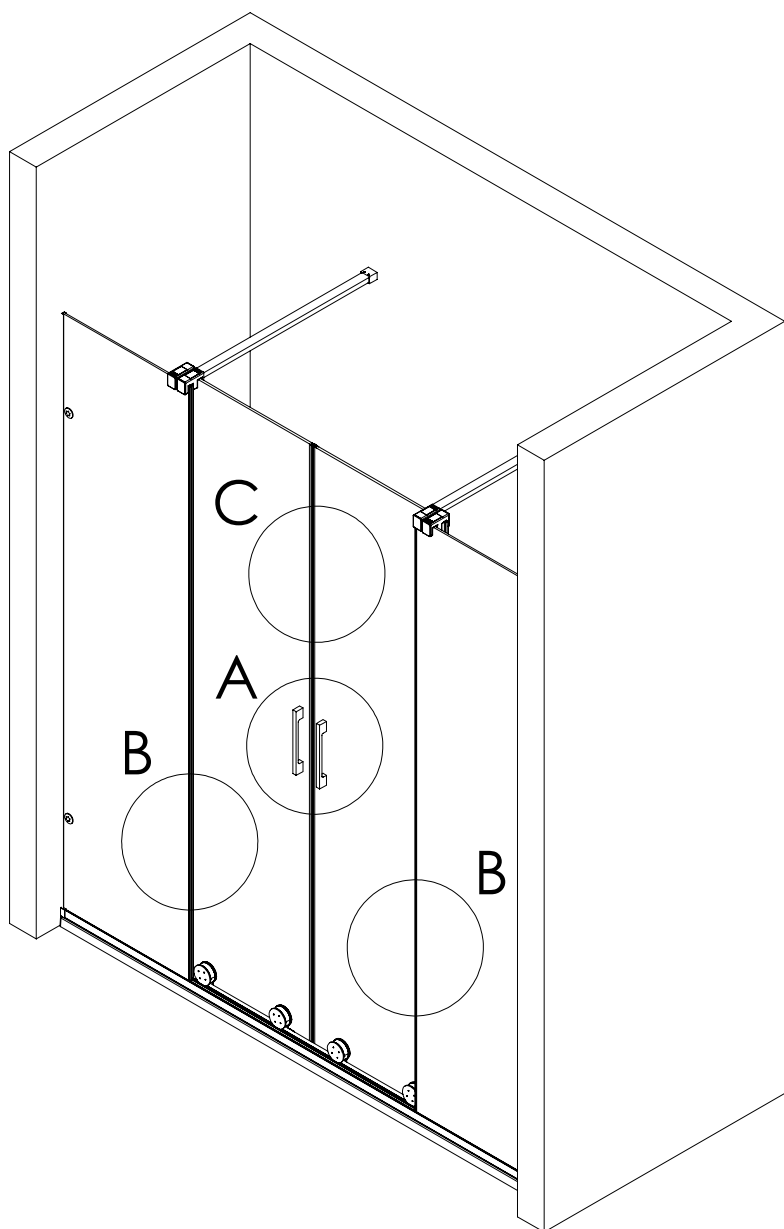


7

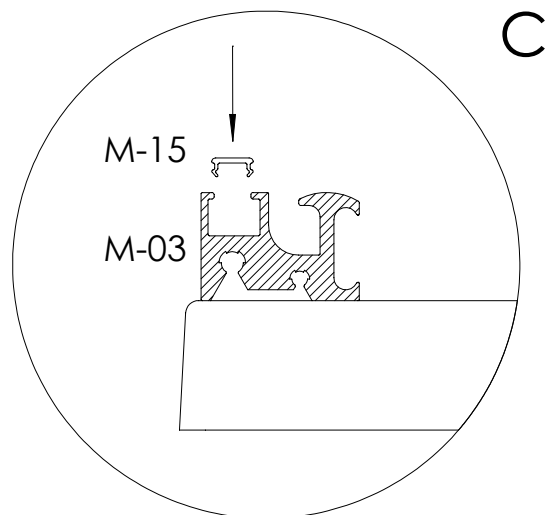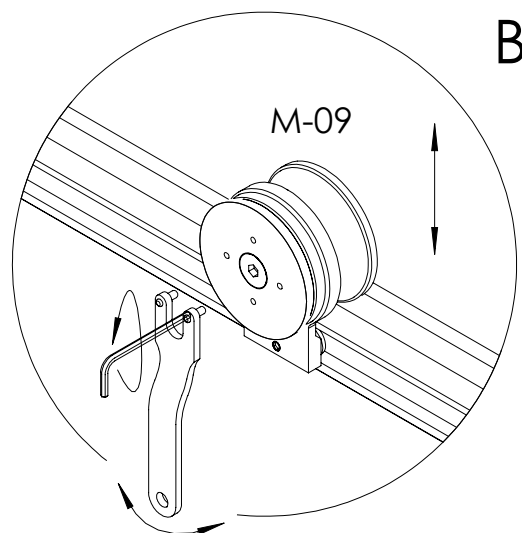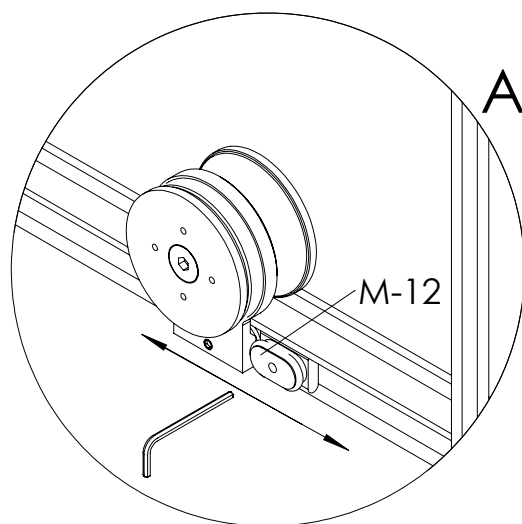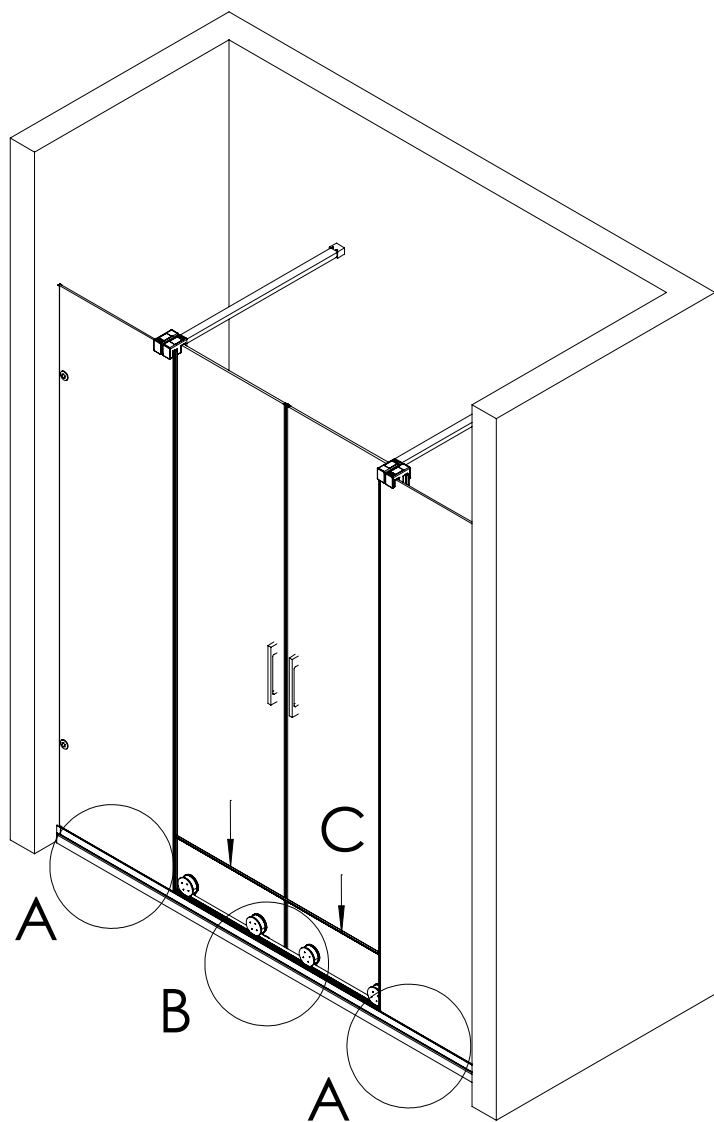

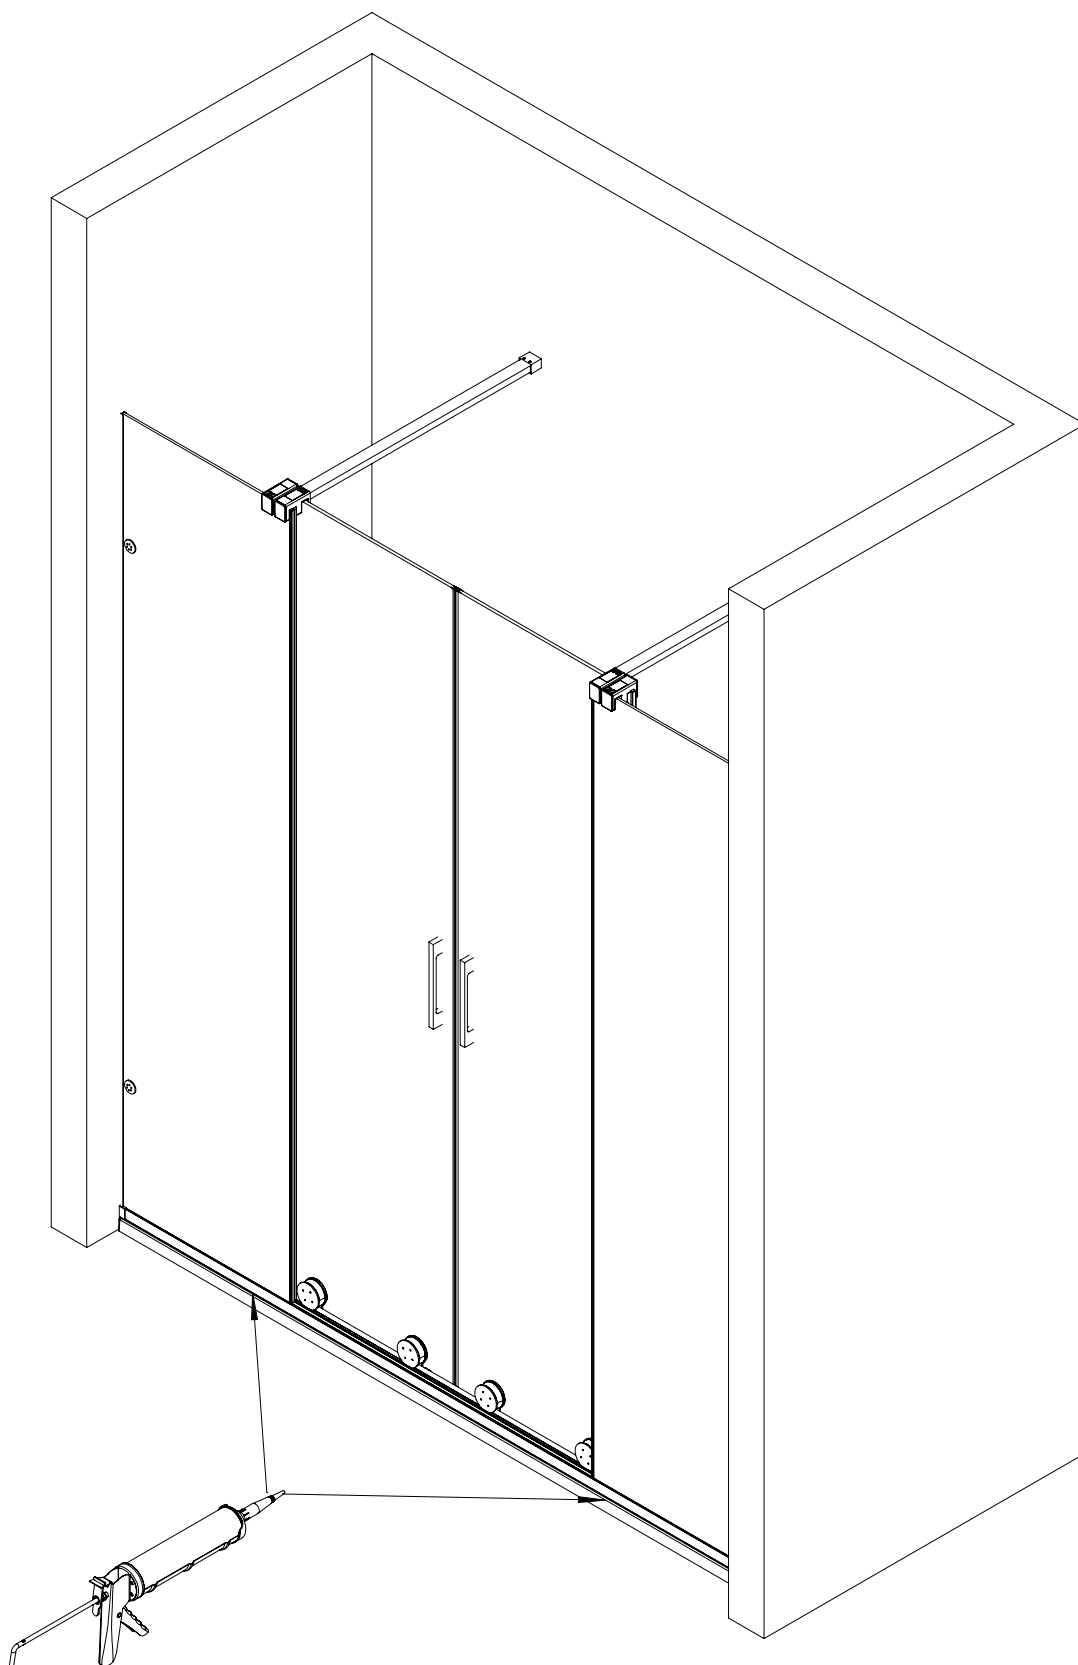

X



✓

