

Fitting Instructions

110mm Outlet EF "1 Bolt" Branch Saddles



1 Scrape and clean pipe surface.



2 Fit clamp system around pipe.




3 Once in position tighten firmly **by hand** with a 6mm hex allen key.




4 Connect EF box to fitting and fuse.



5 Once x3 cooling time has elapsed, test via central test nipple.

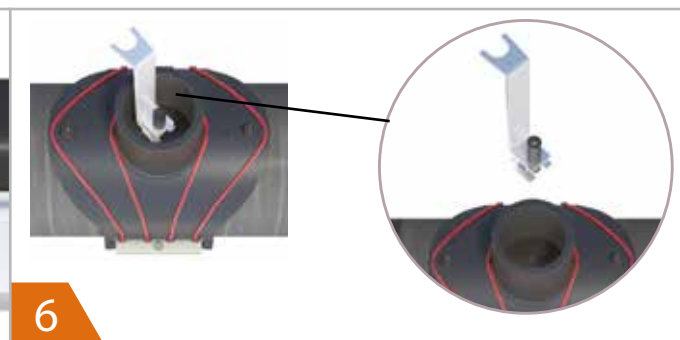

6 Remove test nipple with Plasson tool 1273A.

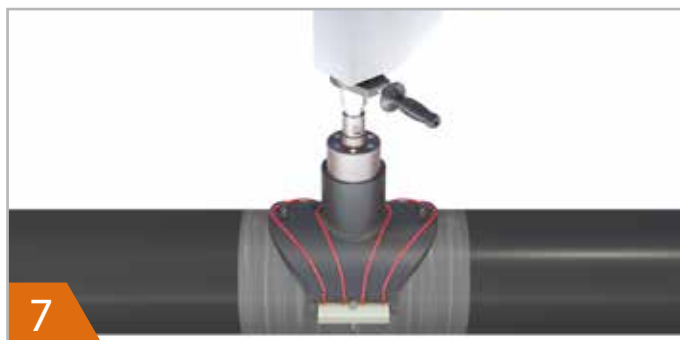

7 Drill through main.