


We don't tell you exactly how to install it, only because we don't know your vehicle as well as you do.

The long vertical board should be pushed between the backs of the captain seats and secured with the elastic cords to the headrests and folded armrest handles. The horizontal plate is then placed over the gap. Use the elastic cords to secure the structure wherever it holds best. For example, forcing the plastic ball into tight upholstery slits often works well, especially at the junction of the seat back and seating section if accessible. You can also shorten the cords if needed. Please avoid using electric cables located under the captain seats as anchor points!

The 8x8 inch velcro flap is best positioned behind the vertical board and under the horizontal plate to lock both boards together.

Once the DogShell® cover is placed on top, the entire setup becomes stable with little to no movement.

Here is a picture for more information:

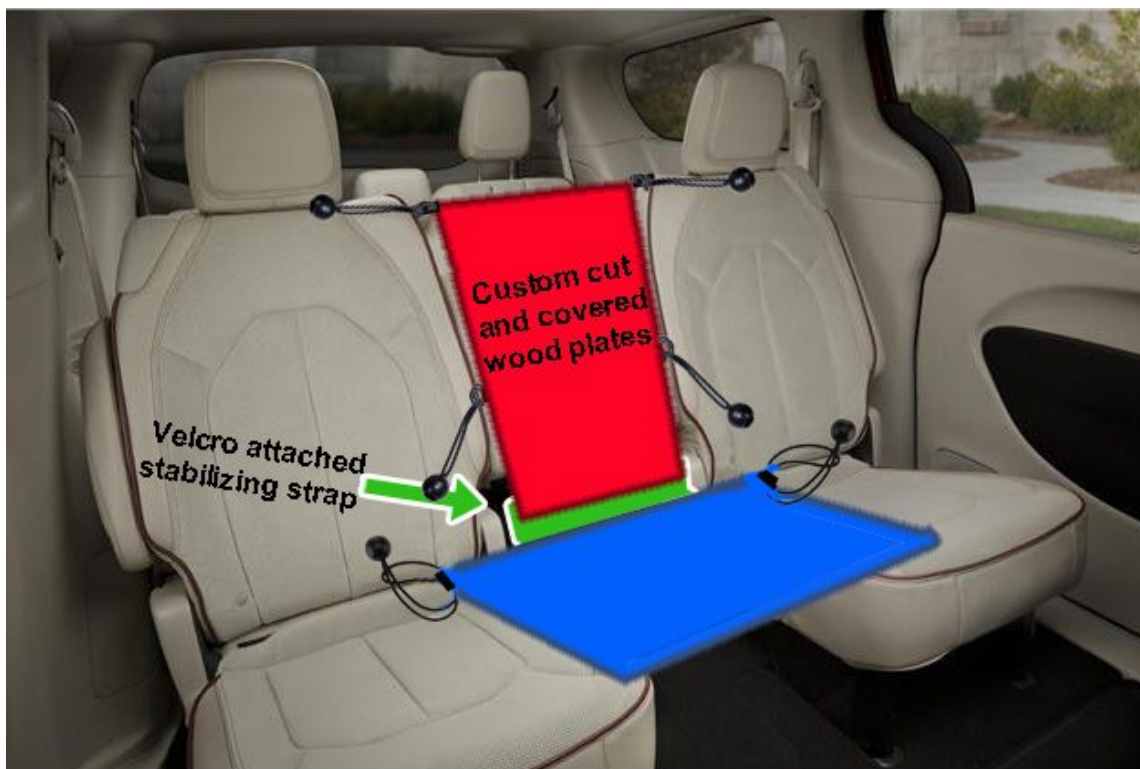

DogShell®



Proudly Handmade in USA