



# INSTALLATION INSTRUCTIONS

## CUSTOMER SERVICE

Phone: 818-365-9000 • MON - FRI 8:30 am - 6:00 pm EST


Email: [SUPPORT@BAKINDUSTRIES.COM](mailto:SUPPORT@BAKINDUSTRIES.COM)




# IMPORTANT: READ FIRST




- 1 Install the large D shaped seal to the top of the bulkhead at the edge of the bed opening.

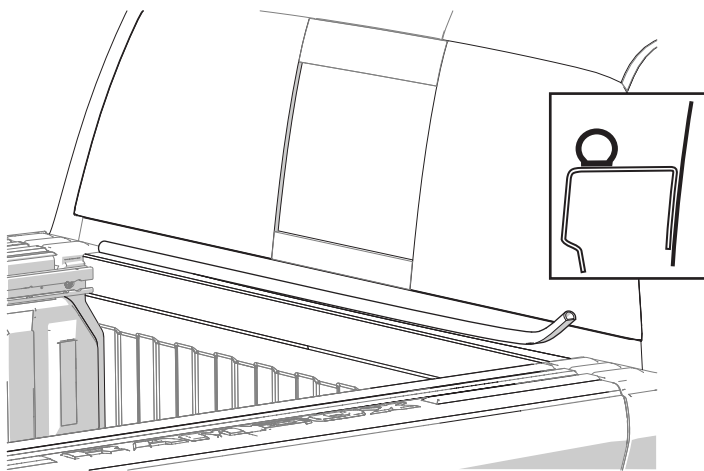


- 2 Remove the factory accessory rail end cap, and any accessory cleats.

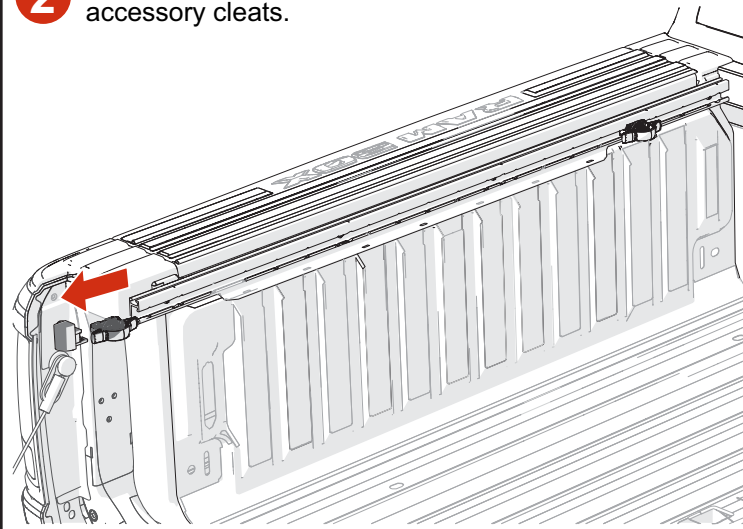

- 3 Guide the bed cover rail into the upper half of the factory accessory rail.

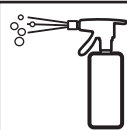

**NOTE:** Use a soap and water mix to help with sliding the rail and the rail seal all the way along the factory rail slot to the front of the bed.

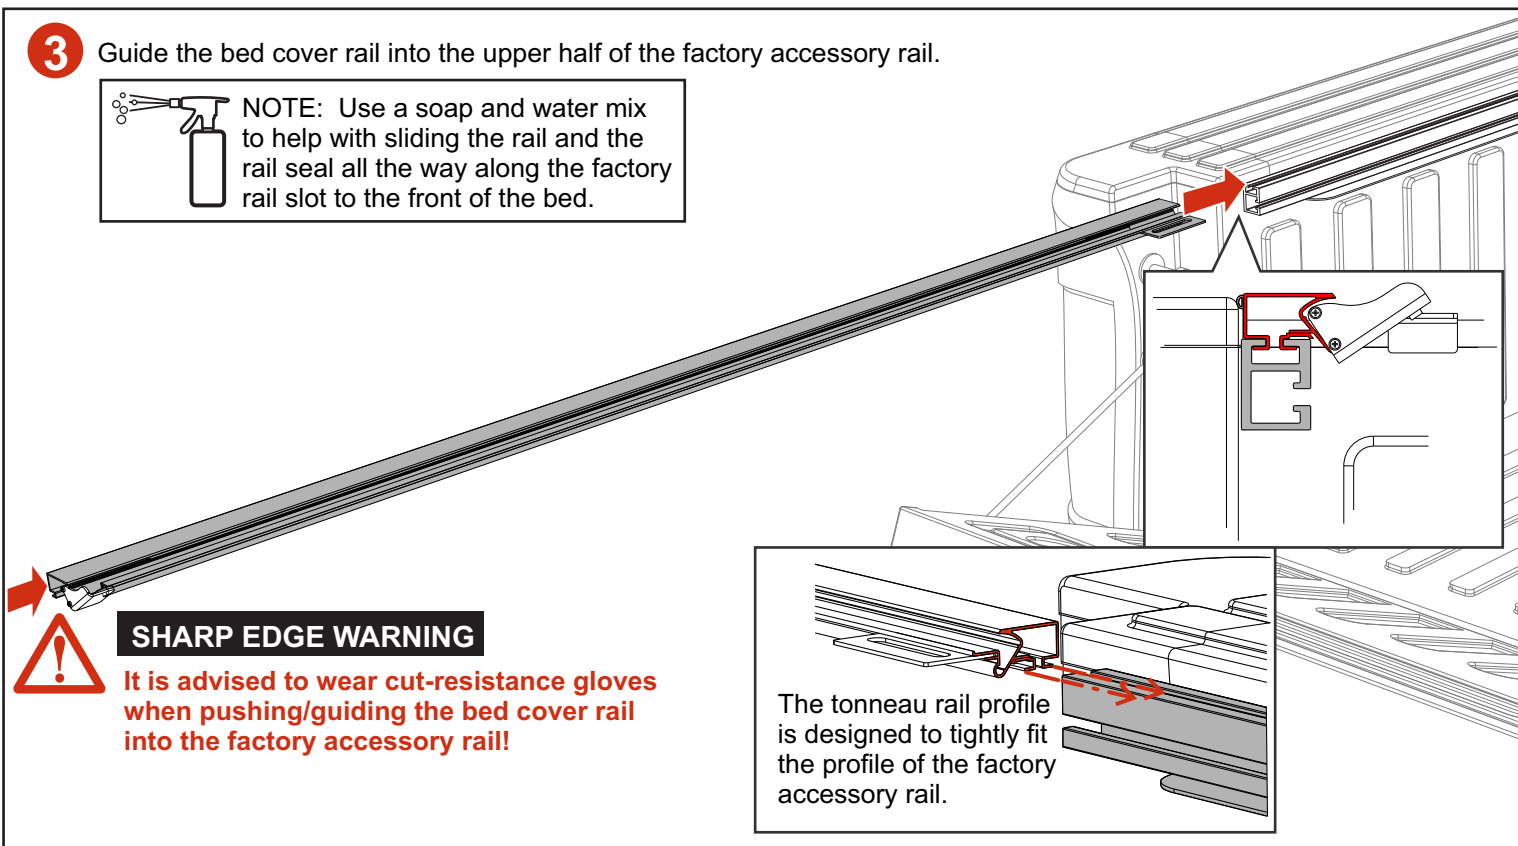

### SHARP EDGE WARNING

It is advised to wear cut-resistance gloves when pushing/guiding the bed cover rail into the factory accessory rail!

The tonneau rail profile is designed to tightly fit the profile of the factory accessory rail.

Steps 2 through 6 are required and repeated on both sides.




# IMPORTANT: READ FIRST




- 4** Make sure the bed cover rail is all the way forward, so that the slotted bracket is touching the bulkhead.

NOTE: While sliding the cover rail forward, the installed bulkhead seal will need to be pinched down to allow for the rail to slide over top of the seal.


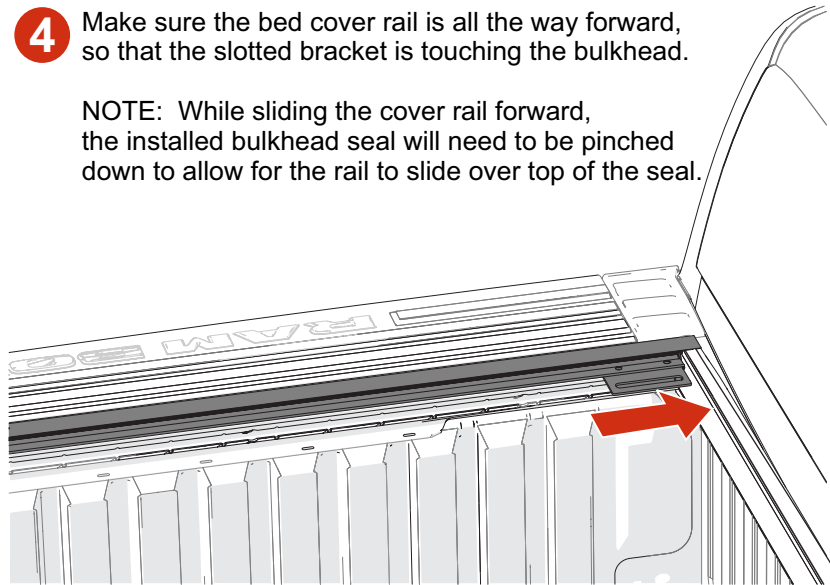


#### PINCH POINT WARNING


When sliding the rail forward and pinching the seal down, there is a chance to catch and pinch a finger!

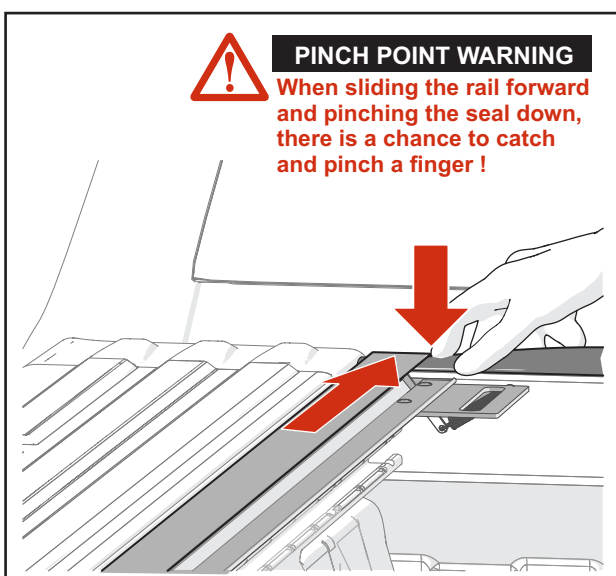


- 5** Insert the block of the retainer strap assembly into the factory cargo rail. Slide the strap forward.

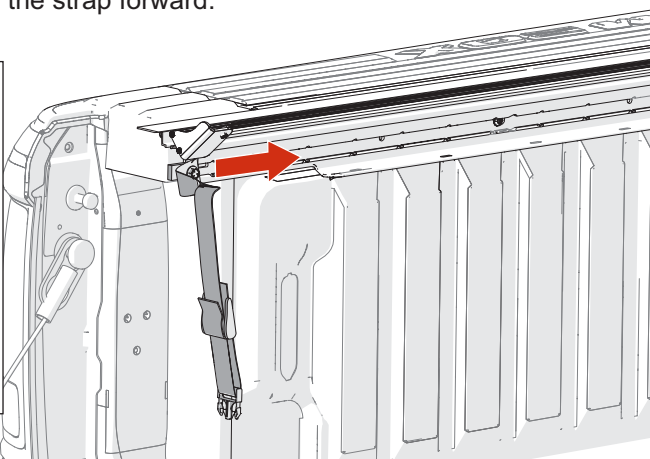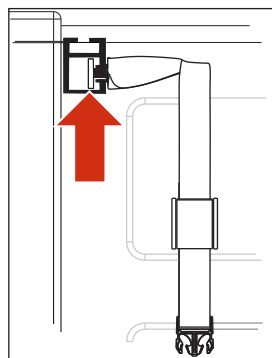


The straps will be positioned and tightened during the cover assembly install.

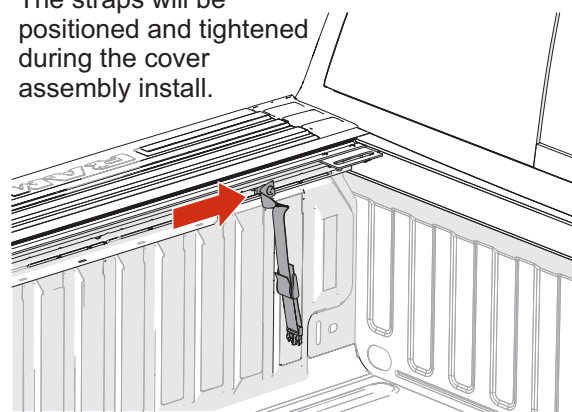

- 6** Adhere the small D shaped seal to the top, inside edge of the Ram Box rail.

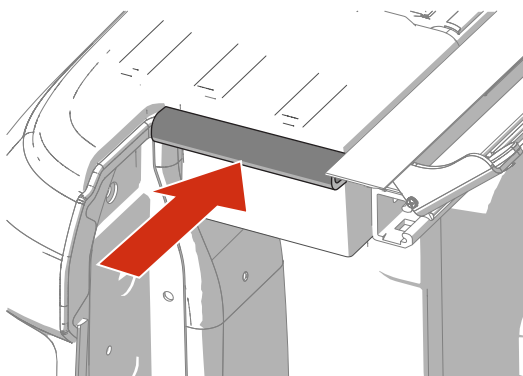

- 7** Replace the cargo rail cleats.

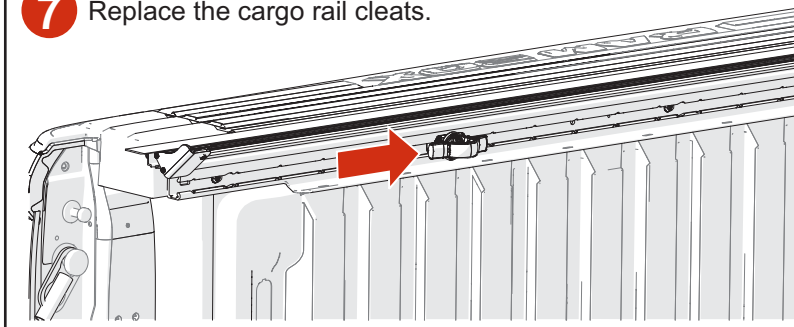

Return to Step 8 of the standard install sheet