


NEAT- SMART MOUNT

VW TRANSPORTER 2025+
84014-1


INCLUDED IN THE KIT

- 2x Grille mounting brackets
- 2x Cutter guide
- 4x M6x55mm Stainless bolt
- 4x M6x16mm Stainless bolt
- 4x M6 Stainless washer
- 4x M6 Stainless nut
- 1x Fitting instructions.

TOOLS REQUIRED

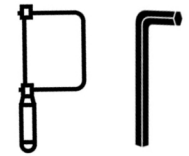

INSTALLATION PROCESS

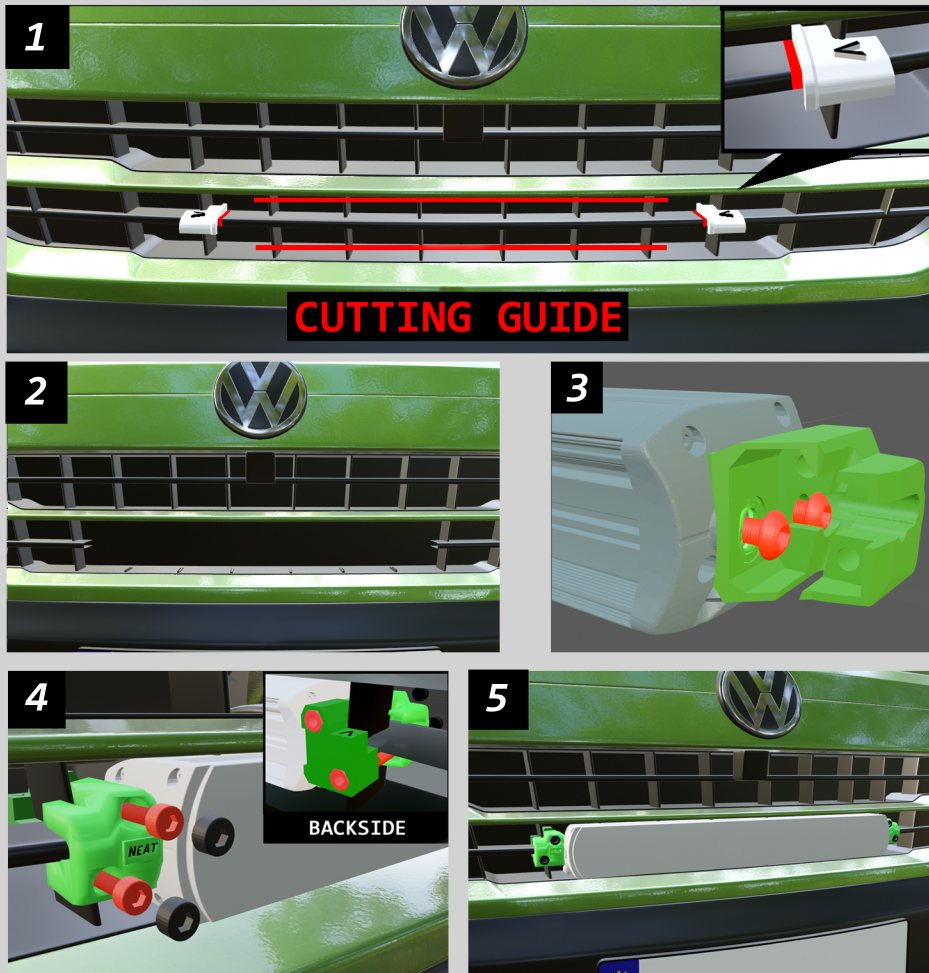

SE

- 1 Använd bifogad mall för att märka ut var den horisontella ribban i grillen skall kapas.
- 2 Utskärning.
- 3 Montera framsidan av SMART MOUNT fästena på rampen med bifogade skruvar (M6x16).
- 4 Montera rampen och använd baksidan av SMART MOUNT och de bifogade skruvarna (M6x55mm) för att klämma åt runt ribban. Skruva åt med handverktyg, Ej med skruvdragare. Montera bifogade täcklock för skruvarna.
- 5 SMART MOUNT är nu monterat.

EN

- 1 Use the attached template to mark where the horizontal lath in the grill will be cut.
- 2 Cut out.
- 3 Mount the front of the SMART MOUNT brackets on the lightbar with the attached screws (M6x16).
- 4 Mount the lightbar using the back of the SMART MOUNT and the attached screws (M6x55mm) to clamp around the bar. Tighten with hand tools, not with powertools. Install the attached cover caps for the screws.
- 5 SMART MOUNT is now mounted.