

NEAT- QUICK MOUNT

FORD TRANSIT CUSTOM 2024-
83520-1


INCLUDED IN THE KIT

- 2x Grille mounting brackets
- 2x Cutter guide
- 2x Screws
- 2x M8x10mm Stainless bolt
- 1x Fitting instructions.

TOOLS REQUIRED



INSTALLATION PROCESS

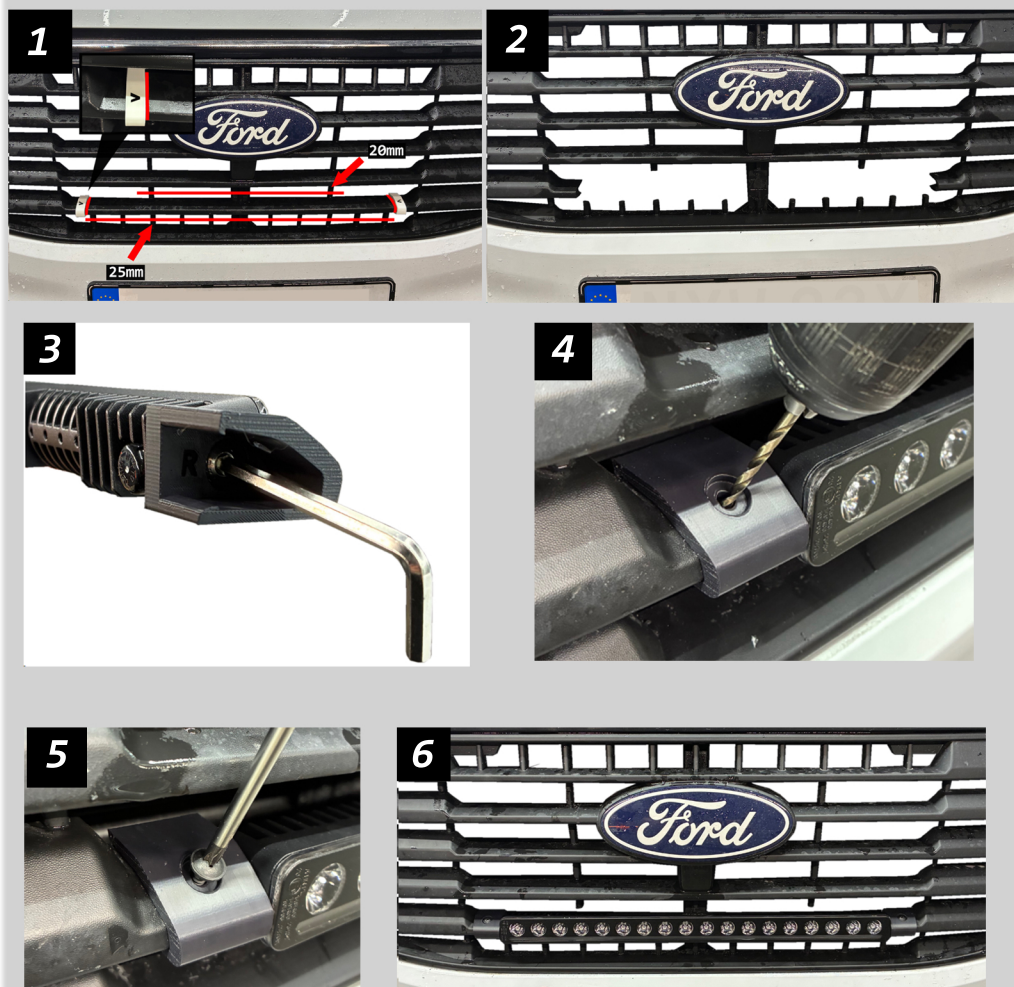

SE

- 1 Använd bifogad mall för att märka ut var den horisontella ribban i grillen skall kapas.
Kapa den horisontella ribban och lämna 20mm uppåt och 25mm nedåt på de vertikala ribborna.
- 2 Utskärning.
- 3 Montera QUICK MOUNT-fästena på rampen med bifogade skruvar (M8x10mm). Använd gänglåsning (Loctite 222).
- 4 Montera rampen i grillen och säkerställ att den klickar fast. Borra hål för låsskruvarna (3,5mm).
- 5 Skruva i låsskruvarna för hand, Ej med skruvdragare.
- 6 QUICK MOUNT är nu monterat.

EN

- 1 Use the attached template to mark where the horizontal lath in the grill should be cut.
Cut the horizontal lath, leaving 20mm above and 25mm below on the vertical laths.
- 2 Cut out.
- 3 Mount the front of the QUICK MOUNT brackets on the lightbar using the supplied screws (M8x10mm).
Use thread locker (Loctite 222)
- 4 Install the lightbar into the grille and ensure it clicks into place.
Drill holes for the locking screws (3,5mm)
- 5 Tighten the locking screws by hand, Not with an electric screwdriver.
- 6 QUICK MOUNT is now mounted.