

NEAT- SMART MOUNT

FORD TRANSIT 2019-
84116-1



INCLUDED IN THE KIT

- 2x Grille mounting brackets
- 2x Cutter guide
- 4x M6x55mm Stainless bolt
- 4x M6x16mm Stainless bolt
- 4x M6 Stainless washer
- 4x M6 Stainless nut
- 1x Fitting instructions.

TOOLS REQUIRED



INSTALLATION PROCESS

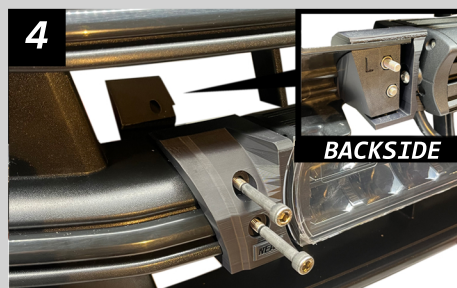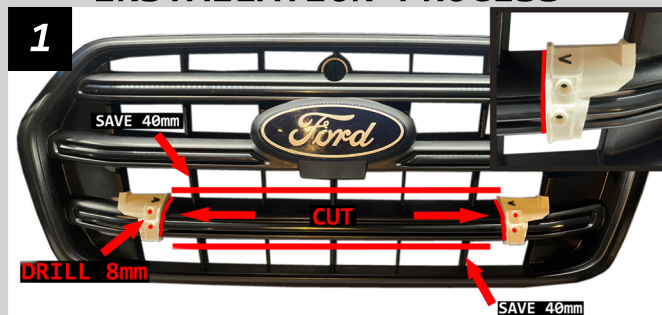

SE

- 1 Använd bifogad mall för att märka ut var den horisontella ribban i grillen ska kapas. Använd mallen för att borra hål för skruvarna (8mm). Kapa den horisontella ribban och lämna 40mm uppåt och 40mm nedåt på de vertikala ribborna.
- 2 Utskärning
- 3 Montera framsidan av SMART MOUNT-fästena på rampen med bifogade skruvar (M6x16).
- 4 Montera rampen och använd baksidan av SMART MOUNT och de bifogade skruvarna (M6x55mm) för att klämma fast genom ribban. Skruva åt med handverktyg, Ej med skruvdragare. Montera bifogade täcklock för skruvarna.
- 5 SMART MOUNT är nu monterat.

EN

- 1 Use the attached template to mark where the horizontal bar in the lath should be cut. Use the template to drill holes for the screws (8mm). Cut the horizontal bar and leave 40mm above and 40mm below on the vertical laths.
- 2 Cut out.
- 3 Mount the front of the SMART MOUNT brackets on the lightbar with the attached screws (M6x16).
- 4 Mount the lightbar using the back of the SMART MOUNT and the attached screws (M6x55mm) to clamp it around the bar. Tighten with hand tools, not with power tools. Install the attached cover caps for the screws.
- 5 SMART MOUNT is now mounted.