




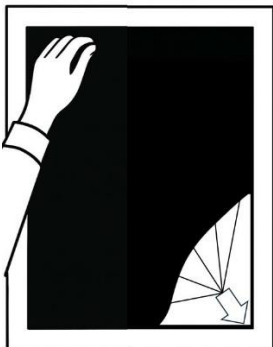


INSTALLATION INSTRUCTIONS WINDOW FILM

	<p>Hi, I'm Sunny. Follow my instructions and tips carefully for a smooth and successful installation of your window films.</p> <ol style="list-style-type: none"> 1. Fully rested and without time pressure is my very best tip when installing window film. 2. Windless and an outdoor temperature between 10–25 degrees is recommended when installing window film. 3. Install window film in shade, NOT in direct sunshine. 4. Always check that the film fits the box BEFORE you start.
<p>1. Clean glass</p> 	<p>Clean the glass thoroughly.</p> <ol style="list-style-type: none"> 1. Wash the glass with a soft sponge, water and a little dish soap. Drain the liquid with a window scraper. 2. Clean the glass with a suitable glass cleaner. 3. Spray on glass cleaner again and use a window scraper to remove stubborn dirt. 4. Clean the glass with glass cleaner one last time and pay extra attention to the edges of the glass so that it is completely clean. 5. Wipe the glass CAREFULLY along the edges with a lint-free cloth so that no liquid remains, especially at the top edge of the pane.
<p>2. Mix liquid</p> 	<p>Mixing application fluid</p> <ol style="list-style-type: none"> 1. It is a good idea to use distilled water such as battery water to avoid drying spots if the tap water is hard and calcareous. 2. Preferably use real conc. application agent instead of e.g. dishwashing detergent to avoid the "rainbow effect" that can occur when installing with detergents containing oil additives. 3. Drop 2-3 drops of concentrated detergent/dish soap into a 0.5l spray bottle. DON'T OVERDOSE! Fill up with lukewarm water and shake the bottle.
<p>3. Open the film</p> 	<p>Open the film from the protective film (liner)</p> <ol style="list-style-type: none"> 1. Check one last time that the glass is really clean before you start installing the window film. 2. Spray the glass liberally with application liquid, especially on the top of the glass where the film will initially be attached. 3. Attach two pieces of tape to the top corners of the film, one on the top and one on the bottom, and carefully pull apart the film and liner. 4. Pull down the liner approx. 10-15 cm from the top edge of the film and spray liberally on the film and liner.
<p>4. Fit in the film</p> 	<p>Fit the film to the window</p> <ol style="list-style-type: none"> 1. Place the exposed part of the film with the adhesive side against the box and align it carefully, 2 mm from the top edge/rubber strip and 2 mm from the right and left sides. 2. When the top part of the film is in place, press perfectly with your fingers. along the top of the film so that it adheres to the glass 3. Carefully check that the film is correctly aligned with the edges of the window/rubber strip.


5. Remove the liner



Remove the protective film

1. In this step, it is good to be two people, one lifting and one spraying, to avoid stress and to get dirt between the window and the window film.
2. Lift the loose part of the film and spray the glass once more with application liquid.
3. Press your hand against the film at the top of the window to secure so that the film does not move when you are about to pull off the protective film.
4. Lift the film at the bottom and start pulling down the protective film.
5. Spray the window film **ABUNDANTLY** and **COMPREHENSIVELY** before applying the film to the glass pane.


6. Attach the film

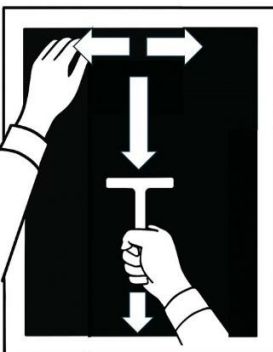

Pin the position of the film

1. The first scraping of the film should be done in the shape of a T to ensure that it is stuck in the correct position before the second harder scraping begins.
2. Spray the window film **LIBERALLY** with application fluid before scraping. **NEVER** scratch on dry film.
3. Start by pulling the mounting scraper on the top of the film from the center out to the right and left. Press thoroughly!
4. Then pull the scraper from the center of the upper part to the center of the lower part to form a T. Press firmly!

7. Scrape the film

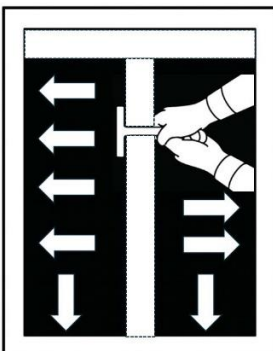

Press to activate the adhesive

1. Since the adhesive that attaches the film is pressure-activated, it is important that the entire film is thoroughly scraped with proper pressure.
2. If necessary, spray the window film again with application fluid.
3. Start at the top and press from the middle and out towards the edges all the way from top to bottom. Feel free to use both hands to get a proper pressure.
4. Spray the window film again with application fluid and repeat the scraping, especially carefully along the edges.
5. Wipe off any excess liquid with a cloth, especially carefully along the edges.

8. Done!



Keep in mind:

1. The glue will start to adhere after about 5 minutes. Until then, it is possible to tear off the film, but it cannot be reassembled.
2. The drying time is 10–30 days, depending on the temperature. Small water bubbles and mist formation may occur during the drying time, but this is completely normal and will disappear.
3. **DO NOT** wash the films for the first 30 days.
4. To wash the films, use a soft sponge, a little dish soap and lukewarm water. Wipe with a soft cloth, not with paper.