

FROM THE FOUNDER OF THE #VIKISEWS BRAND




Back in 2016, when I was working on my first set of sewing instructions, I was trying to write them in such a way that even a complete beginner could easily understand and use them to create their very first garment. These instructions laid the foundation for the Vikisews brand, its vision and its mission. I wanted to create modern patterns with the utmost detailed and clear instructions.

Now, with each new collection we are constantly improving our instructions, amending them and adding more relevant details. By the time the final product reaches you, our drafters, correctors, and editors would have spent weeks perfecting every word and every photograph. If you compile a few of our instructions together, you will get a sewing manual that will assist you in sewing all kinds of garments at any difficulty level.

And I would be very happy if these instructions helped you to turn your hobby into a lifelong passion... Enjoy the process! Create your ultimate dream wardrobe! Wear your garments proudly for years to come!

If you have any questions, please contact us at info@vikisews.com - we are always there to help.

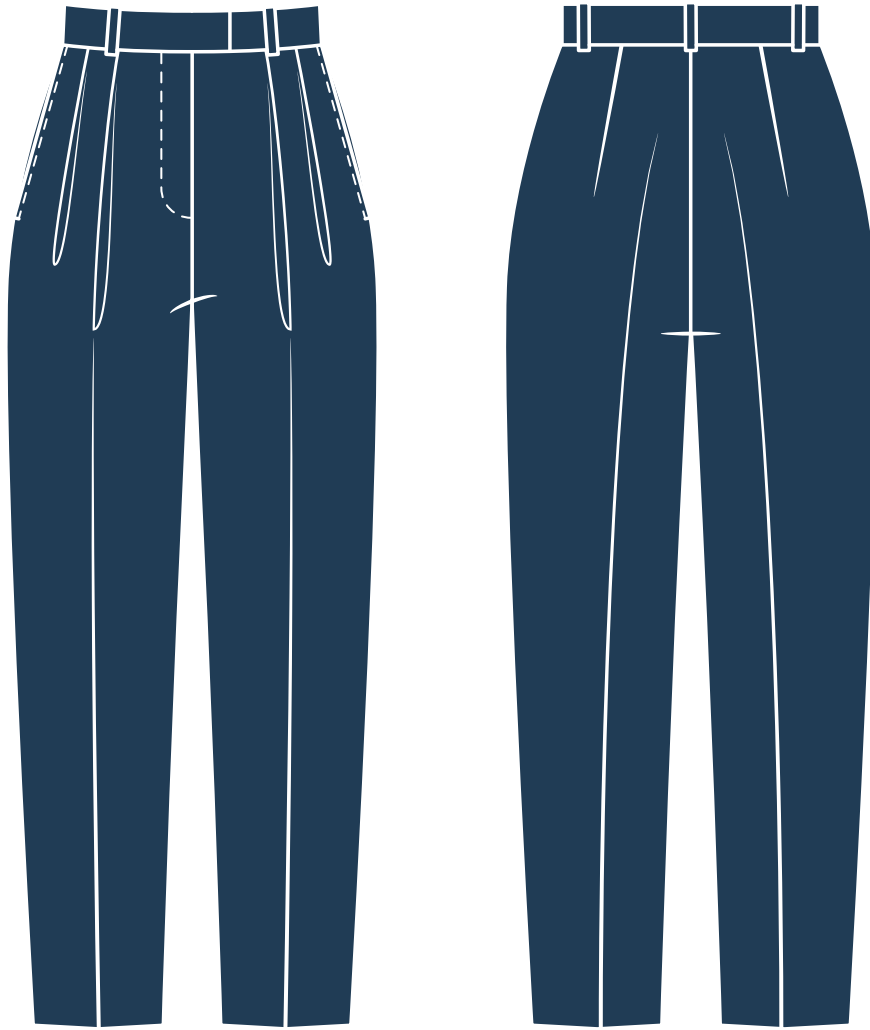

ADELINE PATTERN DESCRIPTION

Adeline is a pair of semi-fitted trousers with a straight silhouette, tapered towards the hem. The front features two soft pleats on each side at the waistline directed towards the center front, the back has waist darts, and both the front and back have pressed creases. Adeline has a fly front, the side seams have inseam pockets, the waistband has topstitched belt loops, its top edge sits on the natural waistline and it fastens with a hook and eye. Adeline is below ankle length.



IMPORTANT!

The contents of this pattern are copyright protected and belong exclusively to Vikisews. You may use Vikisews patterns for personal use. It is prohibited to share Vikisews patterns and instructions with third parties, as well as to publish patterns and instructions online for public access. **Non-compliance with the mentioned rules is a violation of the US copyright law and may result in civil liability and criminal prosecution.**

You may use Vikisews patterns for commercial use, to sew custom-made garments and/or create fashion collections, on the condition that the patterns are solely used in a manufacturing setting and are not further shared with individuals.

TOTAL EASE ALLOWANCE

Waistline ease, cm	Hipline ease, cm
5	20,4

GARMENT LENGTH

Height, cm	Garment length, cm
1 (154-160)	102
2 (162-168)	106
3 (170-176)	110
4 (178-184)	114

SUGGESTED FABRIC

To sew these trousers, choose thin, woven dress and suiting fabrics with the following properties:

- Medium weight, breathable, soft, non-stretch or with very little stretch, opaque
- The fiber content can include natural fibers (wool, silk, cotton, linen), artificial (viscose), blends (wool + silk, wool + polyester, cotton + viscose, etc), and synthetic (polyester, polyester + elastane)
- The following fabrics are recommended: dress-weight wool or denim, gabardine.

Attention! We do not recommend stretchy knit materials or lightweight sheer materials (chiffon, organza, stretch lace).

The trousers on the photo are made in a blend of viscose with polyester. This fabric is mediumweight, flexible, soft and has very little stretch. The pocket bags are made with 100% viscose lining.

TOOLS AND EQUIPMENT

- Sewing machine for construction
- Overlocker for finishing raw edges. This may be replaced with a stretch overlock stitch or a zigzag stitch on the sewing machine (overlock or zigzag stitch width 2-3mm, stitch length 2.5mm)
- Zipper foot for your sewing machine (optional)

PATTERN PIECES LIST

1. From main fabric:

- Front leg – cut 2
- Back leg – cut 2
- Waistband – cut 1
- Pocket bag – cut 2
- Fly shield – cut 1 on fold
- Belt loops – cut 1

2. From lining:

- Pocket bag – cut 2

Important! You may cut all the pocket bag pieces out of the main fabric, on the condition that it's not too thick and won't show through the trouser legs.

3. From interfacing:

- Waistband – cut 1
- Fly shield – cut 1 (full piece on one layer)
- Belt loop – cut 1
- Fly extension – cut 1

Additionally you will need to cut a 2cm wide strip of interfacing, cut along the selvedge, to reinforce the zipper area on the left front leg.

IMPORTANT!

Don't forget to transfer all pattern markings and notches onto the fabric.

SEAM ALLOWANCES

All pattern pieces include 1cm seam allowances. The hem allowance is 4cm. Take this into account when laying out pattern pieces on the fabric.



Press the creases on the front and back leg pieces.



On the wrong side of the back leg pieces, pin the darts along the markings. Baste, then stitch on the machine, starting at the wide end and going towards the tip. Backstitch at the beginning, tie knots at the end, and hide thread tails in the dart bulk using a needle.

Press the darts flat, then press towards the crotch seam. Shrink any excess formed at the dart point.



To finish the inseam pockets, place the lining pocket bag right sides together with the front leg, matching side edges and notches. Pin, baste, and stitch on the machine at 1cm from the edge, starting at the top garment edge and stopping at the bottom notch where the pocket opening ends. Backstitch at the beginning and end.

Press the seam flat, then press the seam allowances towards the pocket bag.



Place the main material pocket bag right sides together with the back leg. Align the side and top edges, match notches. Pin, baste, and stitch. Stitch from the top edge to the notch where the pocket opening ends. Press the seam flat, then press the seam allowances towards the pocket bag.